 





CH064SW/CH065SW/CH066SW/CH067SW Assembly Instructions

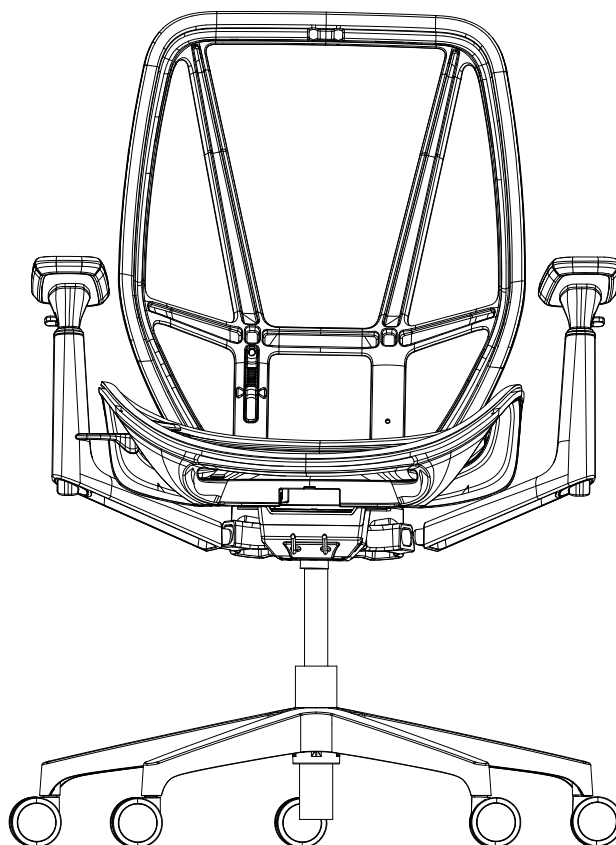


This manual is applicable to the installation of CH064SW/CH065SW/CH066SW/CH067SW.

Please read this manual carefully before use and keep it in a safe place.

 
Installation Notes

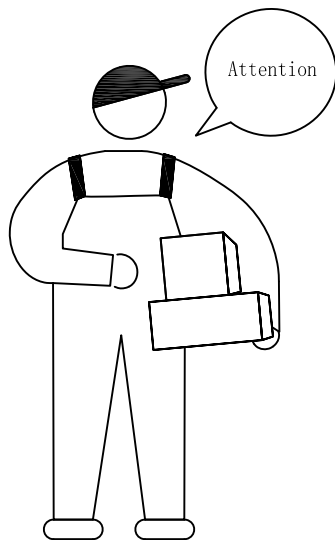

 
- ① Handle with care and use protective padding when necessary.

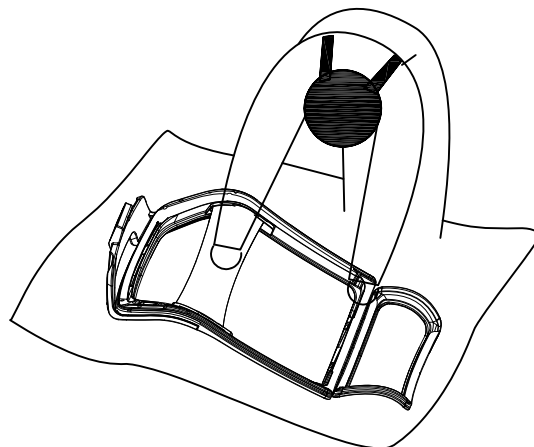

 - ② Secure transportation requires assistance from two persons.

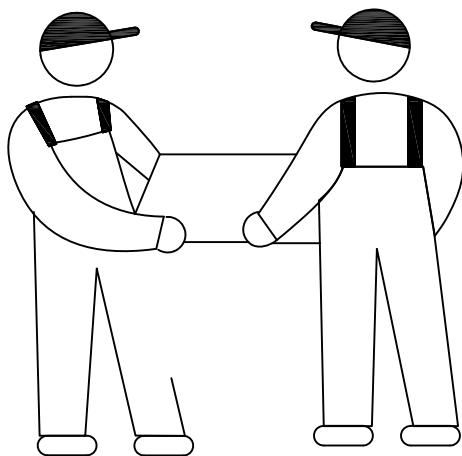


 - ③ For any inquiries, please contact Sunon.

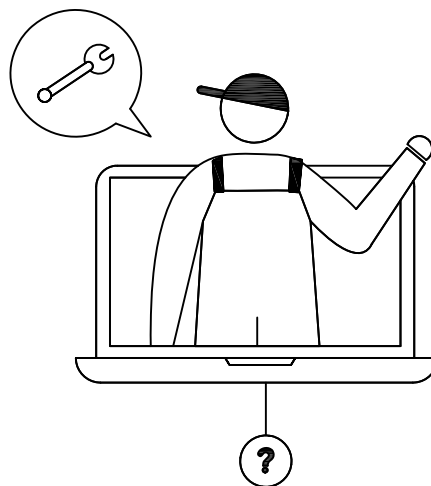




The manual indicates the components included with this product, with some parts considered as critical components.If the parts displayed here do not match your order, please contact Sunon at +86-400-8600-666.

 Exploded Diagram

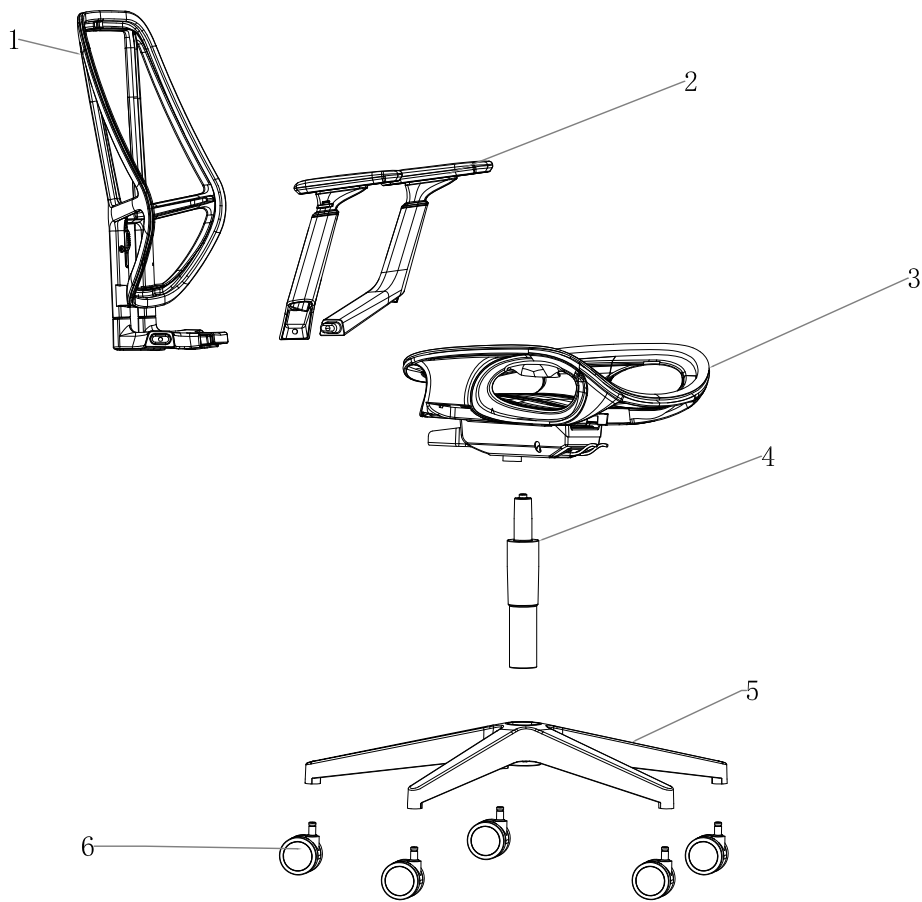




No	Name	Quantity
1	Chair Back	1
2	Seat Component	1
3	Armrest	2
4	Gas Cylinder	1
5	Five-Star Base	1
6	Chair Casters	5

  Accessory List

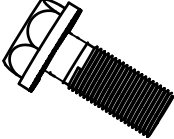A 			B 			C 		
hexagon screws	M8*16	3	three-in-one hexagon screws	M8*35	2	wrench	5#	1


1、Secure the assembled back and seat using M8*16 hexagon screws.

   
1

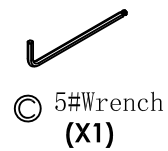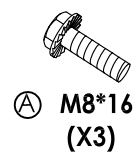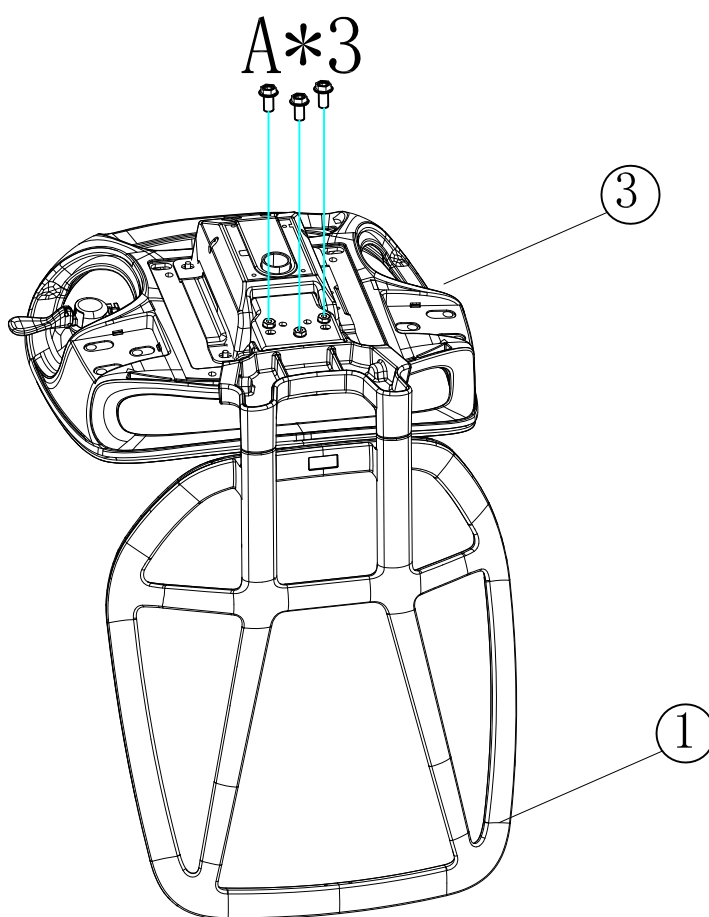


1、Armrest assembly is secured with M8 * 35 three in one internal and external hexagonal screws.

 2

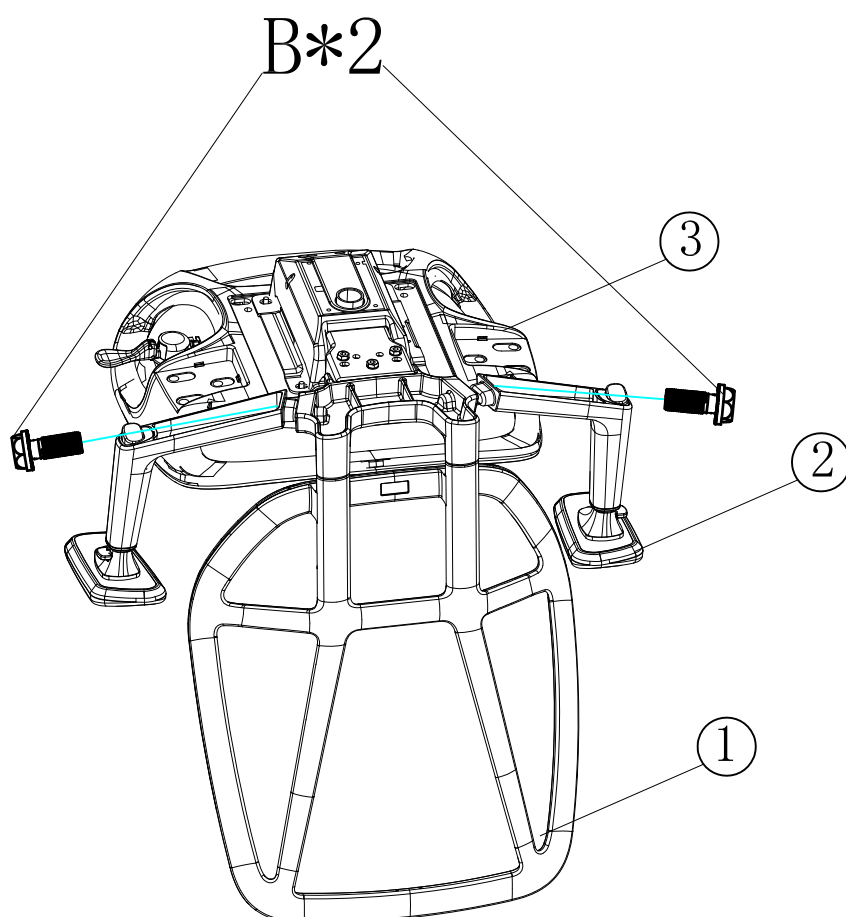



B M8*35
(X2)



C 5#Wrench
(X1)

1、Align the chair casters with the insertion holes on the five-star base. Insert the gas cylinder into the inner tube of the five-star base.

 3

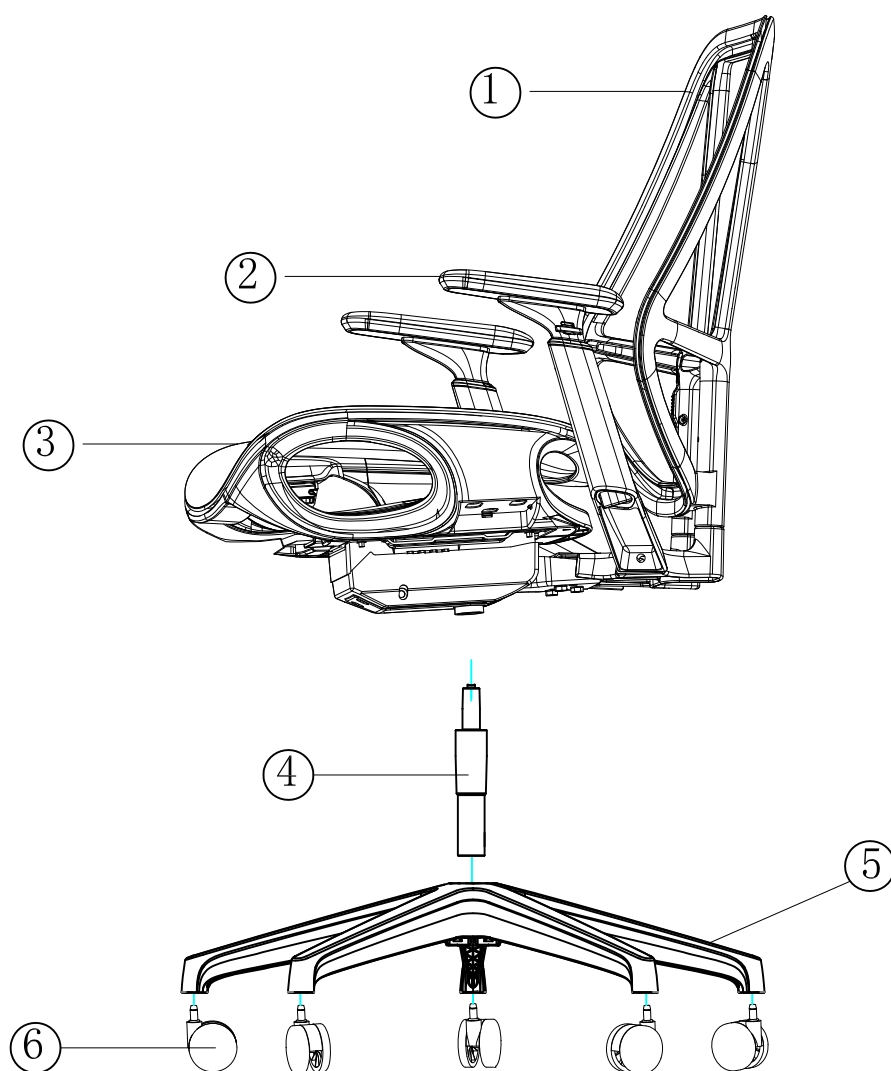

Done !

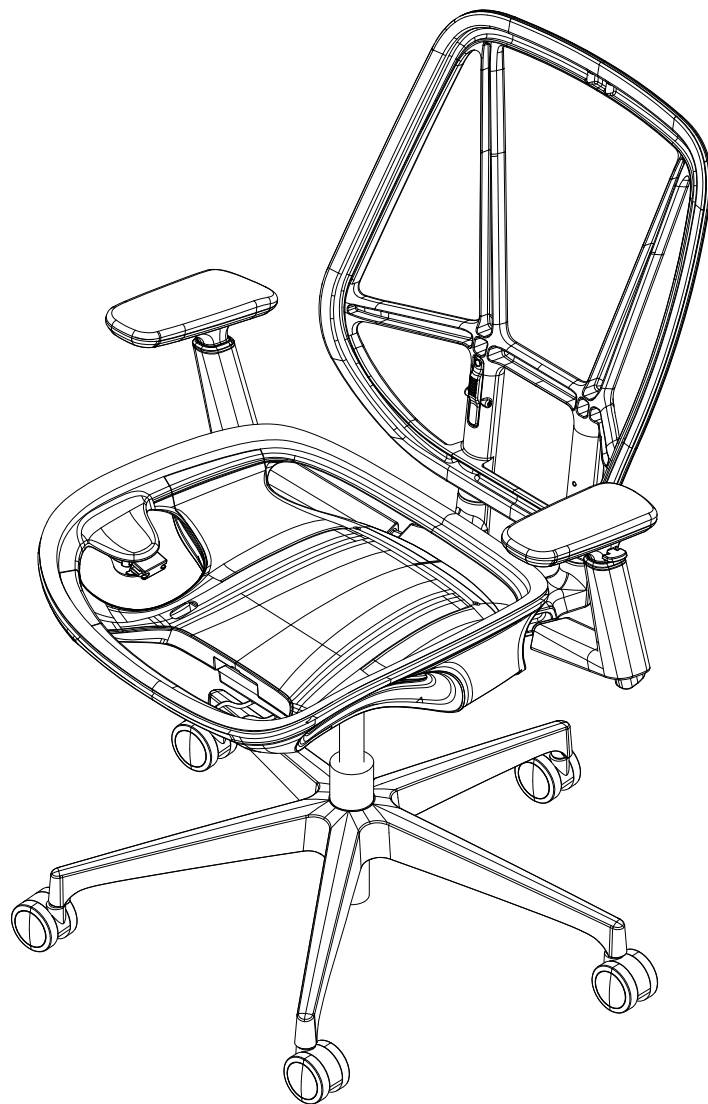 


Functional Description

1. Armrest function and seat back up and down adjustment

3D armrest with up and down lifting, forward and backward sliding, and left and right adjustment functions.

Sitting on the chair, press and hold the upper part of the lift button with the opposite hand

 to adjust the backrest up and down, and release the stop

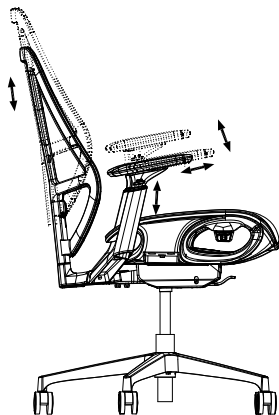

①

2. One-Touch Triple Control Mechanism

Center position: Vertical adjustment by lifting the integrated handle.

 
Backward position: Unlocking the recline by moving the handle backward, with center position for locking.

Forward position: Sliding the seat cushion by pushing the handle forward, with center position for locking.




②

Acceptance Notes

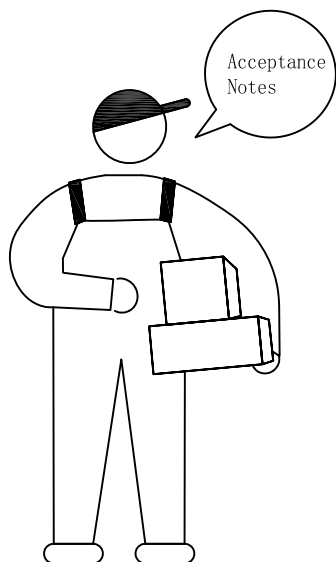


① Keep the product surface clean.

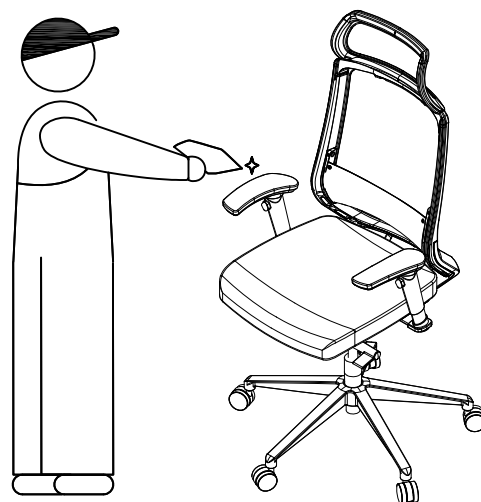 

② Keep the site clean after the installation.



 ③ Let the customer confirm the receipt.

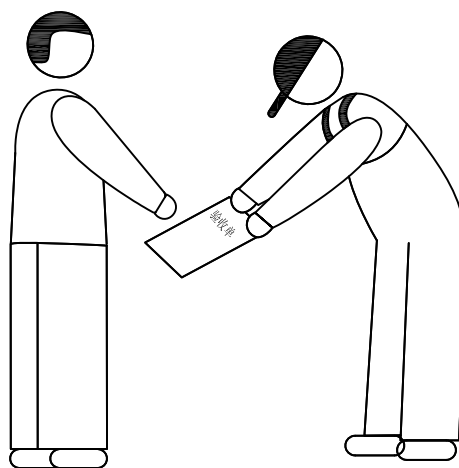




Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com





 
CH064SW/CH065SW/CH066SW/CH067SW Assembly Instructions

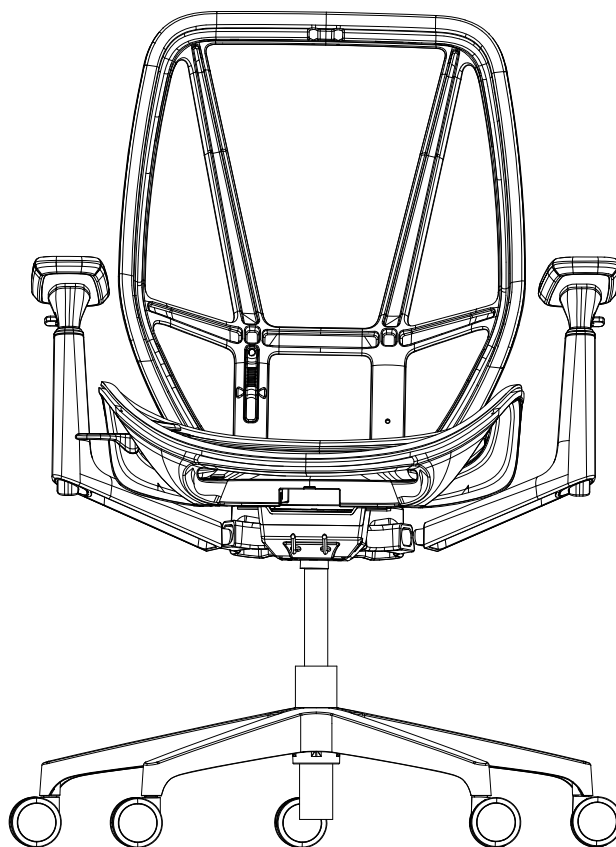


This manual is applicable to the installation of CH064SW/CH065SW/CH066SW/CH067SW.

Please read this manual carefully before use and keep it in a safe place.

 
Installation Notes

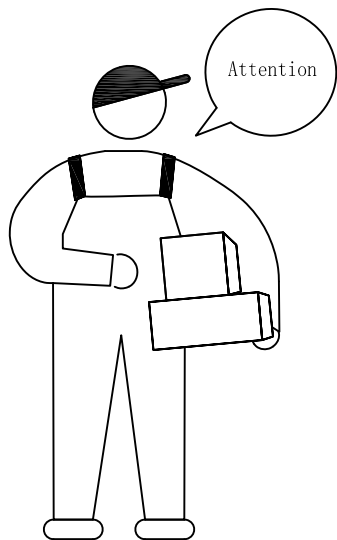

 
- ① Handle with care and use protective padding when necessary.

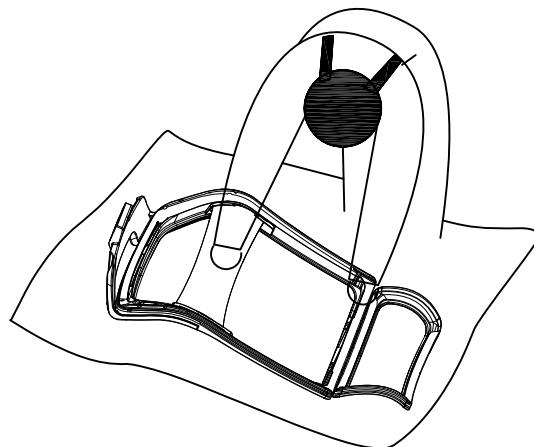

 - ② Secure transportation requires assistance from two persons.

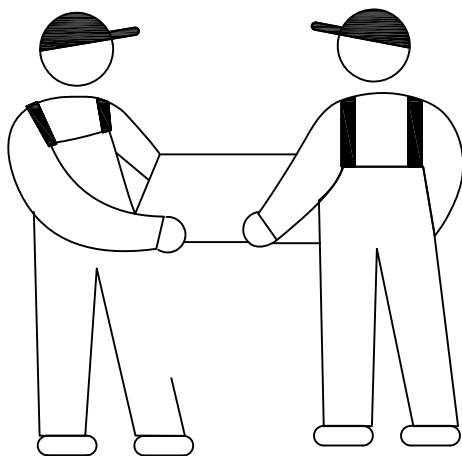


 - ③ For any inquiries, please contact Sunon.

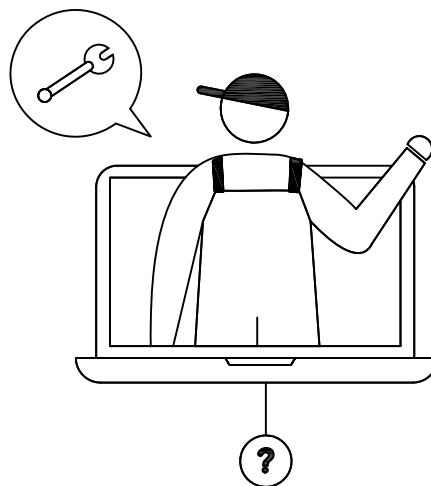




The manual indicates the components included with this product, with some parts considered as critical components.If the parts displayed here do not match your order, please contact Sunon at +86-400-8600-666.

 Exploded Diagram

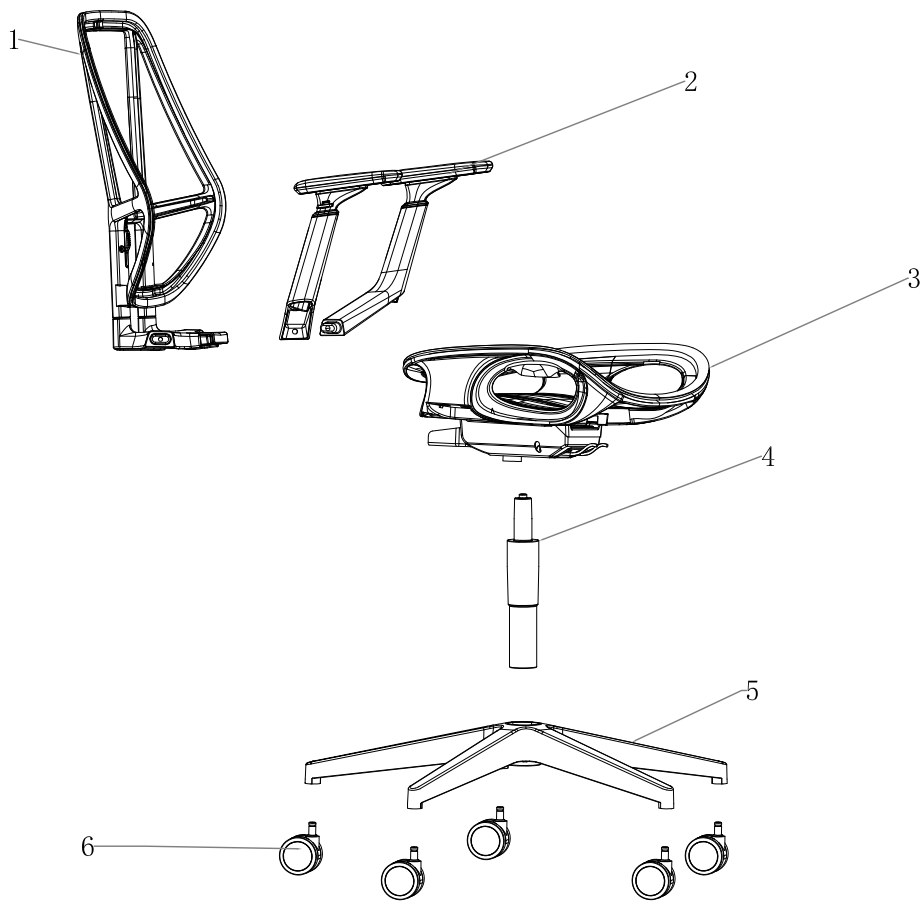




No	Name	Quantity
1	Chair Back	1
2	Seat Component	1
3	Armrest	2
4	Gas Cylinder	1
5	Five-Star Base	1
6	Chair Casters	5

  Accessory List

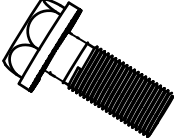A 			B 			C 		
hexagon screws	M8*16	3	three-in-one hexagon screws	M8*35	2	wrench	5#	1


1、Secure the assembled back and seat using M8*16 hexagon screws.

   
1

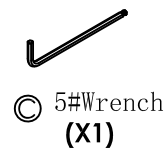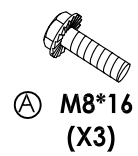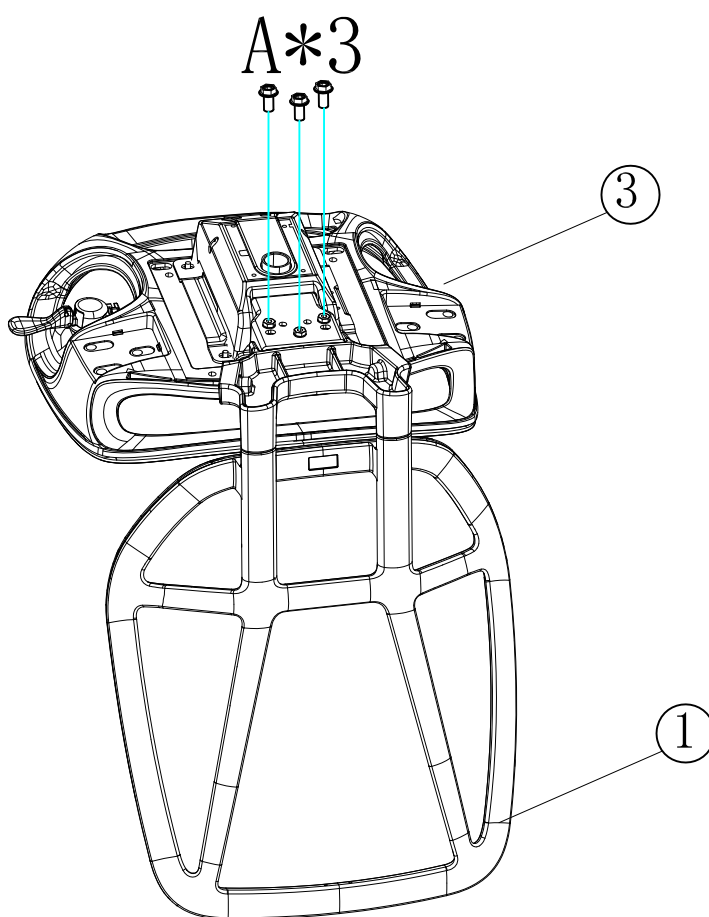


1、Armrest assembly is secured with M8 * 35 three in one internal and external hexagonal screws.

 2

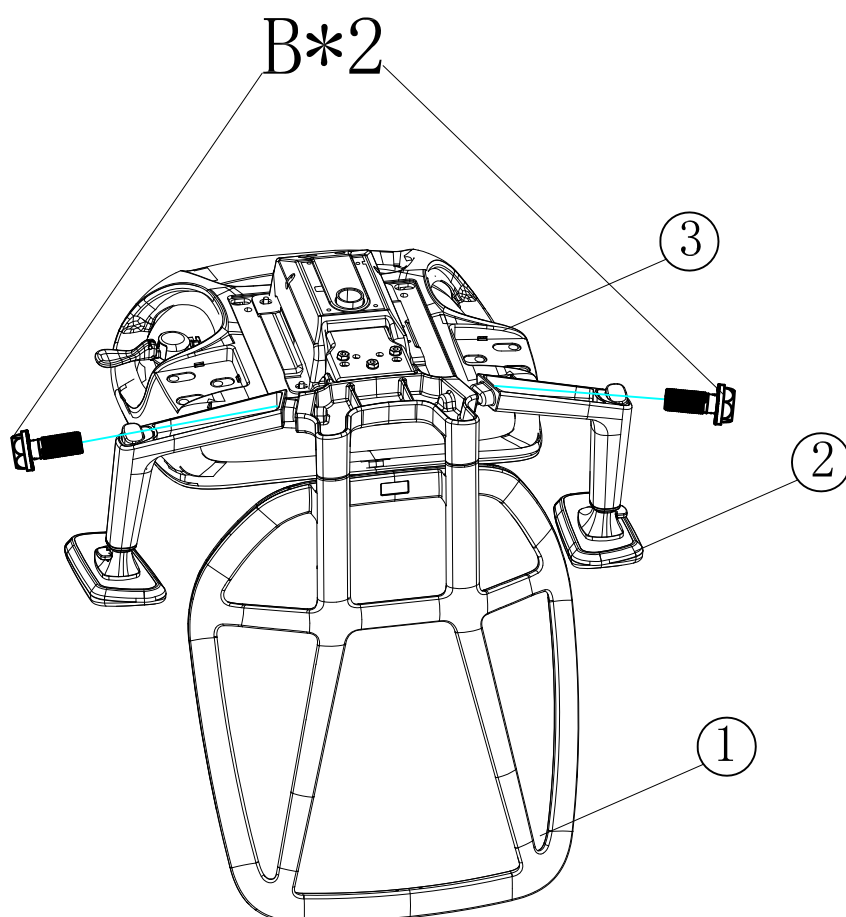



B M8*35
(X2)



C 5#Wrench
(X1)

1、Align the chair casters with the insertion holes on the five-star base. Insert the gas cylinder into the inner tube of the five-star base.

 3

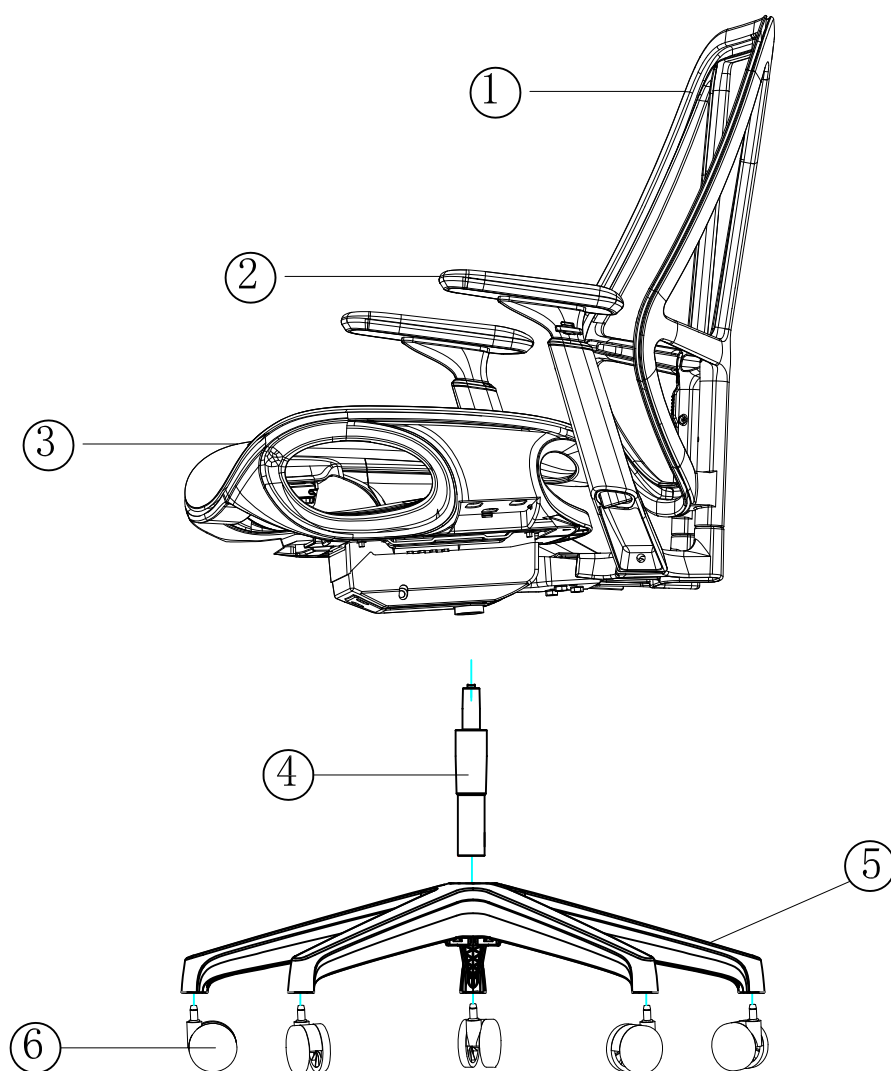

Done !

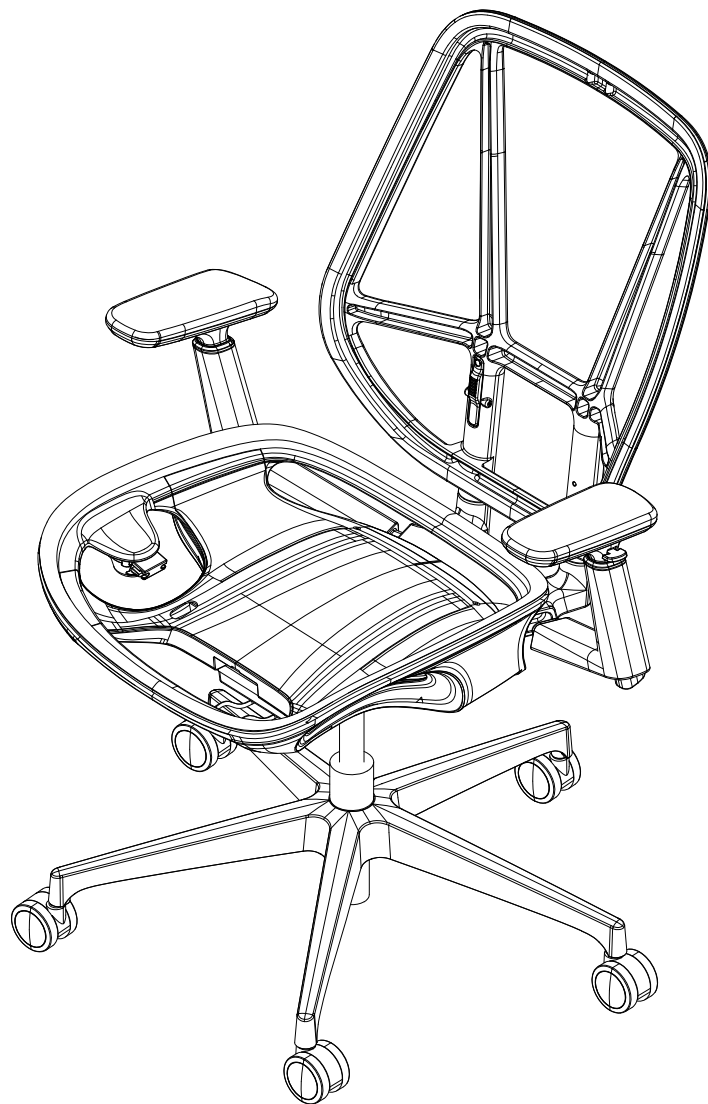 


Functional Description

1. Armrest function and seat back up and down adjustment

3D armrest with up and down lifting, forward and backward sliding, and left and right adjustment functions.

Sitting on the chair, press and hold the upper part of the lift button with the opposite hand

 to adjust the backrest up and down, and release the stop

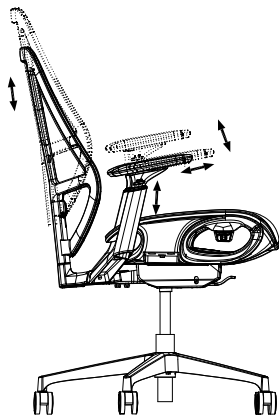

①

2. One-Touch Triple Control Mechanism

Center position: Vertical adjustment by lifting the integrated handle.

 
Backward position: Unlocking the recline by moving the handle backward, with center position for locking.

Forward position: Sliding the seat cushion by pushing the handle forward, with center position for locking.




②

Acceptance Notes

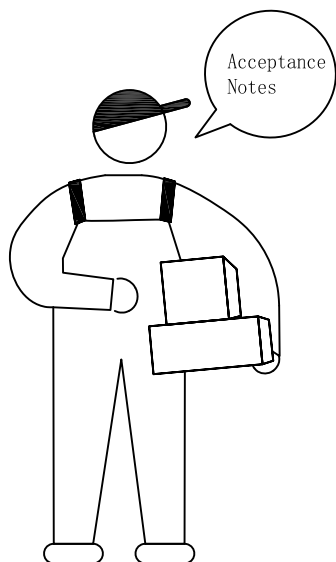


① Keep the product surface clean.

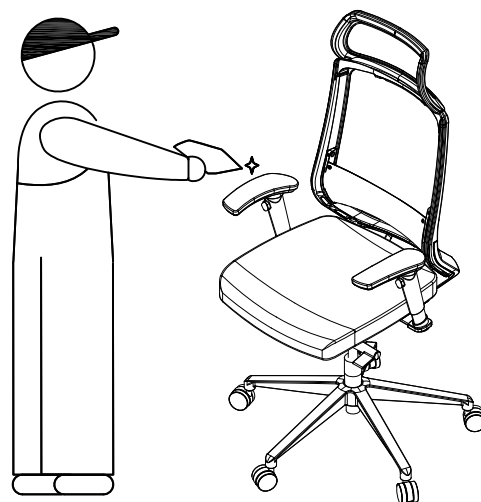 

② Keep the site clean after the installation.



 ③ Let the customer confirm the receipt.

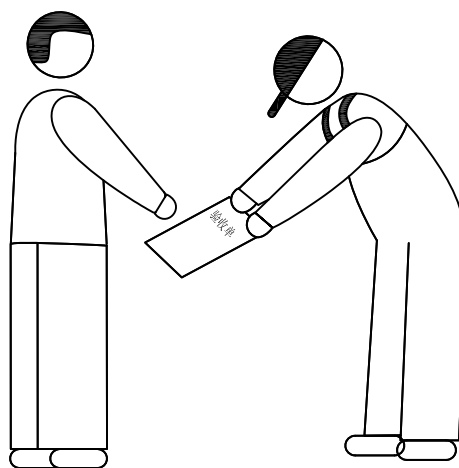




Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com





 
CH064SW/CH065SW/CH066SW/CH067SW Assembly Instructions

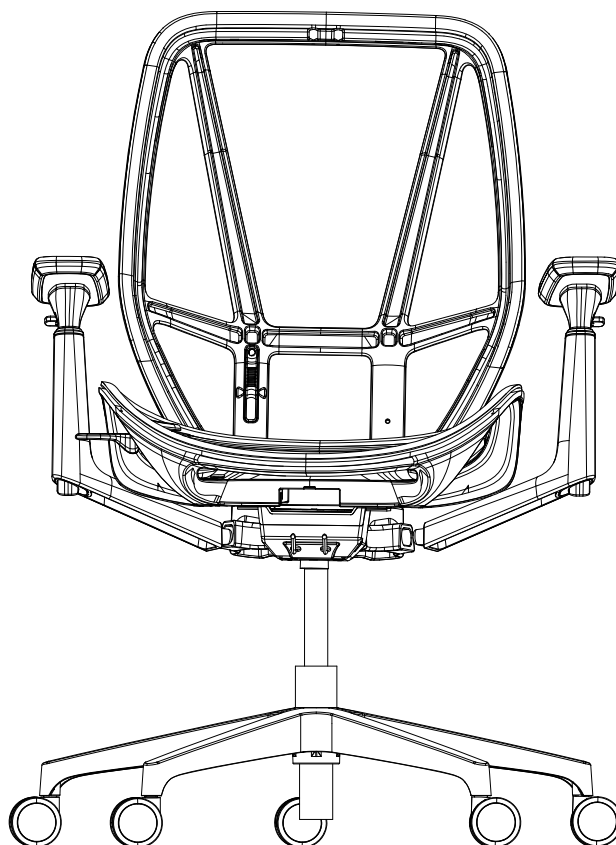


This manual is applicable to the installation of CH064SW/CH065SW/CH066SW/CH067SW.

Please read this manual carefully before use and keep it in a safe place.

 
Installation Notes

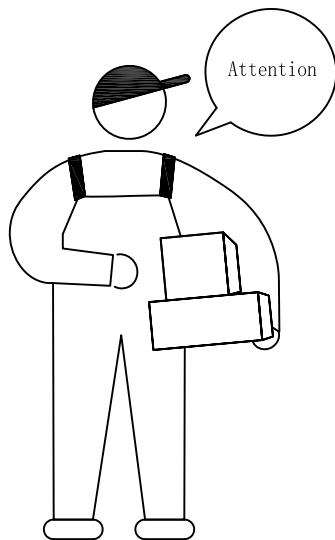

 
- ① Handle with care and use protective padding when necessary.

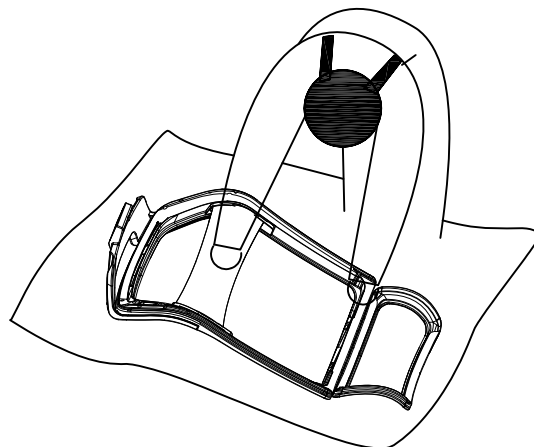

 - ② Secure transportation requires assistance from two persons.

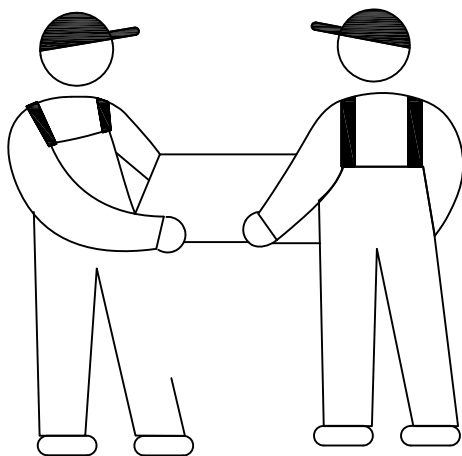


 - ③ For any inquiries, please contact Sunon.

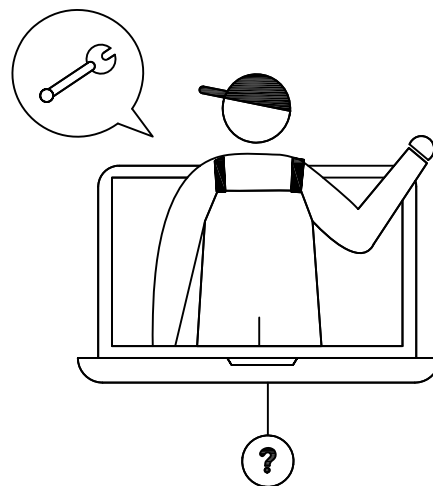




The manual indicates the components included with this product, with some parts considered as critical components.If the parts displayed here do not match your order, please contact Sunon at +86-400-8600-666.

 Exploded Diagram

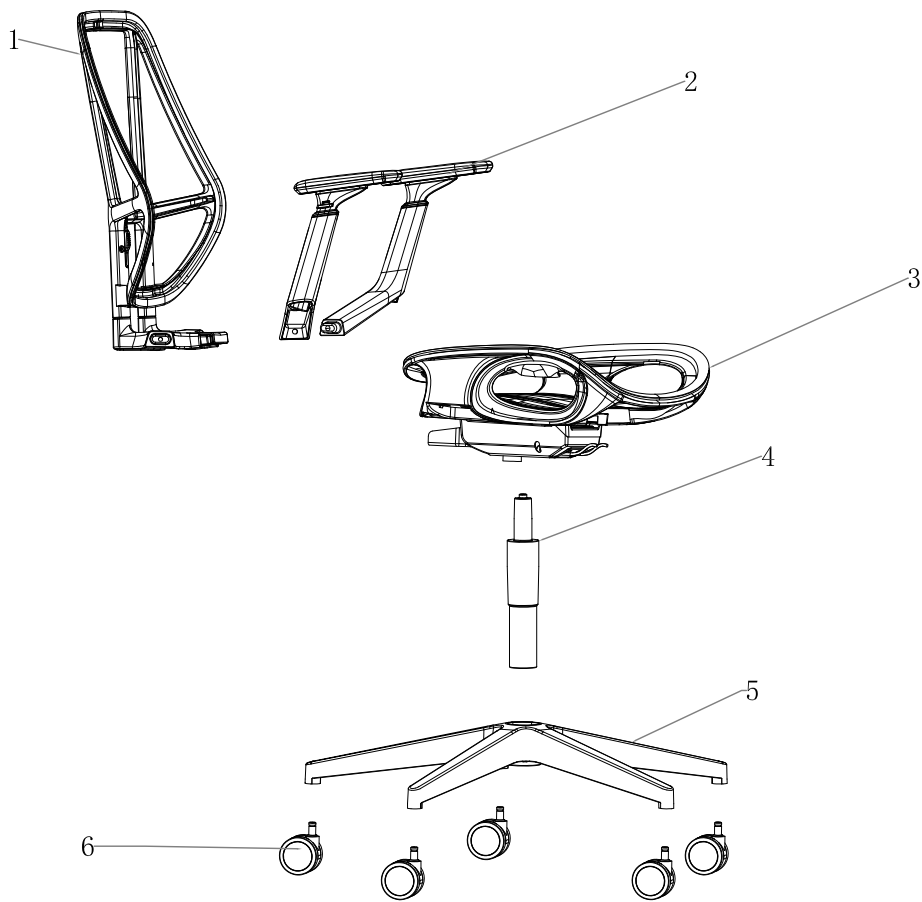




No	Name	Quantity
1	Chair Back	1
2	Seat Component	1
3	Armrest	2
4	Gas Cylinder	1
5	Five-Star Base	1
6	Chair Casters	5

  Accessory List

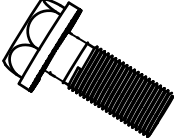A 			B 			C 		
hexagon screws	M8*16	3	three-in-one hexagon screws	M8*35	2	wrench	5#	1


1、Secure the assembled back and seat using M8*16 hexagon screws.

   
1

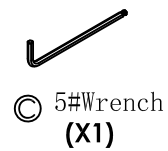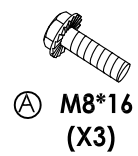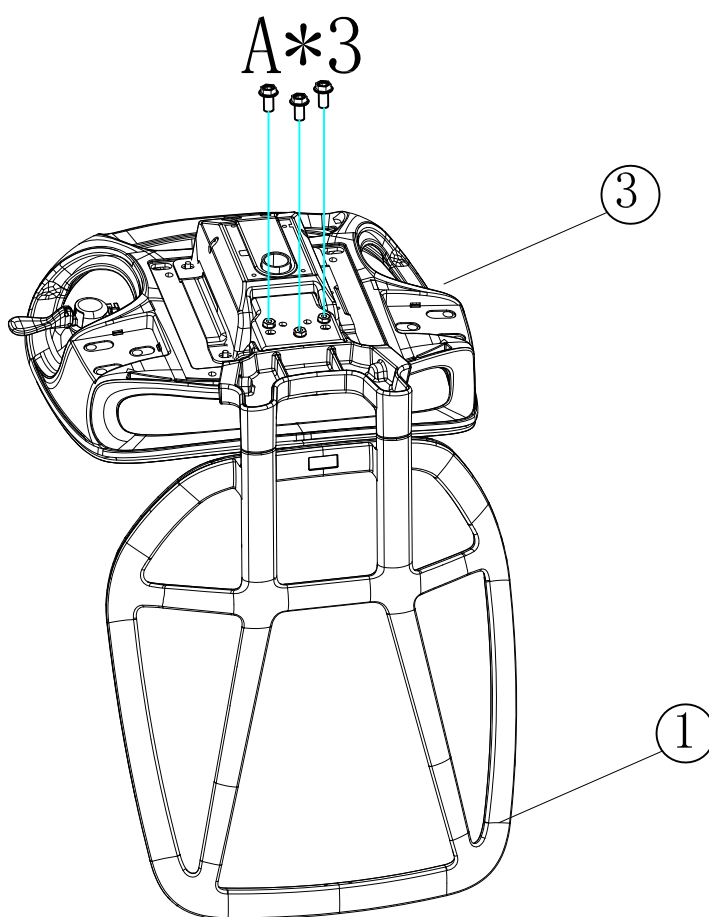


1、Armrest assembly is secured with M8 * 35 three in one internal and external hexagonal screws.

 2

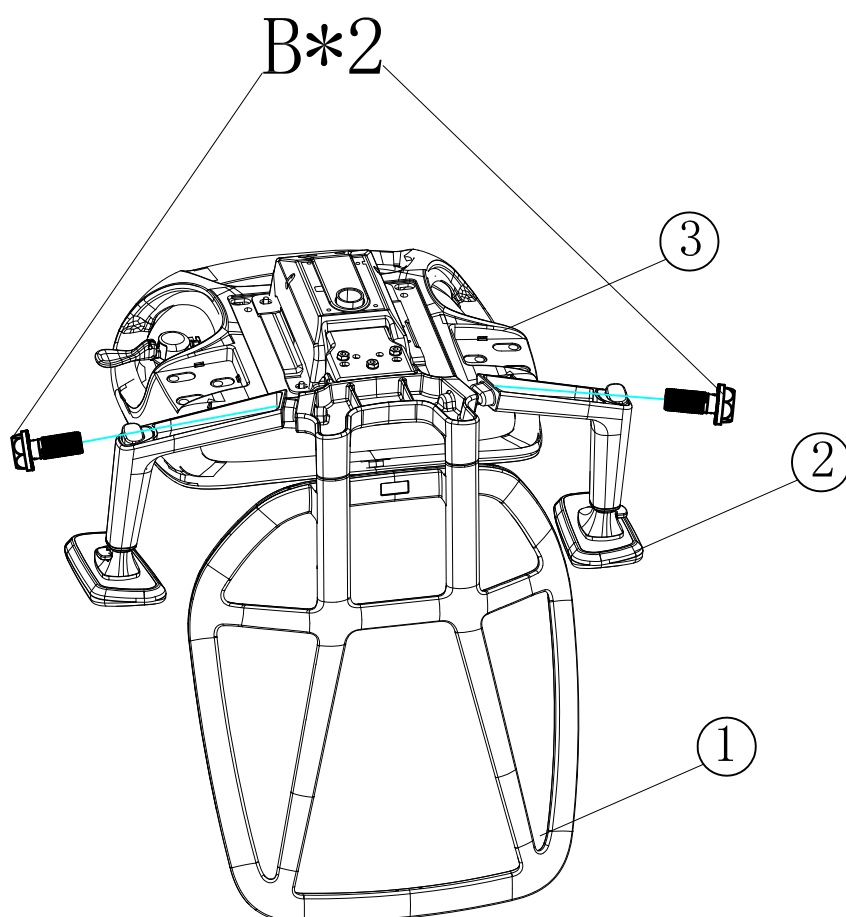



B M8*35
(X2)



C 5#Wrench
(X1)

1、Align the chair casters with the insertion holes on the five-star base. Insert the gas cylinder into the inner tube of the five-star base.

 3

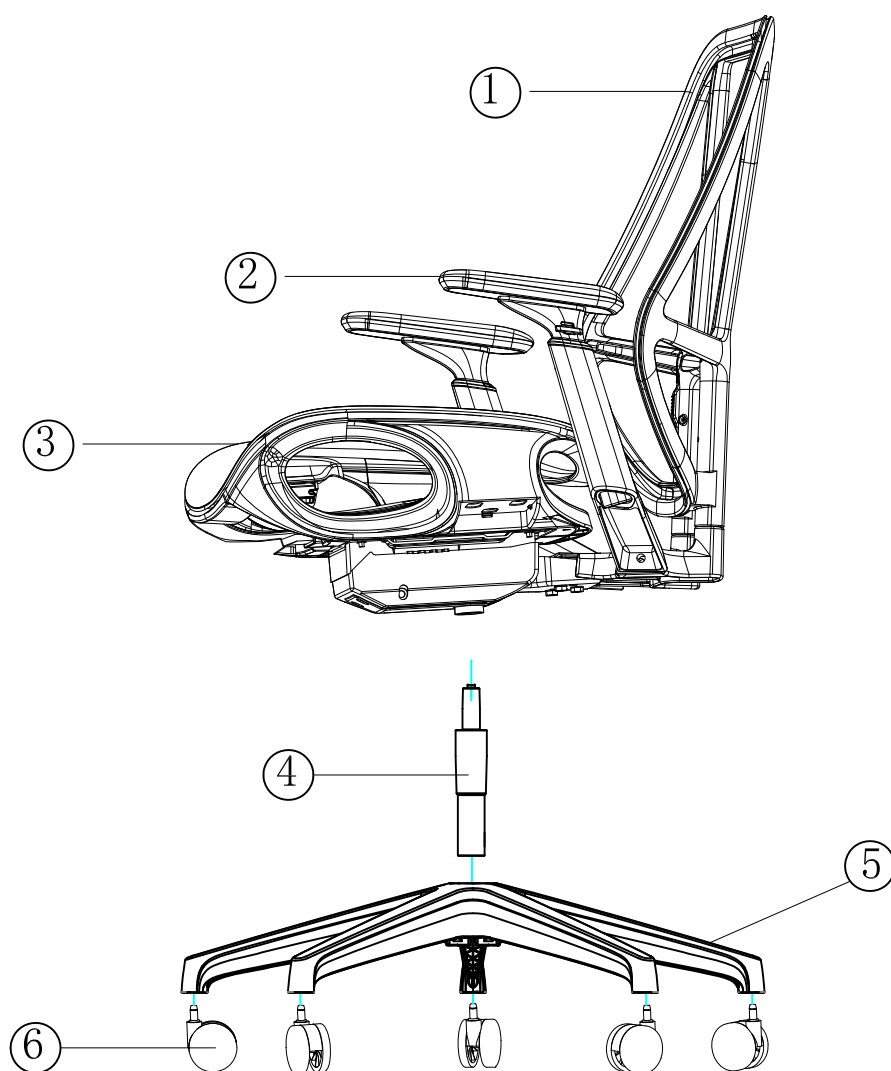

Done !

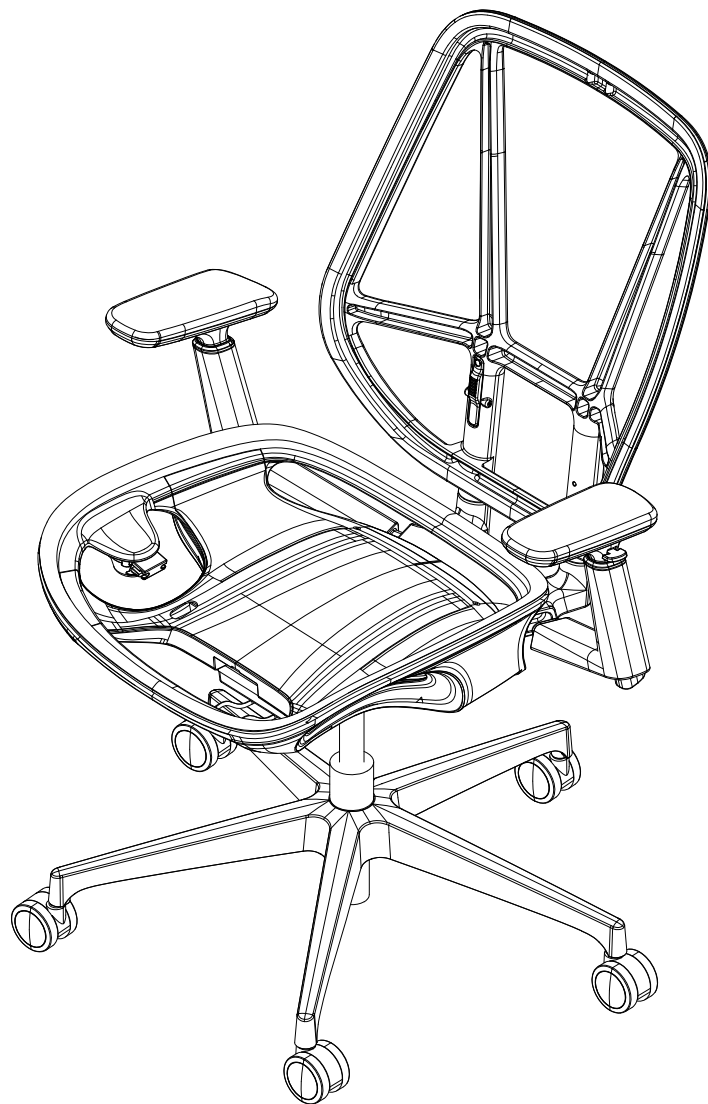 


Functional Description

1. Armrest function and seat back up and down adjustment

3D armrest with up and down lifting, forward and backward sliding, and left and right adjustment functions.

Sitting on the chair, press and hold the upper part of the lift button with the opposite hand

 to adjust the backrest up and down, and release the stop

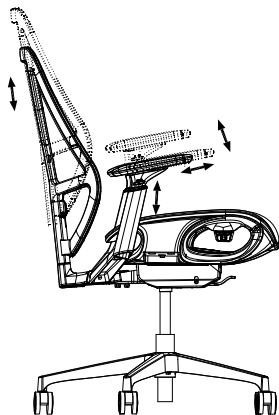

①

2. One-Touch Triple Control Mechanism

Center position: Vertical adjustment by lifting the integrated handle.

 
Backward position: Unlocking the recline by moving the handle backward, with center position for locking.

Forward position: Sliding the seat cushion by pushing the handle forward, with center position for locking.




②

Acceptance Notes

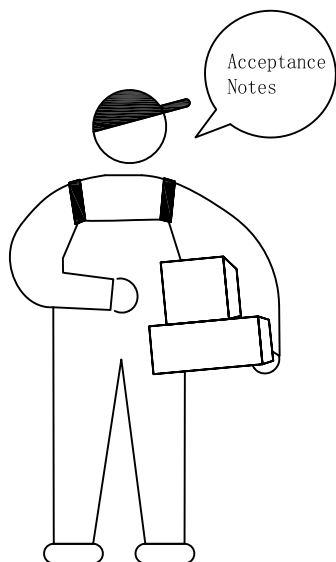


① Keep the product surface clean.

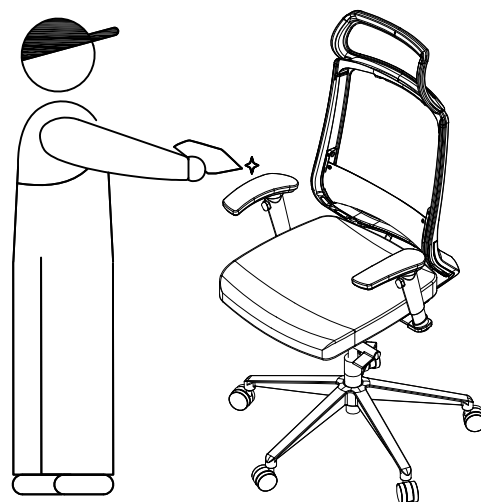 

② Keep the site clean after the installation.



 ③ Let the customer confirm the receipt.

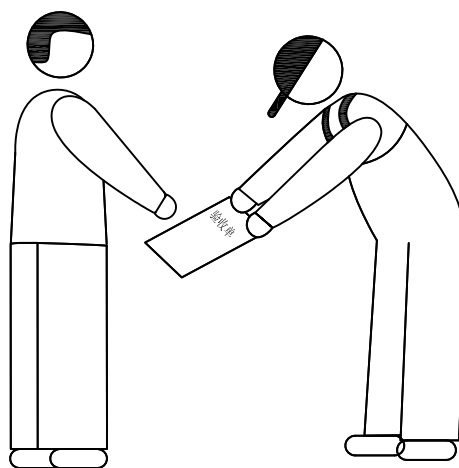




Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com





 
CH064SW/CH065SW/CH066SW/CH067SW Assembly Instructions

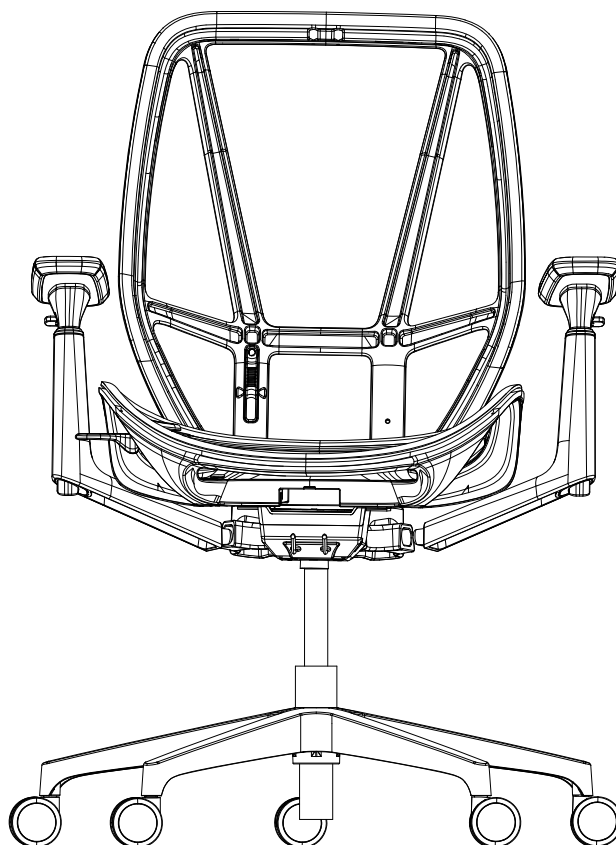


This manual is applicable to the installation of CH064SW/CH065SW/CH066SW/CH067SW.

Please read this manual carefully before use and keep it in a safe place.

 
Installation Notes

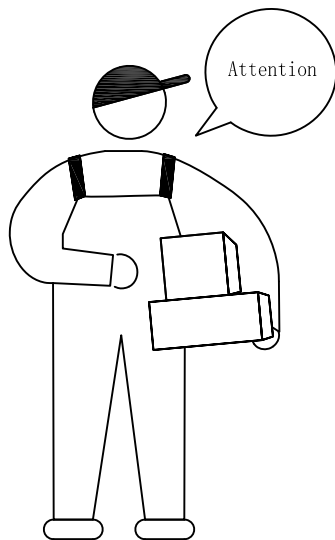

 
- ① Handle with care and use protective padding when necessary.

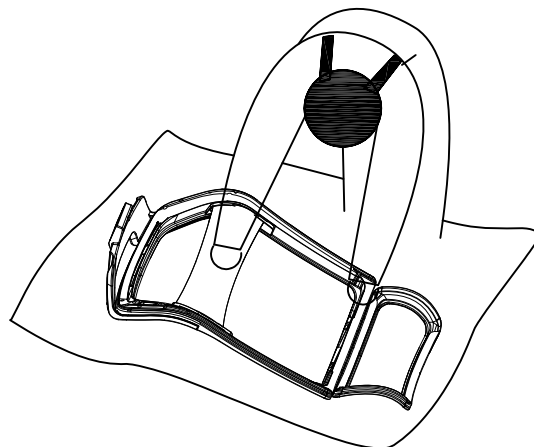

 - ② Secure transportation requires assistance from two persons.

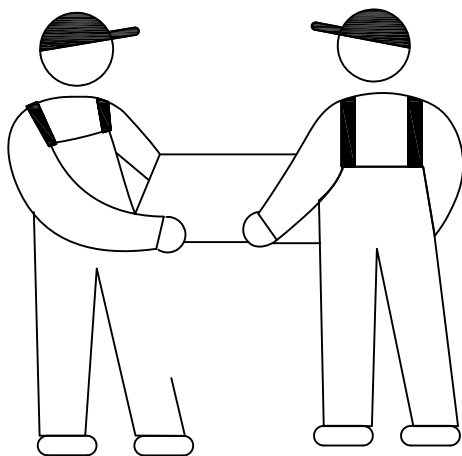


 - ③ For any inquiries, please contact Sunon.

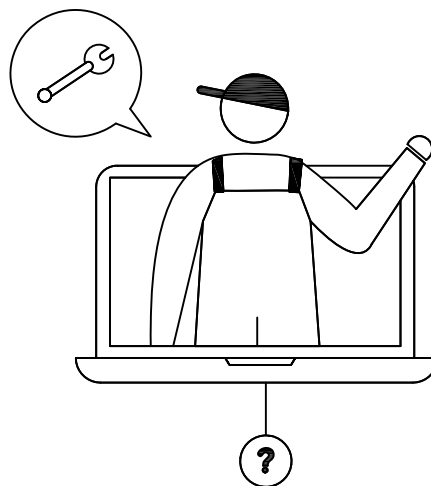




The manual indicates the components included with this product, with some parts considered as critical components.If the parts displayed here do not match your order, please contact Sunon at +86-400-8600-666.

 Exploded Diagram

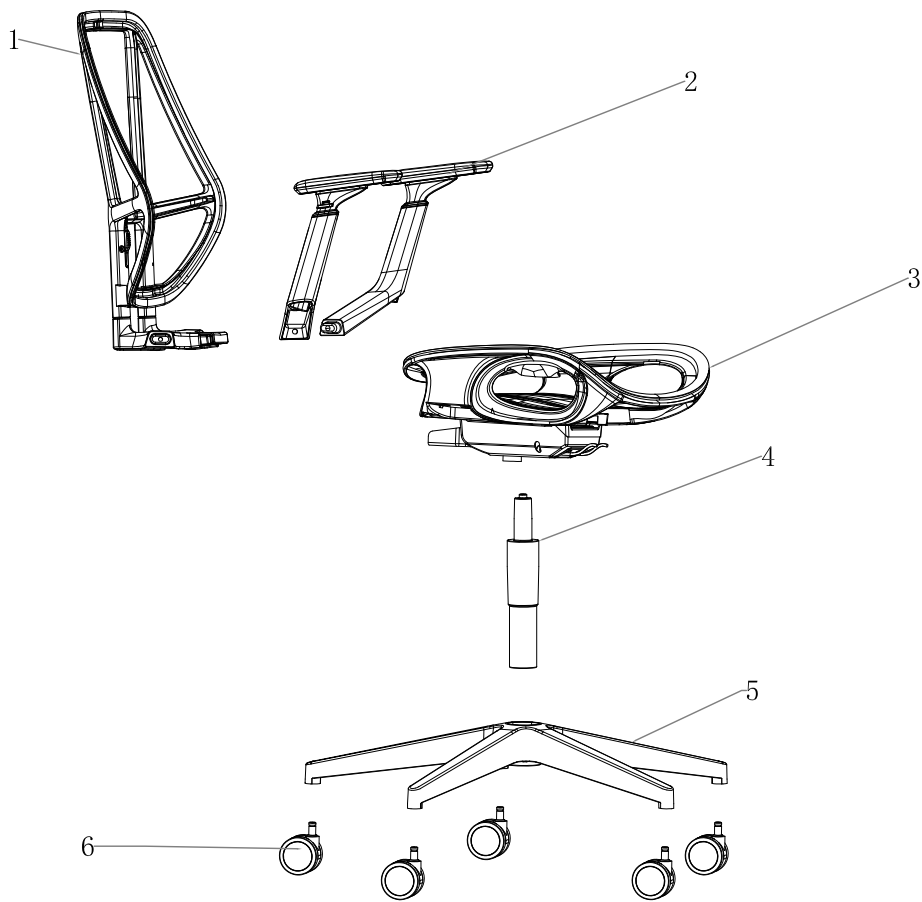




No	Name	Quantity
1	Chair Back	1
2	Seat Component	1
3	Armrest	2
4	Gas Cylinder	1
5	Five-Star Base	1
6	Chair Casters	5

  Accessory List

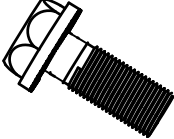A 			B 			C 		
hexagon screws	M8*16	3	three-in-one hexagon screws	M8*35	2	wrench	5#	1


1、Secure the assembled back and seat using M8*16 hexagon screws.

   
1

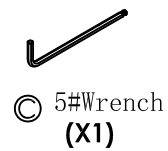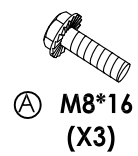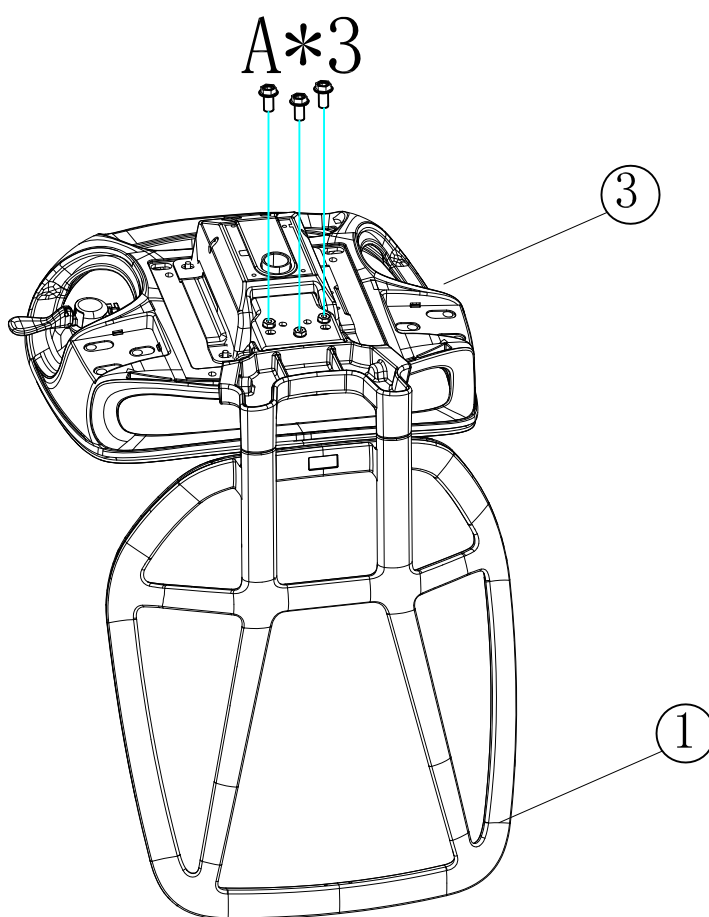


1、Armrest assembly is secured with M8 * 35 three in one internal and external hexagonal screws.

 2

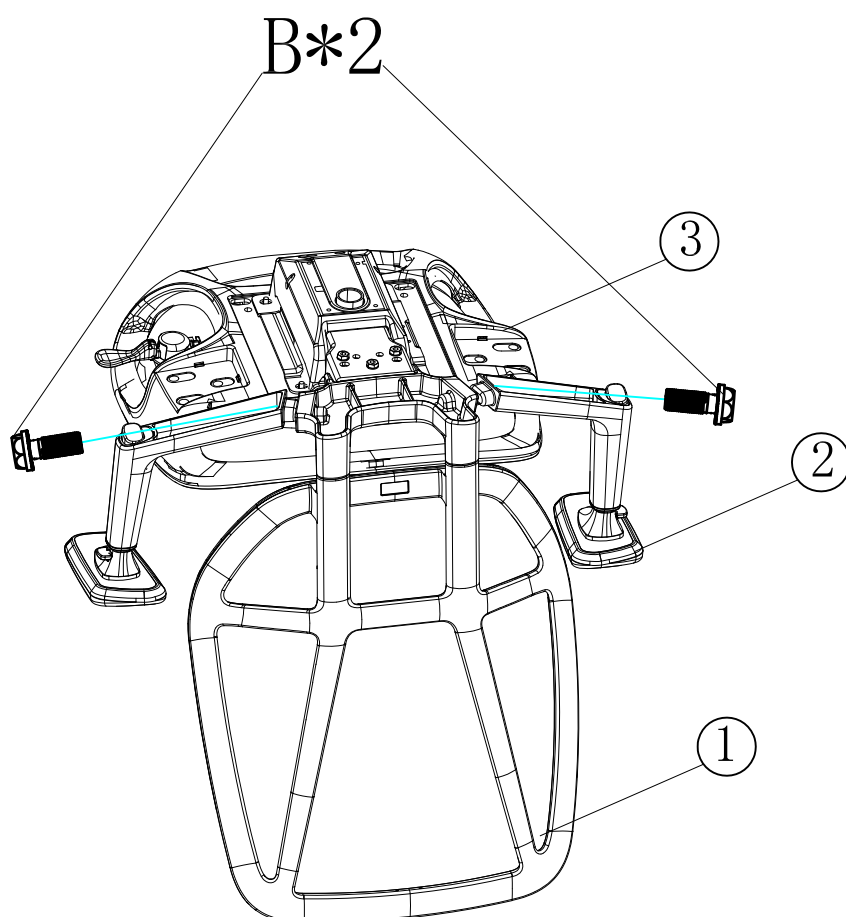



B M8*35
(X2)



C 5#Wrench
(X1)

1、Align the chair casters with the insertion holes on the five-star base. Insert the gas cylinder into the inner tube of the five-star base.

 3

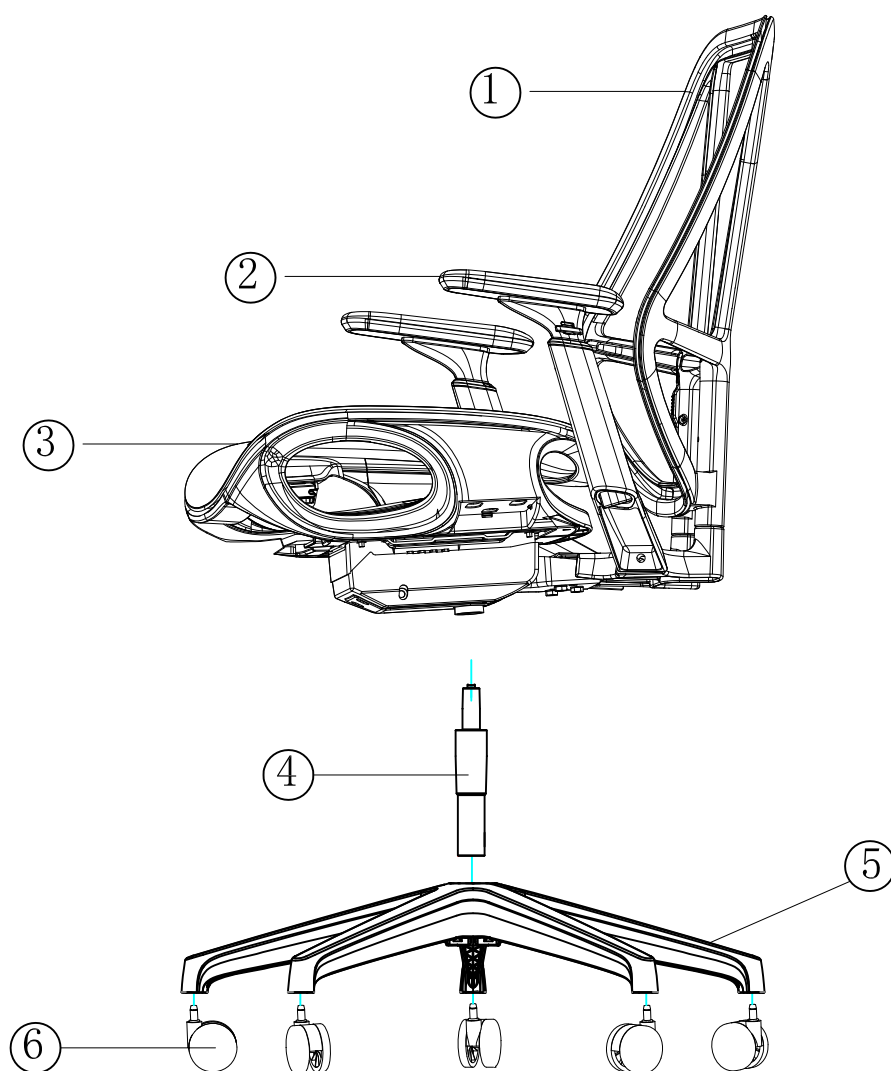


Done !

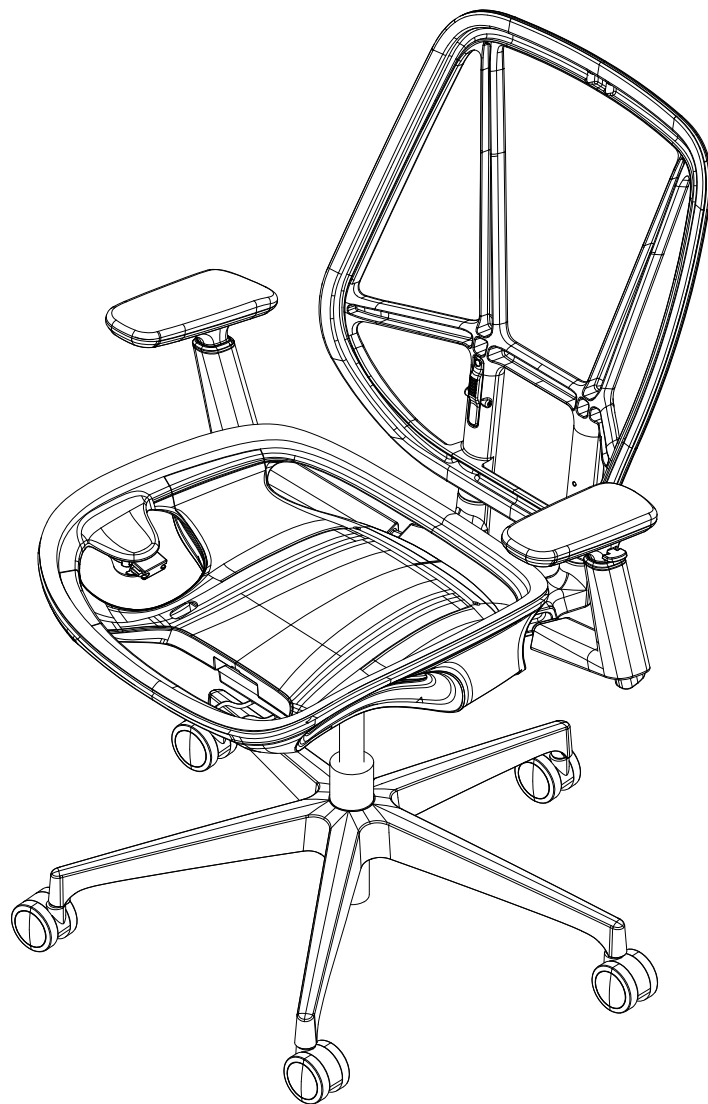 

Functional Description

 1. Armrest function and seat back up and down adjustment
3D armrest with up and down lifting, forward and backward sliding, and left and right adjustment functions.
Sitting on the chair, press and hold the upper part of the lift button with the opposite hand to adjust the backrest up and down, and release the stop

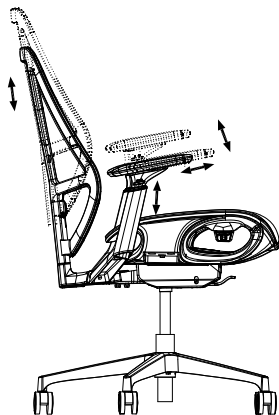


①

2. One-Touch Triple Control Mechanism
Center position: Vertical adjustment by lifting the integrated handle. Backward position: Unlocking the recline by moving the handle backward, with center position for locking. Forward position: Sliding the seat cushion by pushing the handle forward, with center position for locking.




②

 Acceptance Notes

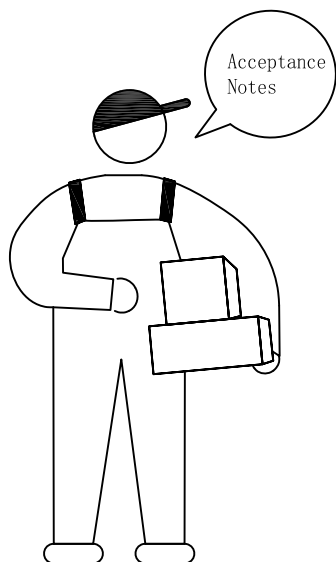


① Keep the product surface clean.

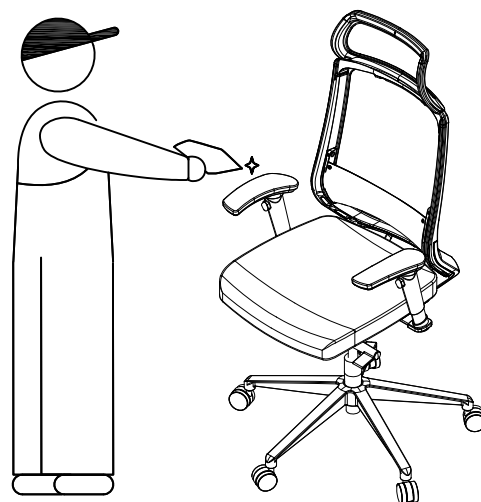 

② Keep the site clean after the installation.



 ③ Let the customer confirm the receipt.

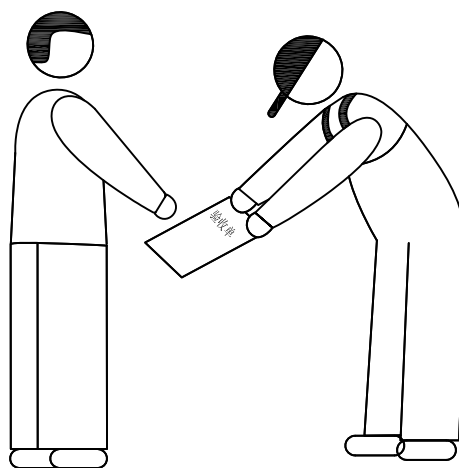




Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com





 
CH084SW/CH085SW/CH086SW/CH087SW Assembly Instructions

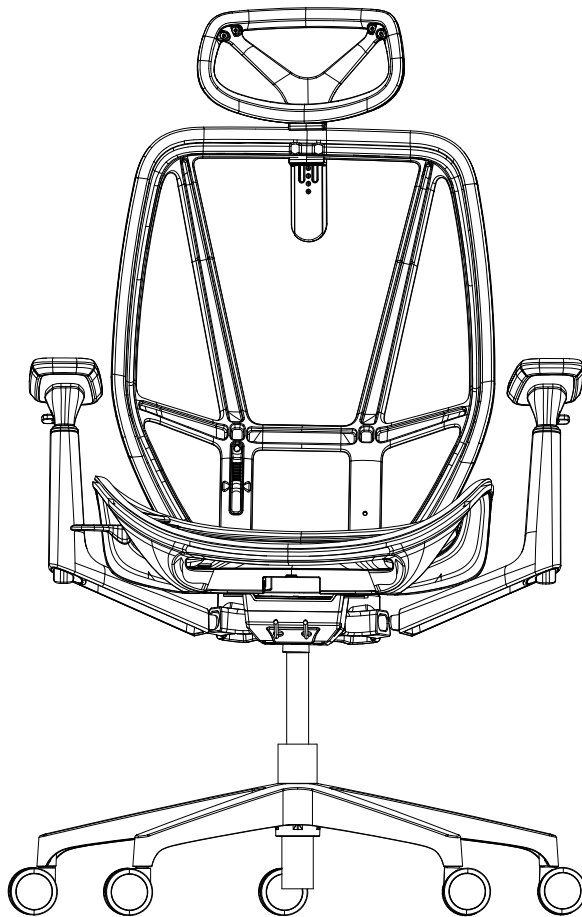


This manual is applicable to the installation of CH084SW/CH085SW/CH086SW/CH087SW.

Please read this manual carefully before use and keep it in a safe place.

 
Installation Notes

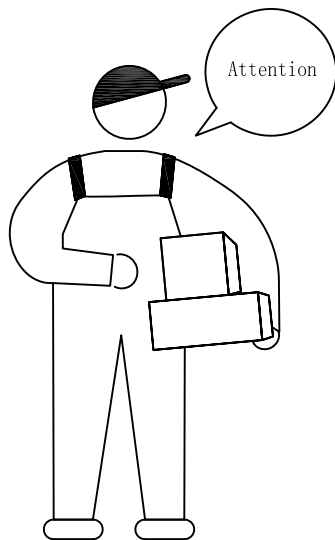

 
- ① Handle with care and use protective padding when necessary.

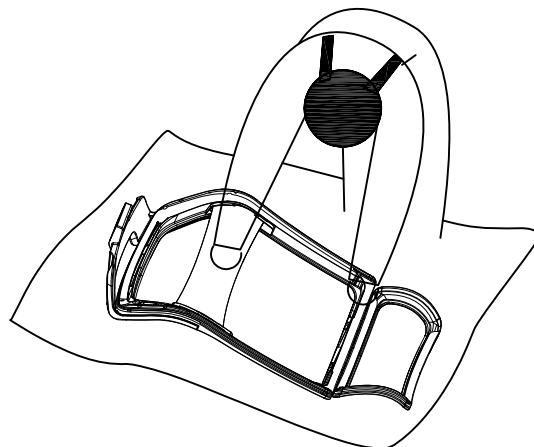

 - ② Secure transportation requires assistance from two persons.

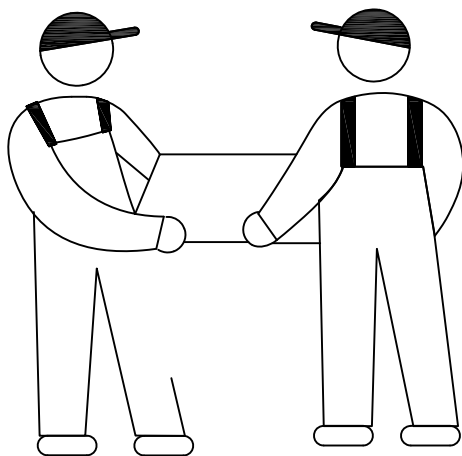


 - ③ For any inquiries, please contact Sunon.

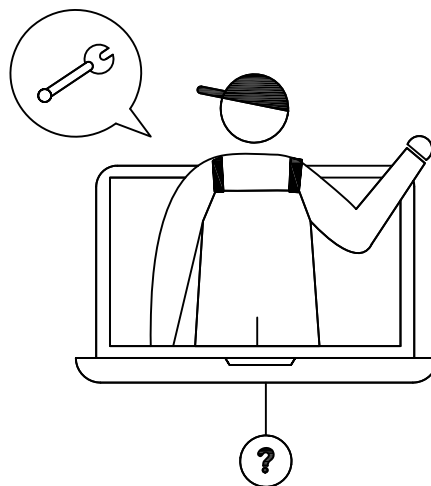





The manual indicates the components included with this product, with some parts considered as critical components.If the parts displayed here do not match your order, please contact Sunon at +86-400-8600-666.

 Exploded Diagram

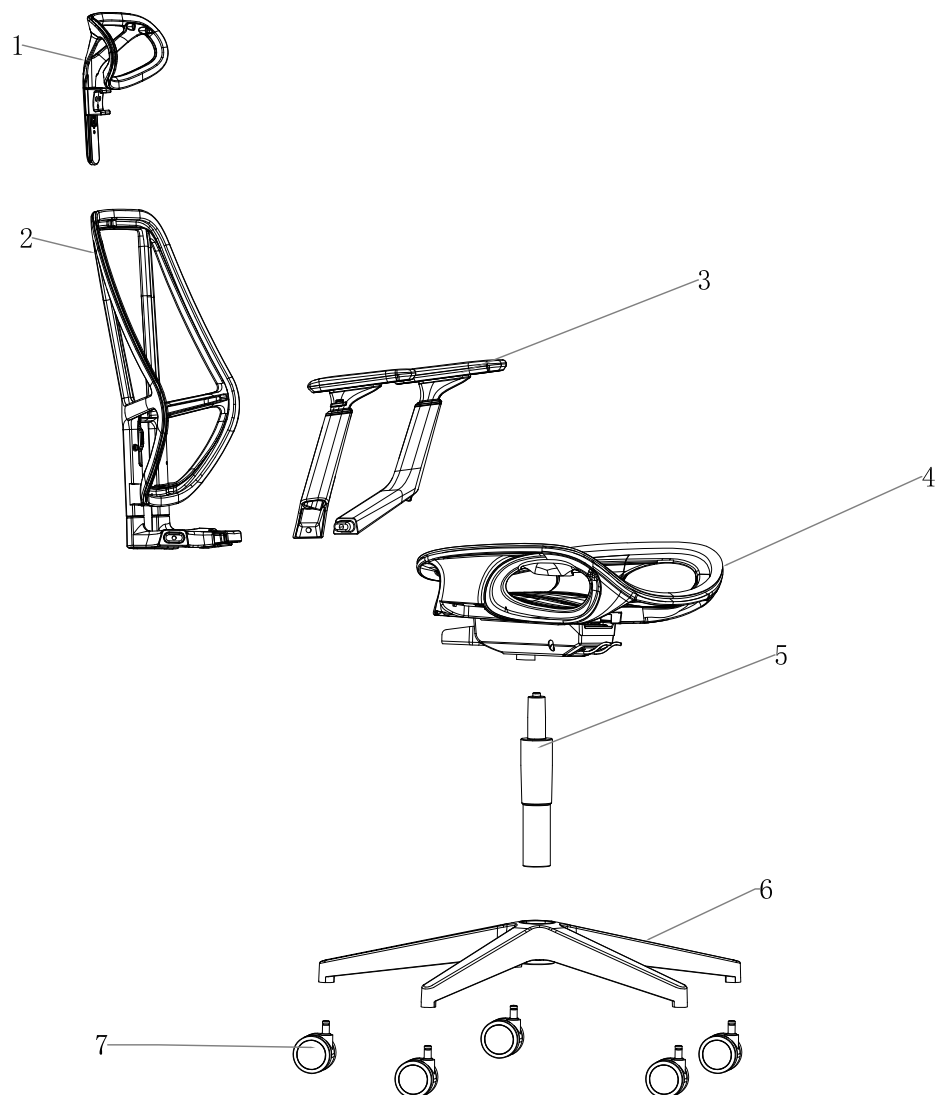




No	Name	Quantity
1	Headrest	1
2	Chair Back	1
3	Seat Component	1
4	Armrest	2
5	Gas Cylinder	1
6	Five-Star Base	1
7	Chair Casters	5

   Accessory List
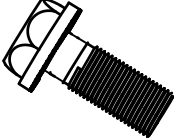
<div>A</div>			<div>B</div>			<div>C</div>		
hexagon screws	M8*16	3	three-in-one hexagon screws	M8*35	2	Coarse Thread Self-tapping Screw	ST4*18	2
<div>D</div>								
wrench	5#	1						


1、Secure the assembled back and seat using M8*16 hexagon screws.

   1

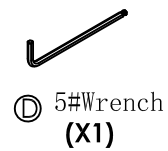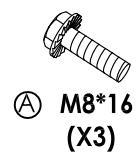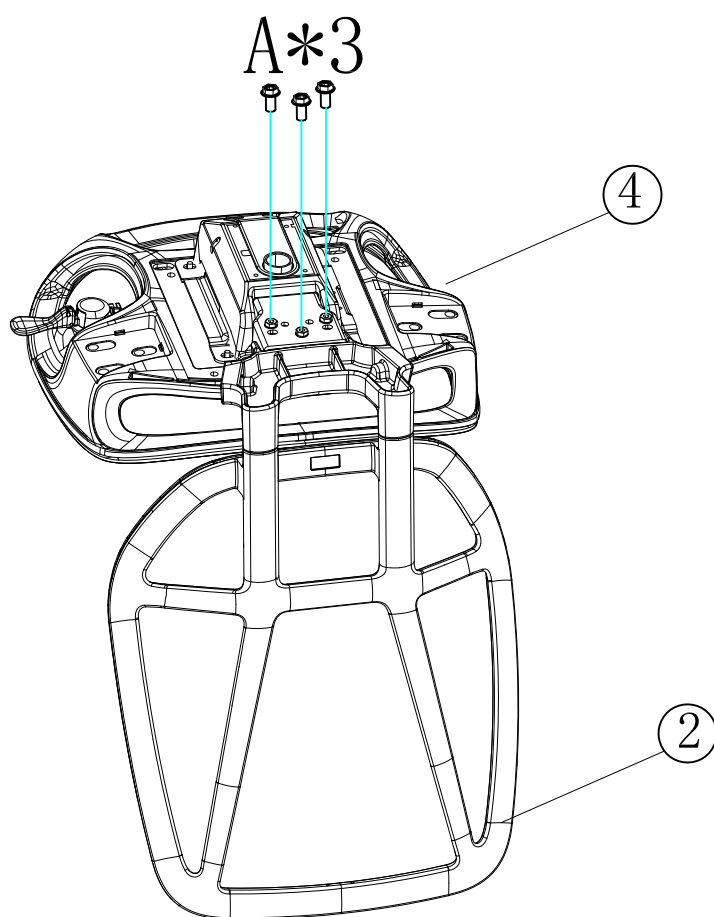

1、Armrest assembly is secured with M8 * 35 three in one internal and external hexagonal screws.

 
2

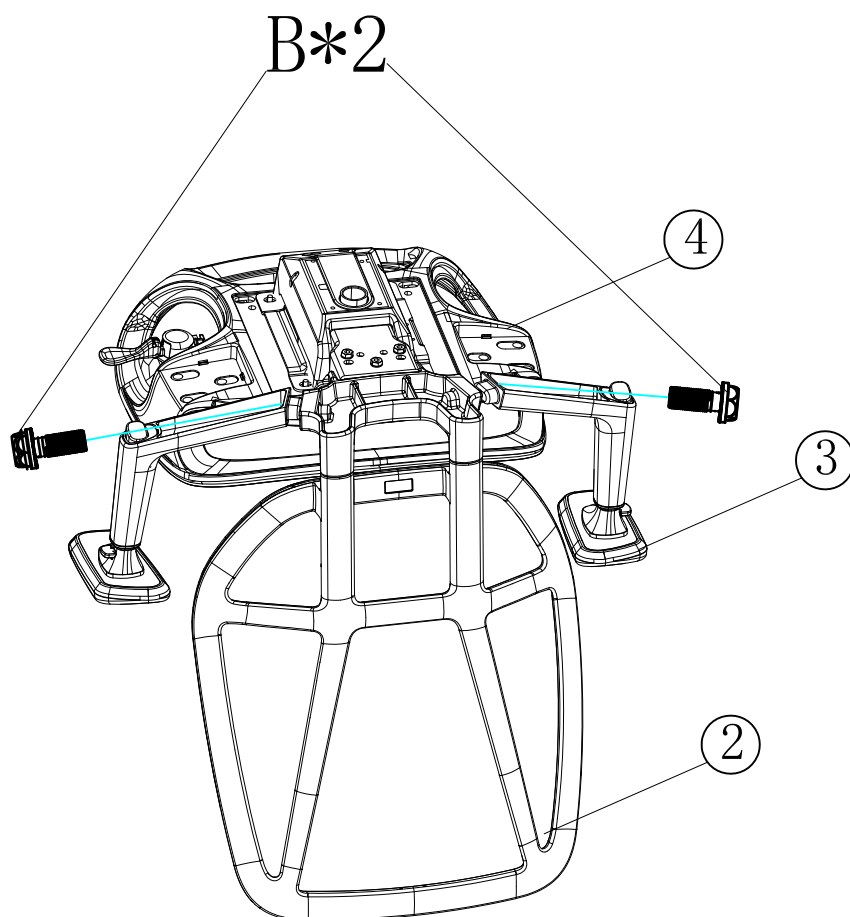

- Ⓑ M8*35
(X2)
- Ⓓ 5#Wrench
(X1)

1、Align the chair casters with the insertion holes on the five-star base. Insert the gas cylinder into the inner tube of the five-star base.

 3

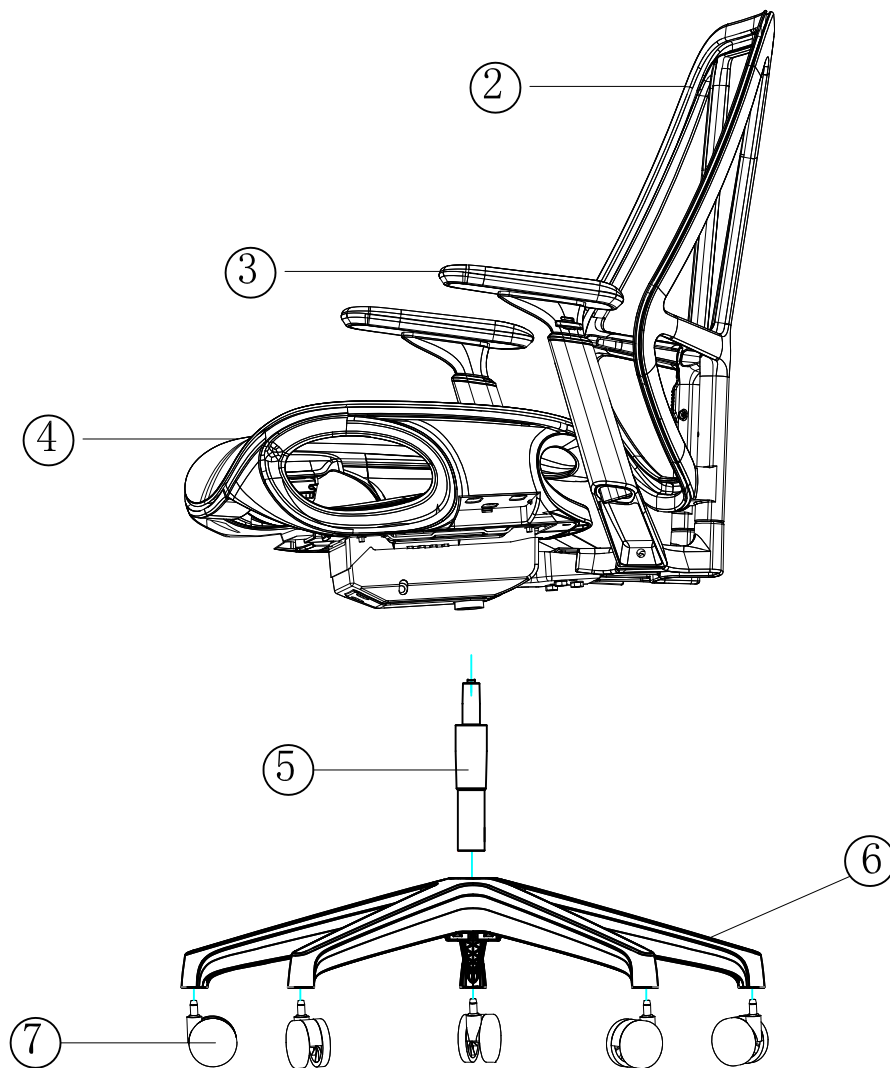

Done !

 


Functional Description

1. Headrest lifting adjustment

Upward adjustment, apply force upwards along the headrest to adjust the headrest upwards

Adjust downwards, apply force downwards along the headrest to adjust the headrest downwards

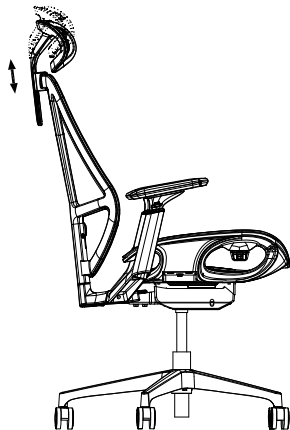


①

2. Armrest function and seat back up and down adjustment


3D armrest with up and down lifting, forward and backward sliding, and left and right adjustment functions.

 Sitting on the chair, press and hold the upper part of the lift button with the opposite hand to adjust the backrest up and down, and release the stop

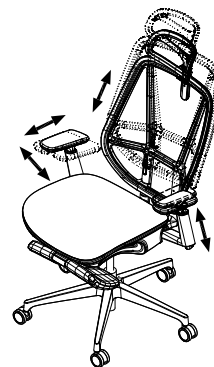


②

 3. One-Touch Triple Control Mechanism Center position: Vertical adjustment by lifting the integrated handle. Backward position: Unlocking the recline by moving the handle backward, with center position for locking. Forward position: Sliding the seat cushion by pushing the handle forward, with center position for locking.

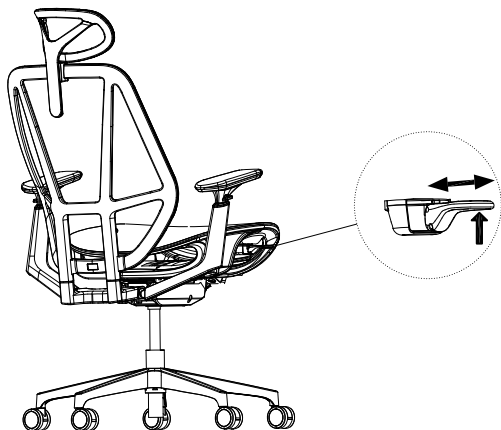


③

 Acceptance Notes

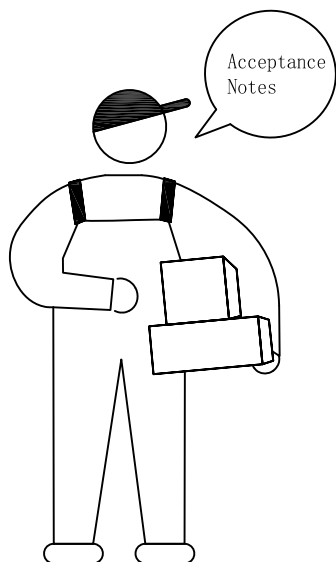


① Keep the product surface clean.

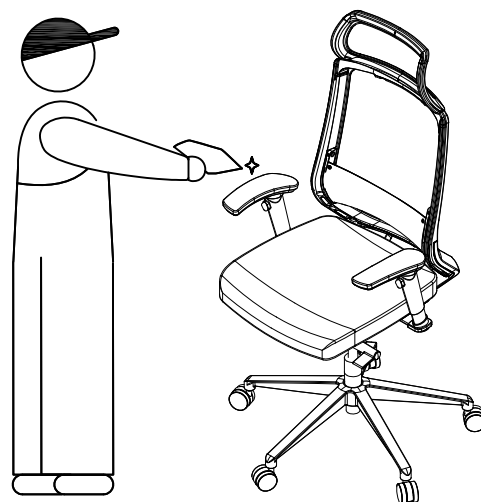 

② Keep the site clean after the installation.



 ③ Let the customer confirm the receipt.

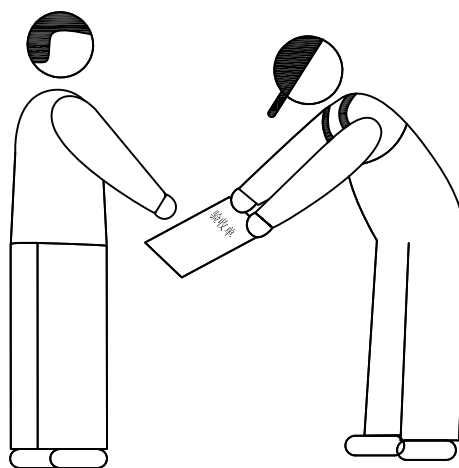




Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com





 
CH084SW/CH085SW/CH086SW/CH087SW Assembly Instructions

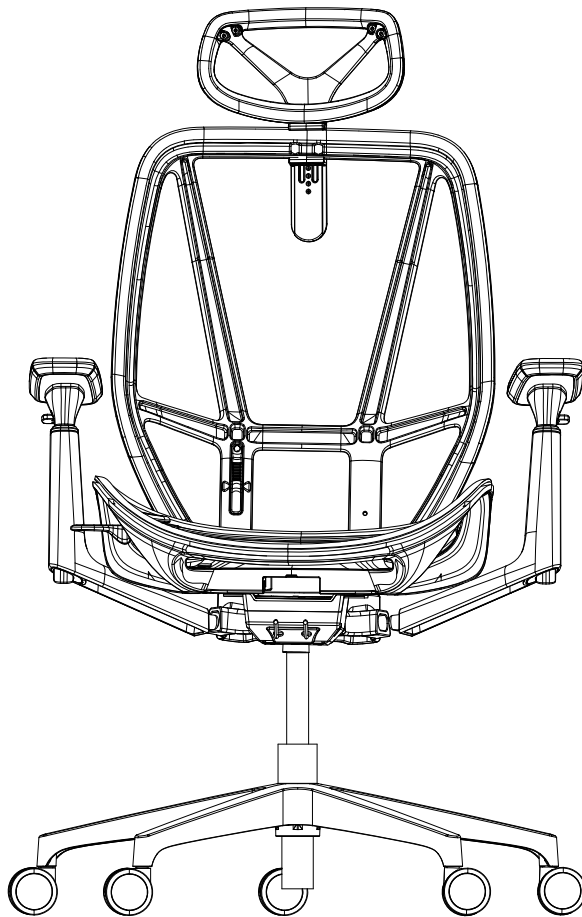


This manual is applicable to the installation of CH084SW/CH085SW/CH086SW/CH087SW.

Please read this manual carefully before use and keep it in a safe place.

 
Installation Notes

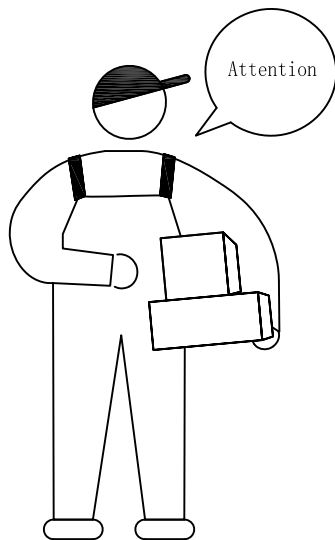

 
- ① Handle with care and use protective padding when necessary.

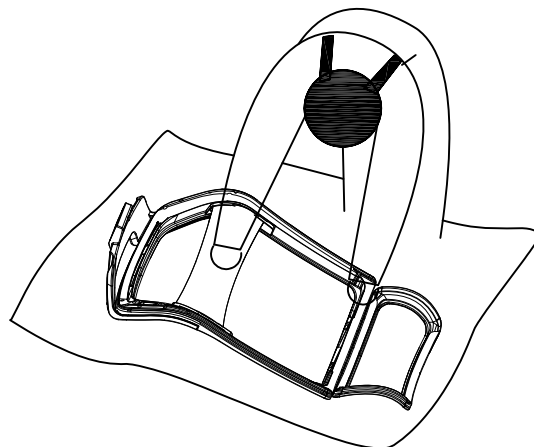

 - ② Secure transportation requires assistance from two persons.

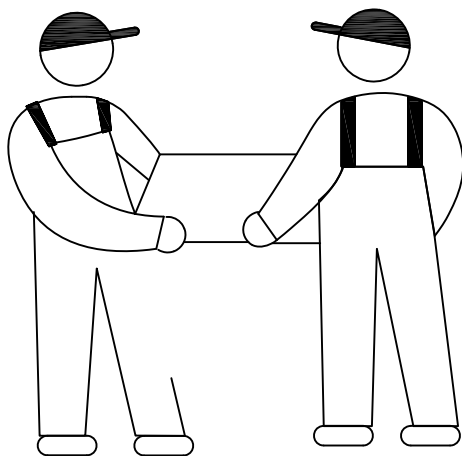


 - ③ For any inquiries, please contact Sunon.

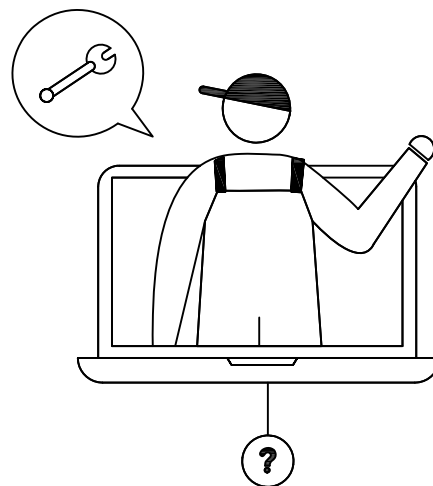





The manual indicates the components included with this product, with some parts considered as critical components.If the parts displayed here do not match your order, please contact Sunon at +86-400-8600-666.

 Exploded Diagram

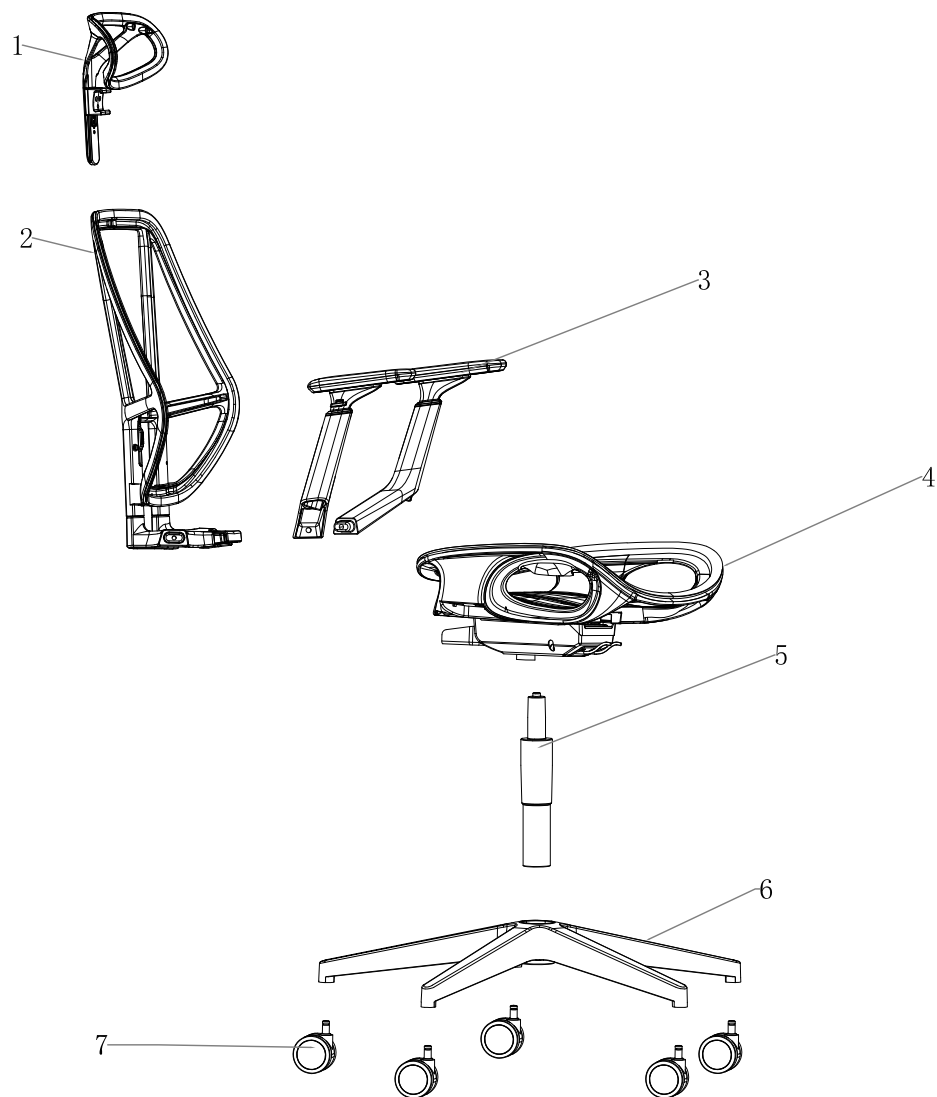




No	Name	Quantity
1	Headrest	1
2	Chair Back	1
3	Seat Component	1
4	Armrest	2
5	Gas Cylinder	1
6	Five-Star Base	1
7	Chair Casters	5

   Accessory List
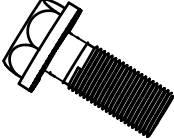
<div>A</div>			<div>B</div>			<div>C</div>		
hexagon screws	M8*16	3	three-in-one hexagon screws	M8*35	2	Coarse Thread Self-tapping Screw	ST4*18	2
<div>D</div>								
wrench	5#	1						


1、Secure the assembled back and seat using M8*16 hexagon screws.

   
1

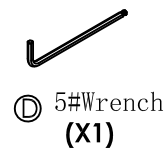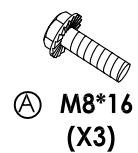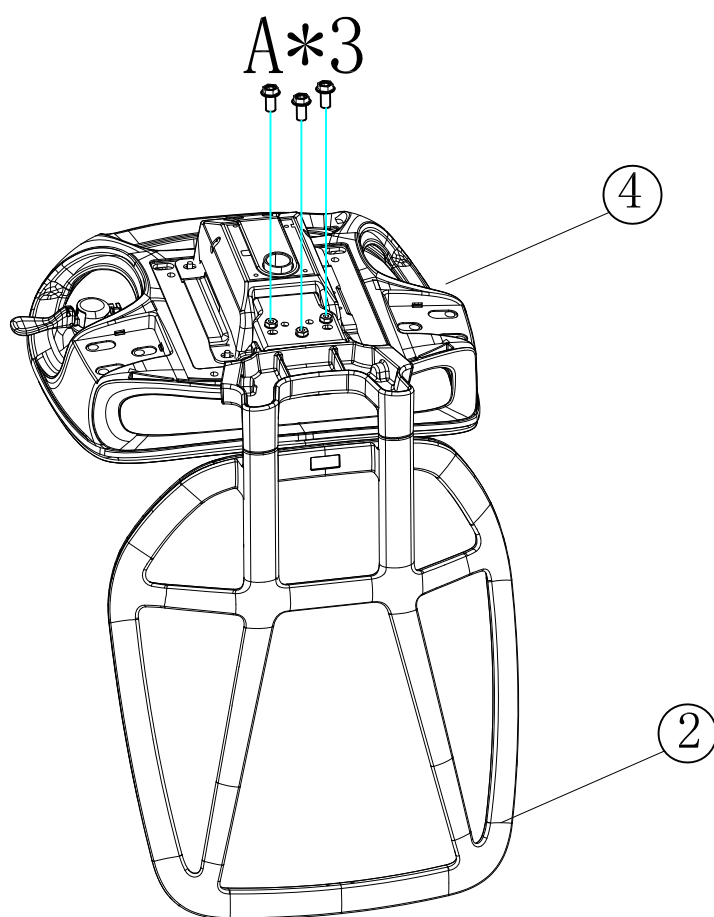


1、Armrest assembly is secured with M8 * 35 three in one internal and external hexagonal screws.

 2

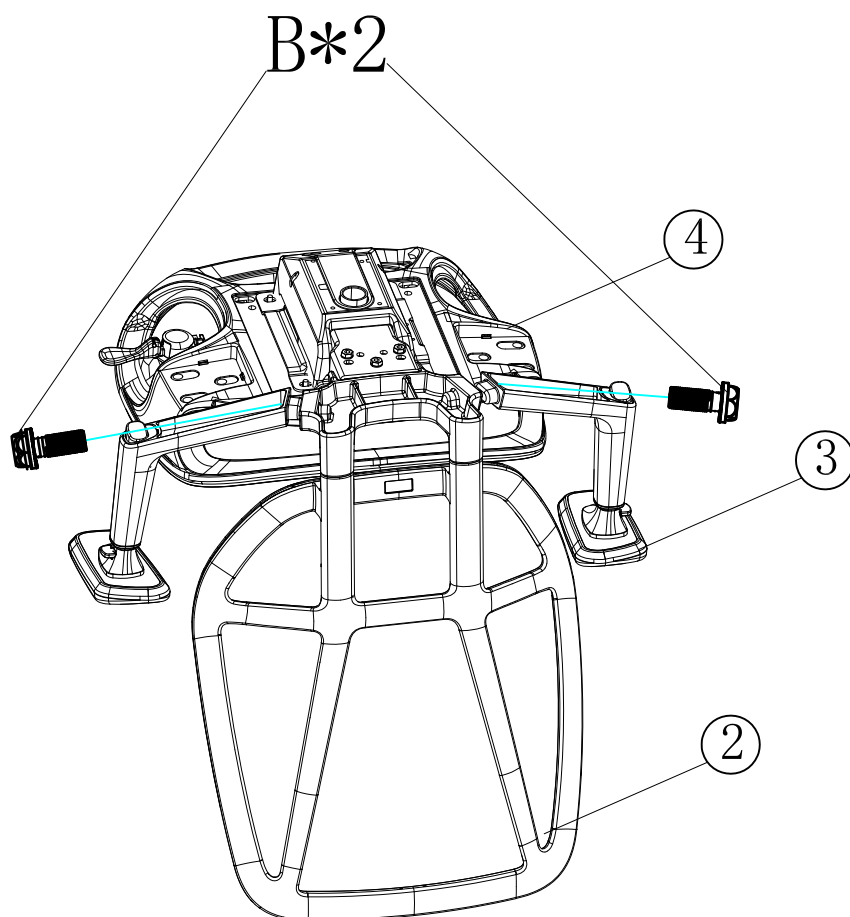



Ⓑ M8*35
(X2)


Ⓓ 5#Wrench
(X1)

1、Align the chair casters with the insertion holes on the five-star base. Insert the gas cylinder into the inner tube of the five-star base.

 3

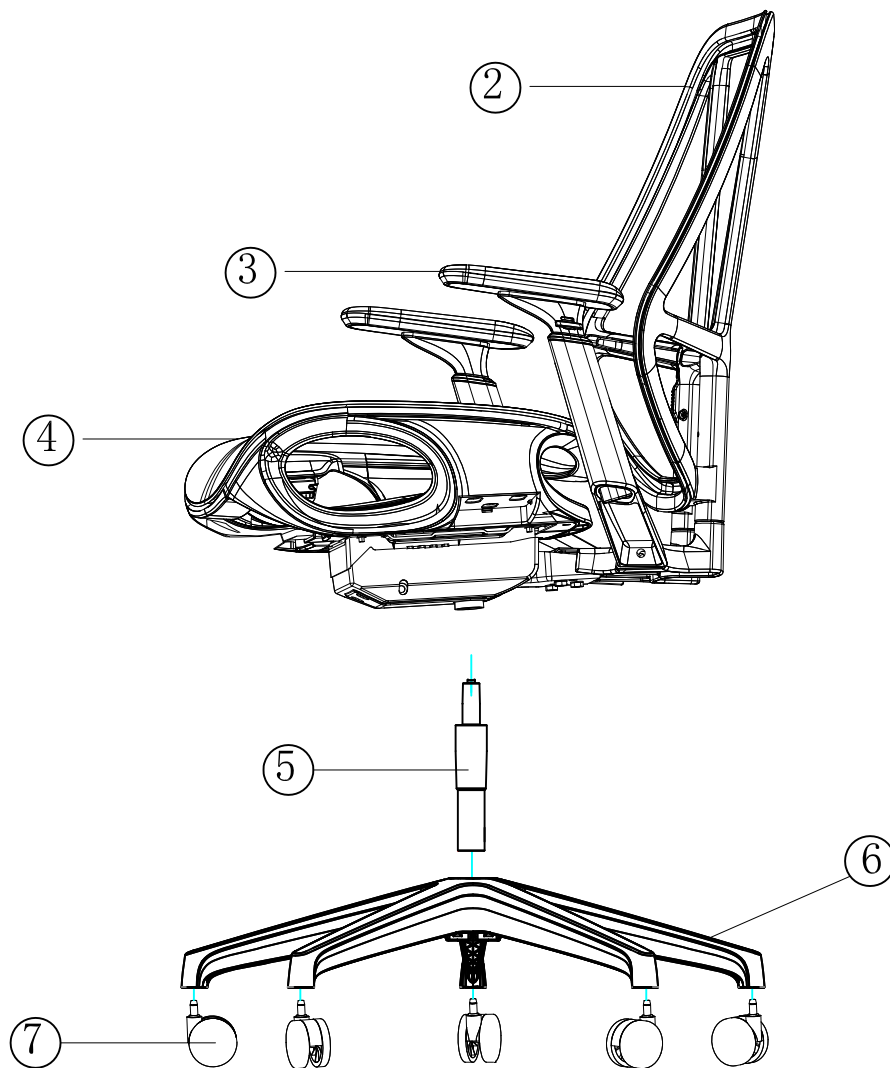

Done !

 


Functional Description

1. Headrest lifting adjustment

Upward adjustment, apply force upwards along the headrest to adjust the headrest upwards

Adjust downwards, apply force downwards along the headrest to adjust the headrest downwards

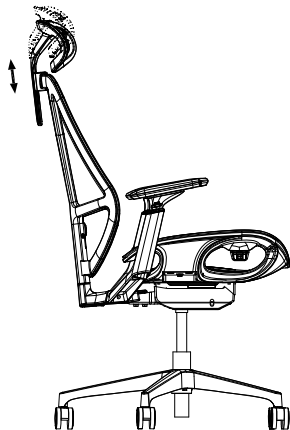


①

2. Armrest function and seat back up and down adjustment


3D armrest with up and down lifting, forward and backward sliding, and left and right adjustment functions.

 Sitting on the chair, press and hold the upper part of the lift button with the opposite hand to adjust the backrest up and down, and release the stop

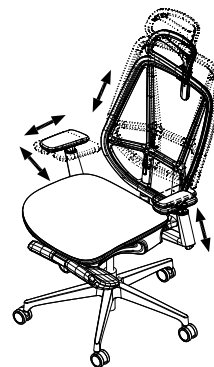


②

 3. One-Touch Triple Control Mechanism Center position: Vertical adjustment by lifting the integrated handle. Backward position: Unlocking the recline by moving the handle backward, with center position for locking. Forward position: Sliding the seat cushion by pushing the handle forward, with center position for locking.

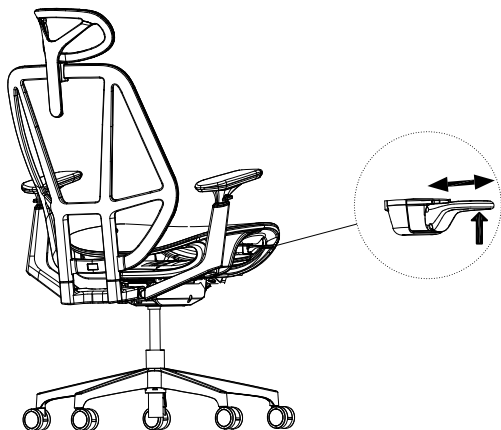


③

 Acceptance Notes

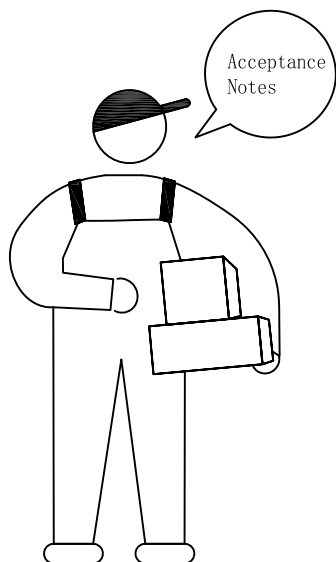


① Keep the product surface clean.

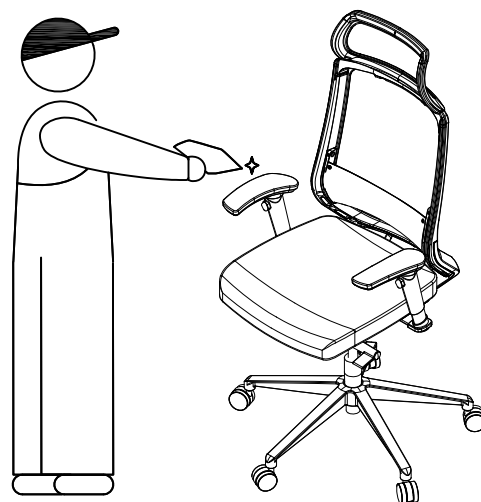 

② Keep the site clean after the installation.



 ③ Let the customer confirm the receipt.

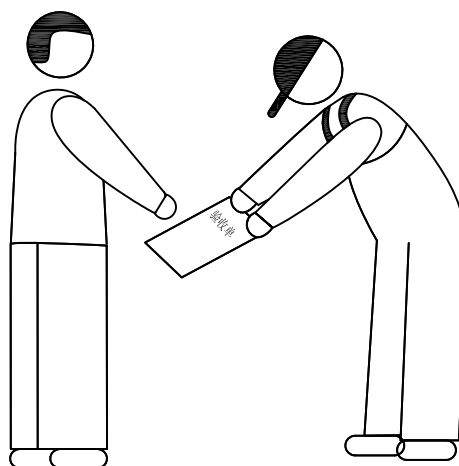




Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com





 
CH084SW/CH085SW/CH086SW/CH087SW Assembly Instructions

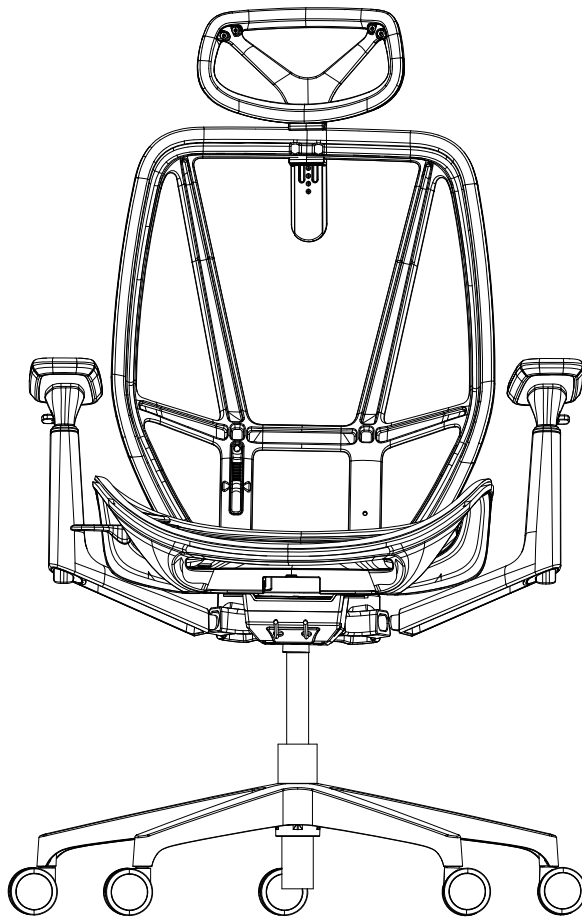


This manual is applicable to the installation of CH084SW/CH085SW/CH086SW/CH087SW.

Please read this manual carefully before use and keep it in a safe place.

 
Installation Notes

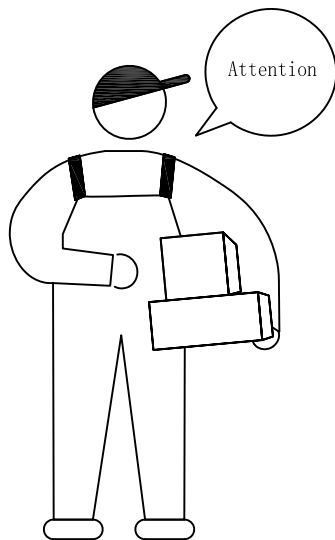

 
- ① Handle with care and use protective padding when necessary.

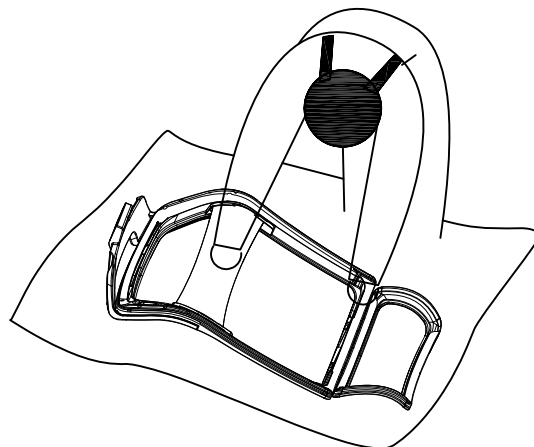

 - ② Secure transportation requires assistance from two persons.

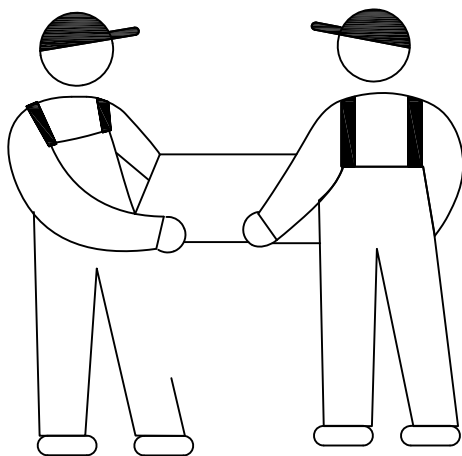


 - ③ For any inquiries, please contact Sunon.

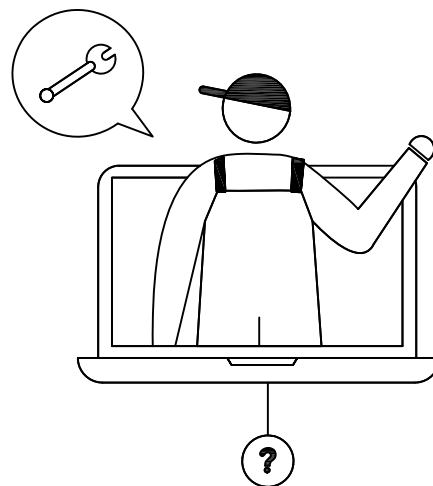





The manual indicates the components included with this product, with some parts considered as critical components.If the parts displayed here do not match your order, please contact Sunon at +86-400-8600-666.

 Exploded Diagram

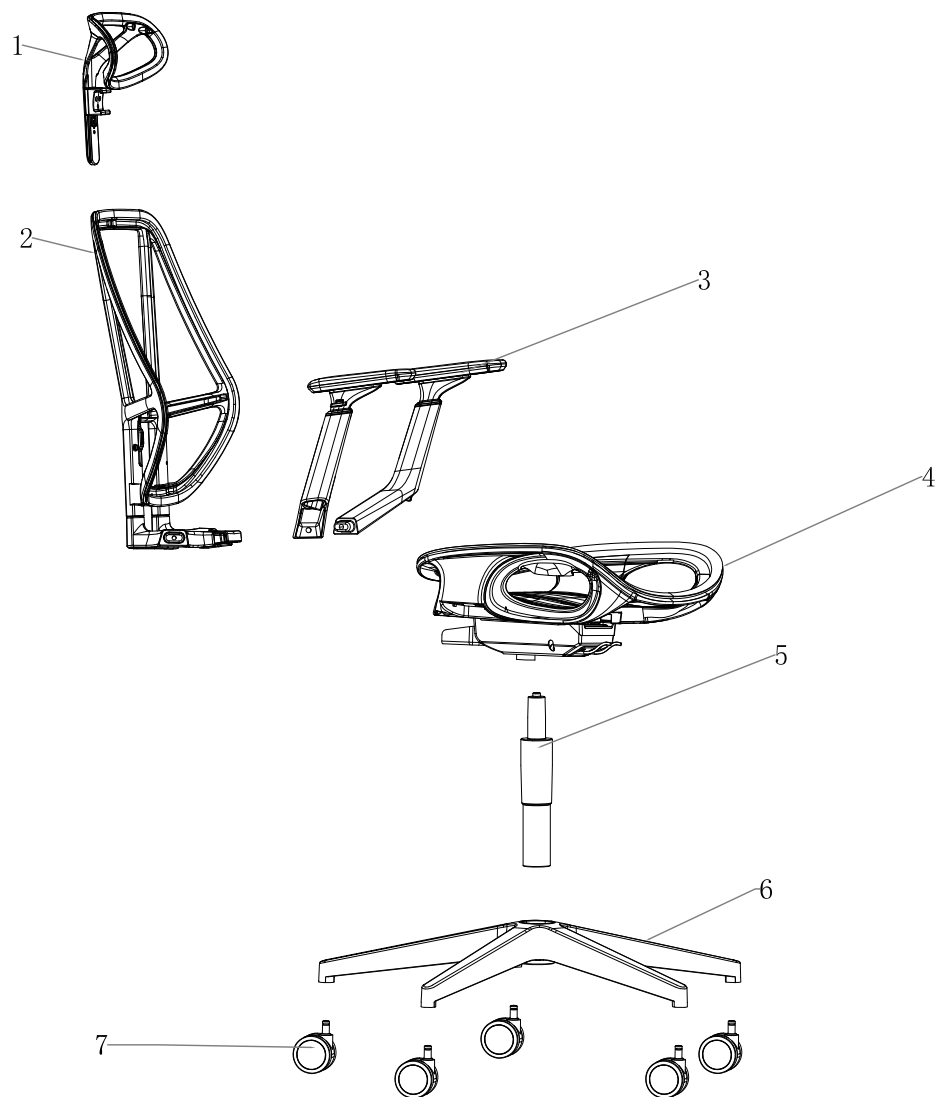




No	Name	Quantity
1	Headrest	1
2	Chair Back	1
3	Seat Component	1
4	Armrest	2
5	Gas Cylinder	1
6	Five-Star Base	1
7	Chair Casters	5

   Accessory List
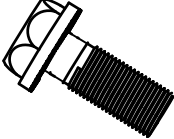
<div>A</div>			<div>B</div>			<div>C</div>		
hexagon screws	M8*16	3	three-in-one hexagon screws	M8*35	2	Coarse Thread Self-tapping Screw	ST4*18	2
<div>D</div>								
wrench	5#	1						



1、Secure the assembled back and seat using M8*16 hexagon screws.

   1

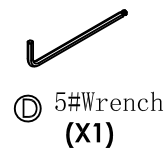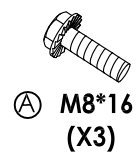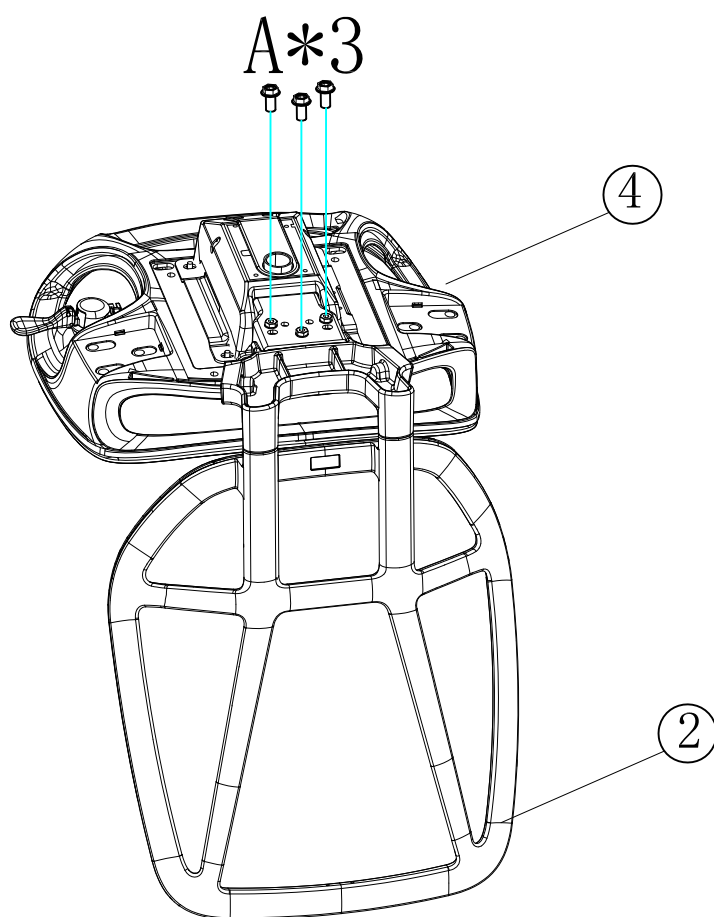


1、Armrest assembly is secured with M8 * 35 three in one internal and external hexagonal screws.

  2

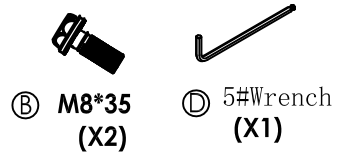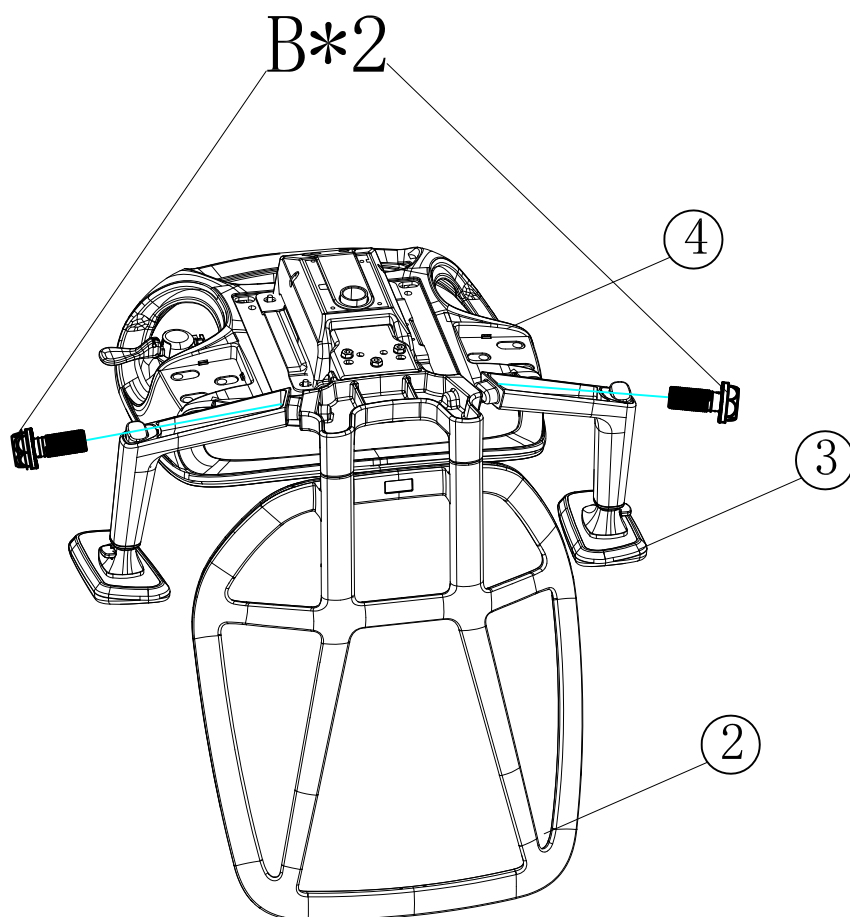

1、Align the chair casters with the insertion holes on the five-star base. Insert the gas cylinder into the inner tube of the five-star base.

 3

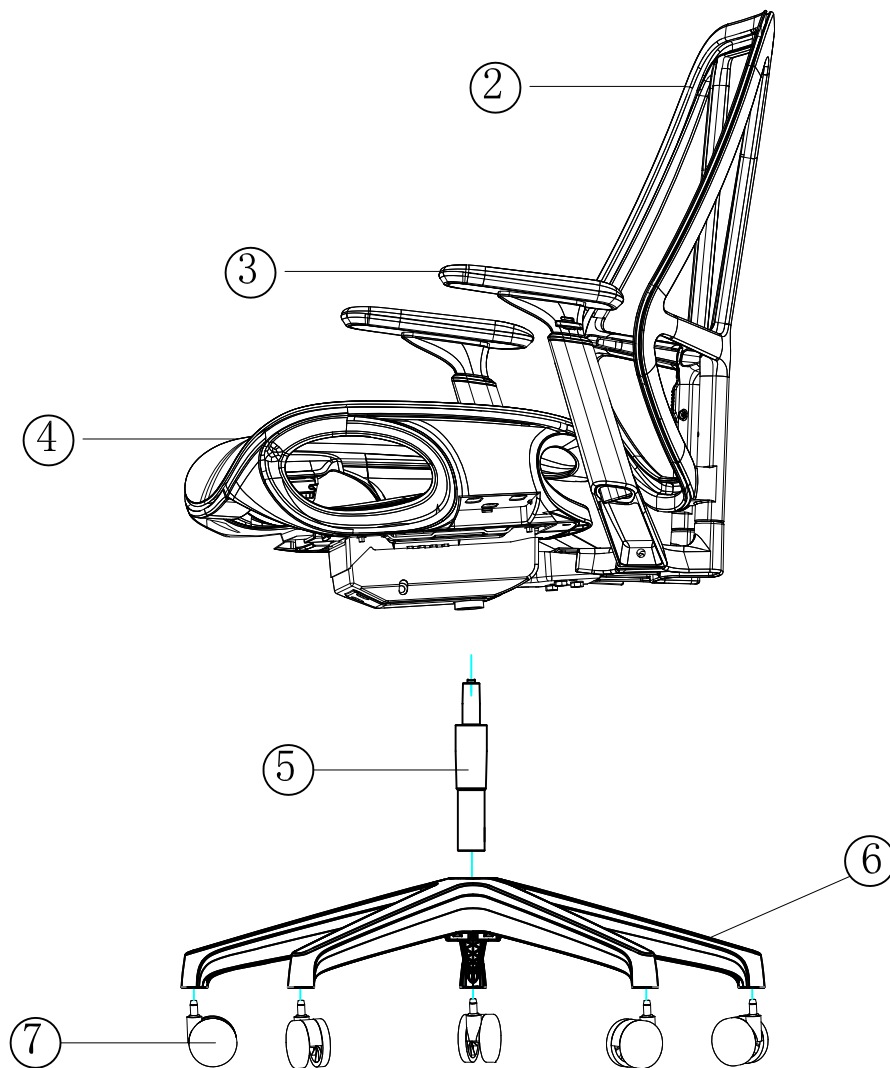

Done !

 


Functional Description

1. Headrest lifting adjustment

Upward adjustment, apply force upwards along the headrest to adjust the headrest upwards

Adjust downwards, apply force downwards along the headrest to adjust the headrest downwards

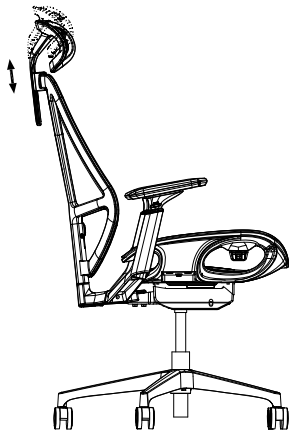


①

2. Armrest function and seat back up and down adjustment


3D armrest with up and down lifting, forward and backward sliding, and left and right adjustment functions.

 Sitting on the chair, press and hold the upper part of the lift button with the opposite hand to adjust the backrest up and down, and release the stop

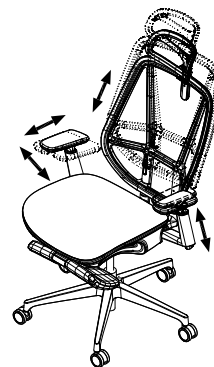


②

 3. One-Touch Triple Control Mechanism Center position: Vertical adjustment by lifting the integrated handle. Backward position: Unlocking the recline by moving the handle backward, with center position for locking. Forward position: Sliding the seat cushion by pushing the handle forward, with center position for locking.

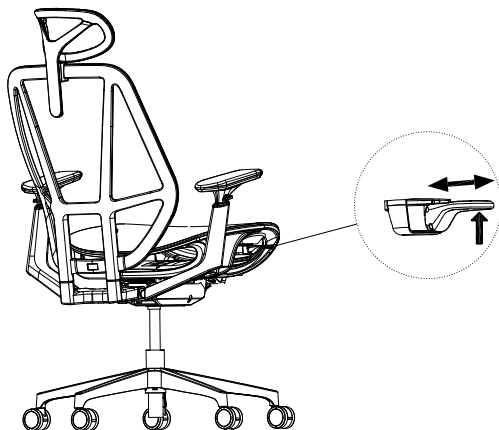


③

 Acceptance Notes

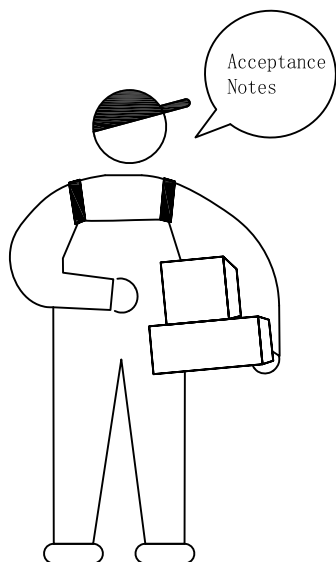


① Keep the product surface clean.

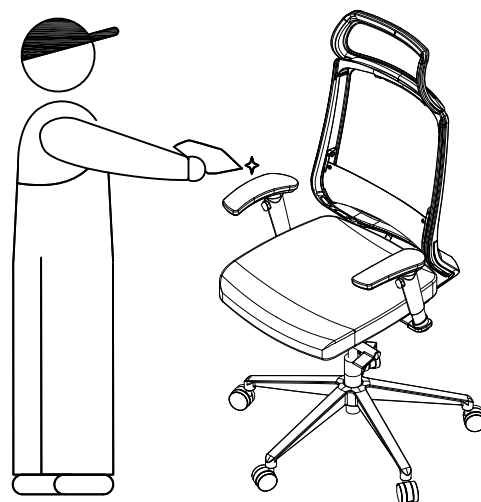 

② Keep the site clean after the installation.



 ③ Let the customer confirm the receipt.

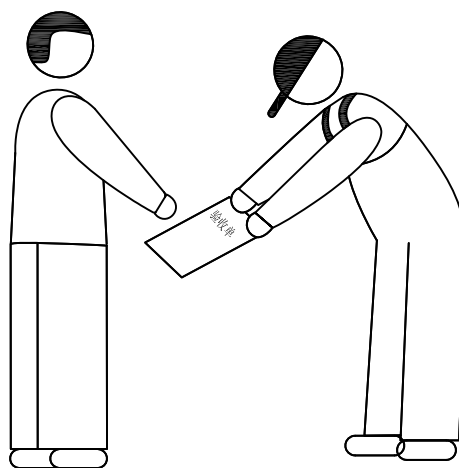




Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com





 
CH084SW/CH085SW/CH086SW/CH087SW Assembly Instructions

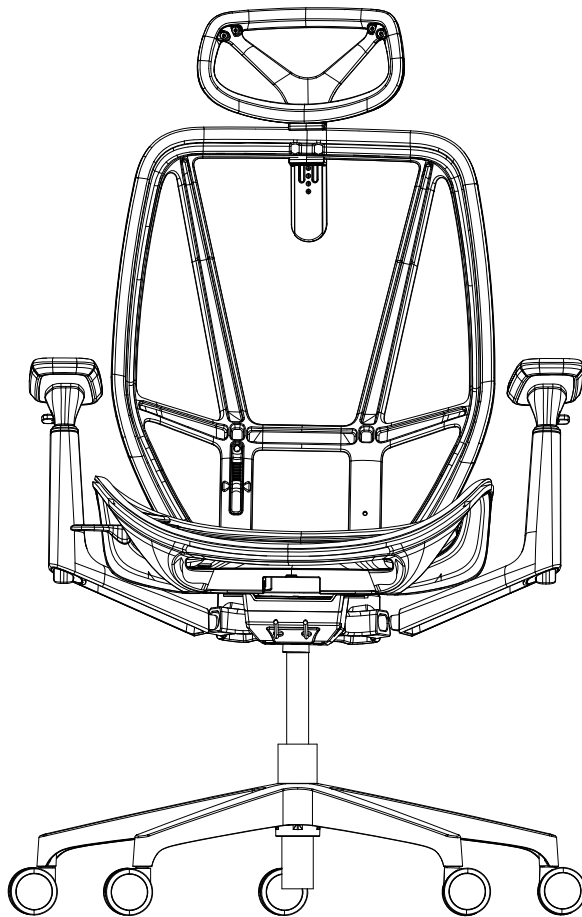


This manual is applicable to the installation of CH084SW/CH085SW/CH086SW/CH087SW.

Please read this manual carefully before use and keep it in a safe place.

 
Installation Notes

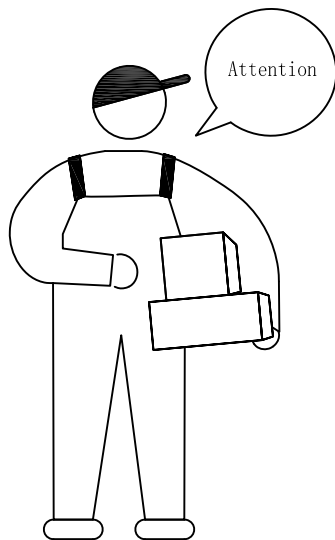

 
- ① Handle with care and use protective padding when necessary.

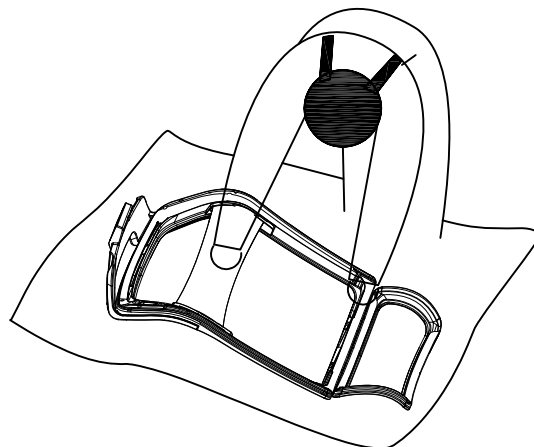

 - ② Secure transportation requires assistance from two persons.

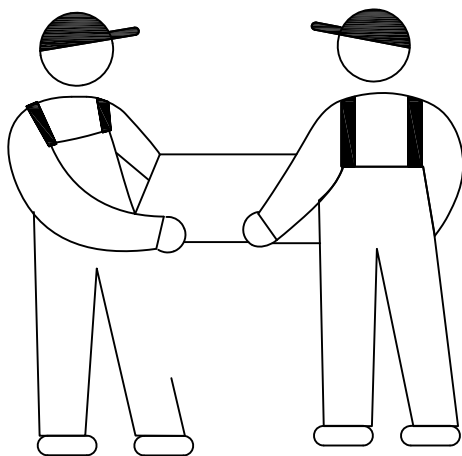


 - ③ For any inquiries, please contact Sunon.

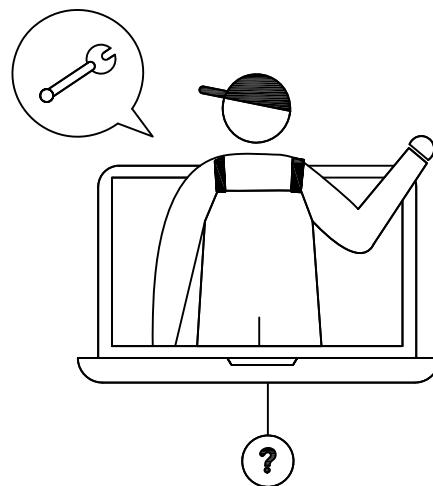





The manual indicates the components included with this product, with some parts considered as critical components.If the parts displayed here do not match your order, please contact Sunon at +86-400-8600-666.

 Exploded Diagram

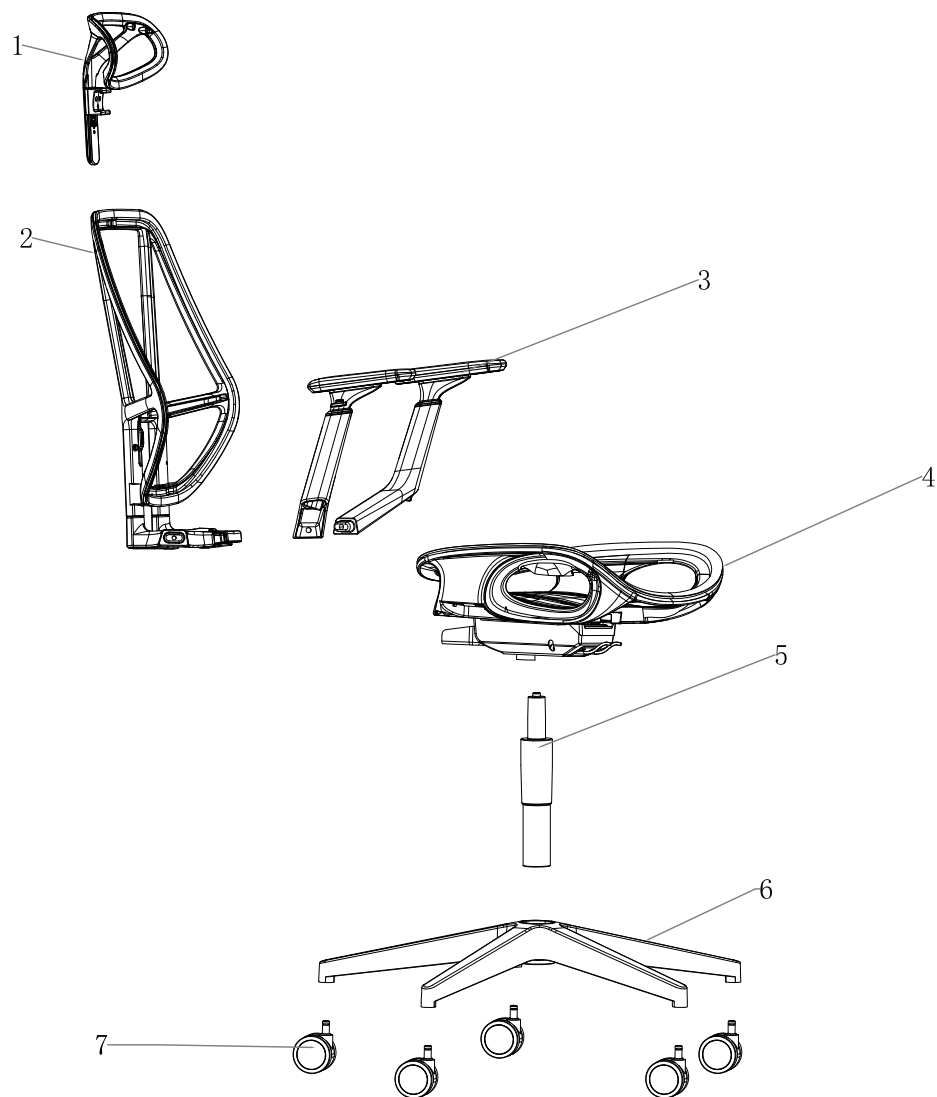




No	Name	Quantity
1	Headrest	1
2	Chair Back	1
3	Seat Component	1
4	Armrest	2
5	Gas Cylinder	1
6	Five-Star Base	1
7	Chair Casters	5

   Accessory List
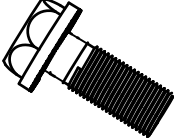
<div>A</div>			<div>B</div>			<div>C</div>		
hexagon screws	M8*16	3	three-in-one hexagon screws	M8*35	2	Coarse Thread Self-tapping Screw	ST4*18	2
<div>D</div>								
wrench	5#	1						


1、Secure the assembled back and seat using M8*16 hexagon screws.

   1

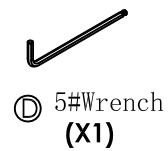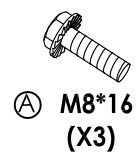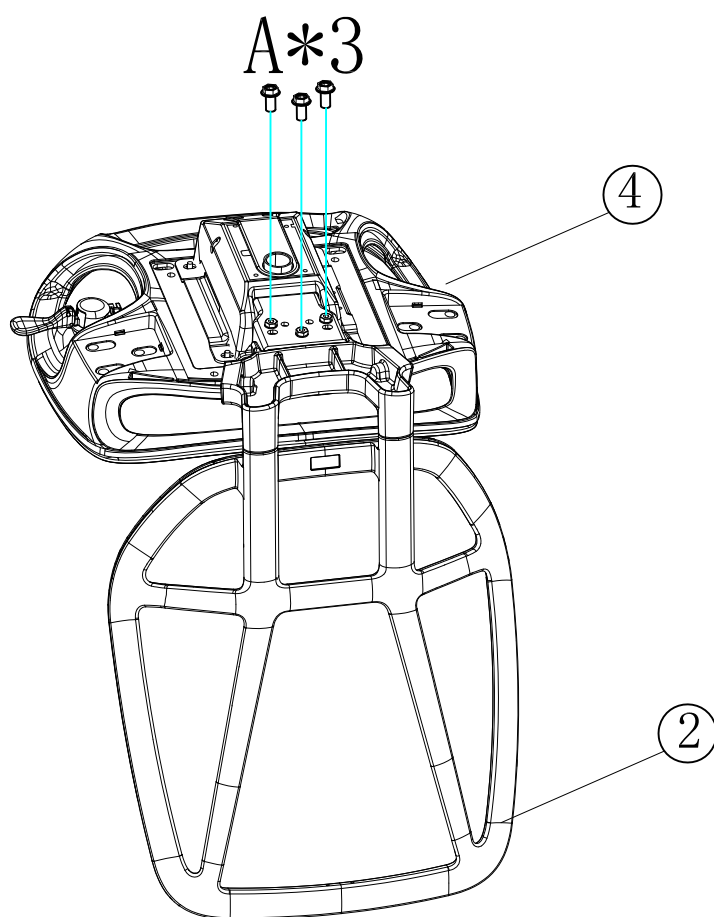

1、Armrest assembly is secured with M8 * 35 three in one internal and external hexagonal screws.

 
2

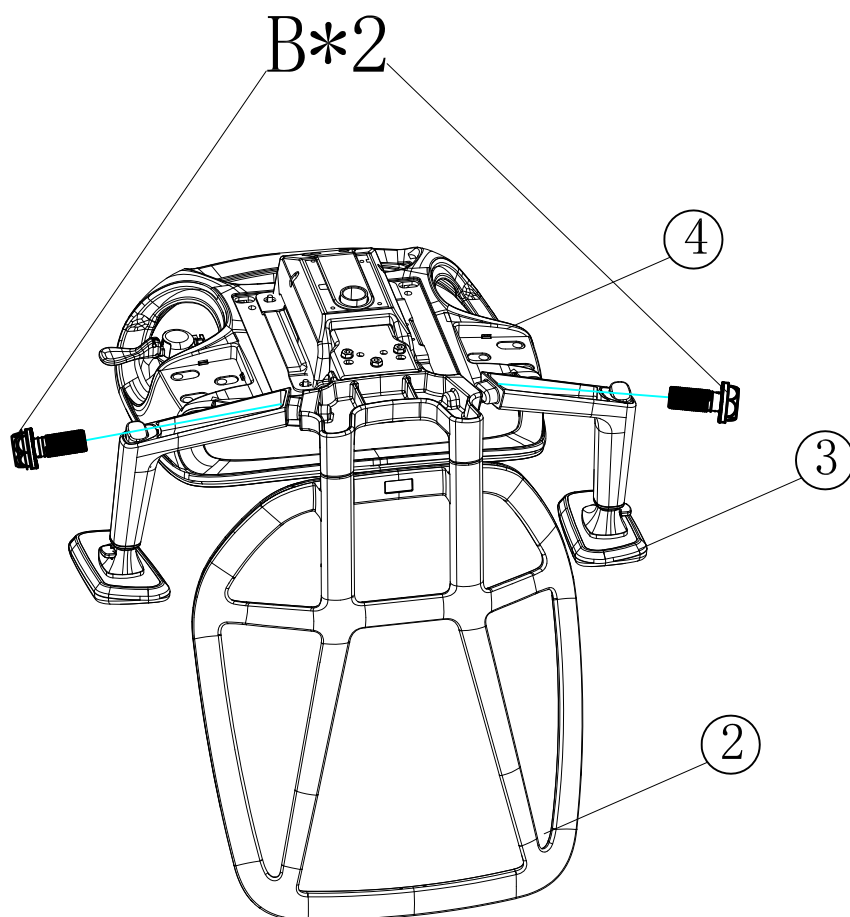

- Ⓑ M8*35
(X2)
- Ⓓ 5#Wrench
(X1)

1、Align the chair casters with the insertion holes on the five-star base. Insert the gas cylinder into the inner tube of the five-star base.

 3

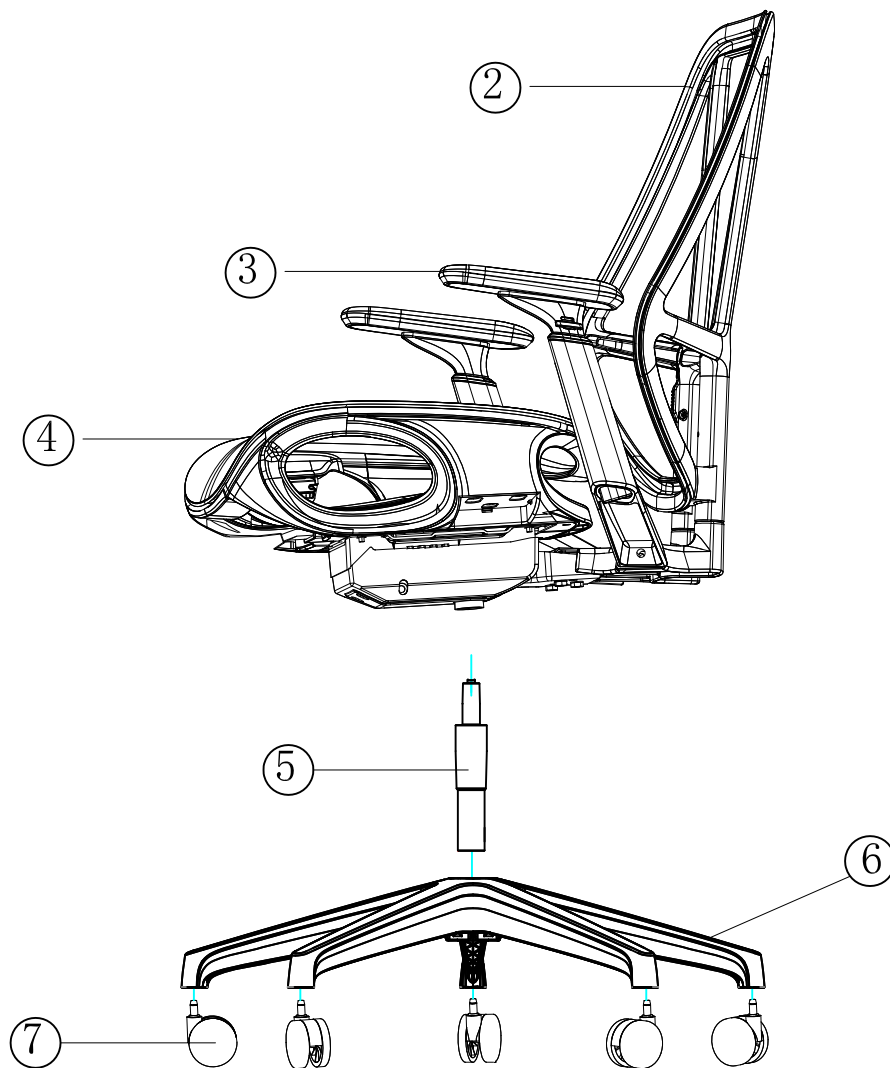

Done !

 


Functional Description

1. Headrest lifting adjustment

Upward adjustment, apply force upwards along the headrest to adjust the headrest upwards

Adjust downwards, apply force downwards along the headrest to adjust the headrest downwards

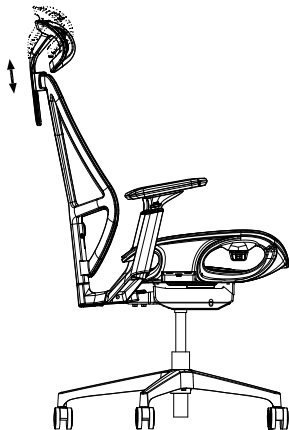


①

2. Armrest function and seat back up and down adjustment


3D armrest with up and down lifting, forward and backward sliding, and left and right adjustment functions.

 Sitting on the chair, press and hold the upper part of the lift button with the opposite hand to adjust the backrest up and down, and release the stop

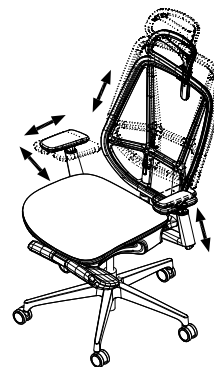


②

 3. One-Touch Triple Control Mechanism Center position: Vertical adjustment by lifting the integrated handle. Backward position: Unlocking the recline by moving the handle backward, with center position for locking. Forward position: Sliding the seat cushion by pushing the handle forward, with center position for locking.

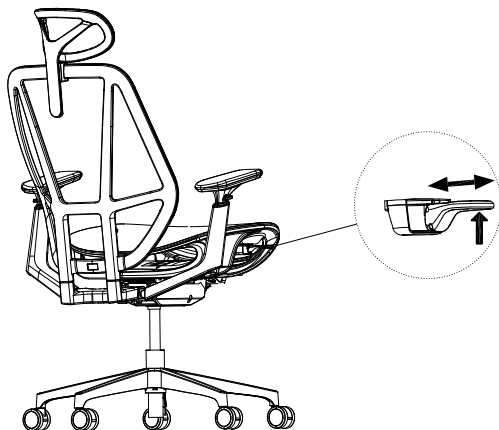


③

 Acceptance Notes

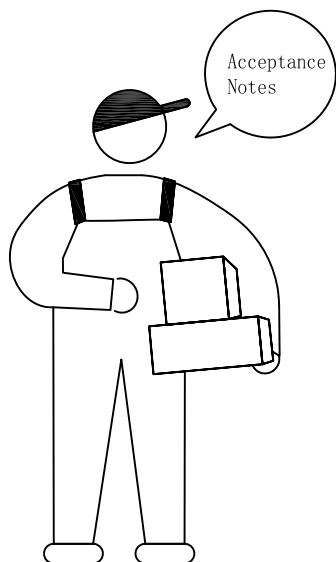


① Keep the product surface clean.

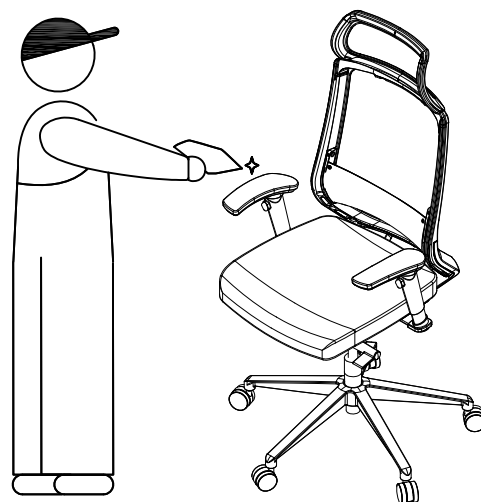 

② Keep the site clean after the installation.



 ③ Let the customer confirm the receipt.

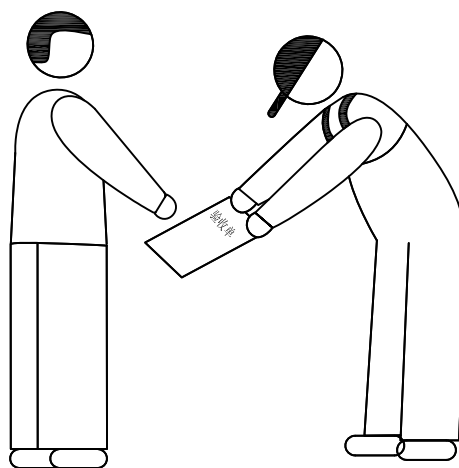



Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com

