

 


IRON II Series Installation Manual




This manual is used for the installation of CIR60SW-2&CIR61SW-2
Please read this manual carefully before use and keep it properly.


Assembly note:

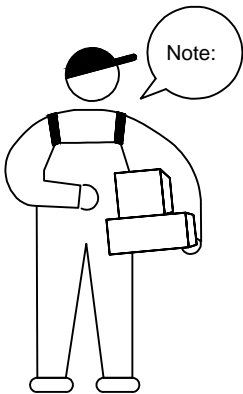

 
● Use a protective mat and handle the product with care.

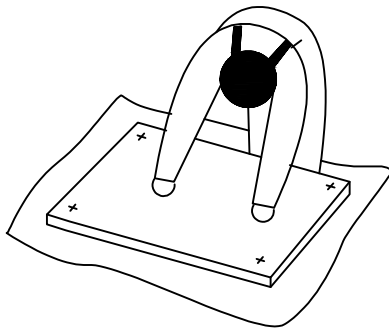

● At least two people are required.

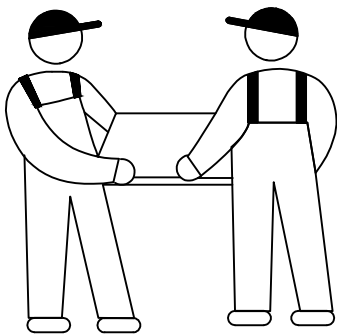 


  ● Contact Sunon if you have any confusions.

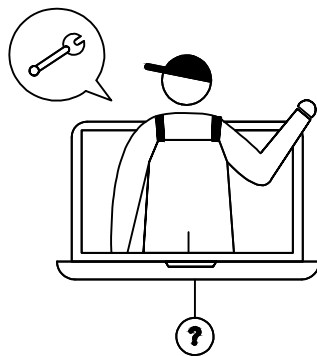



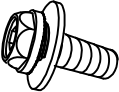



This picture shows all the accessories required, among which some are key accessories.
If you have missed any, please contact Sunon at 949-337-8838

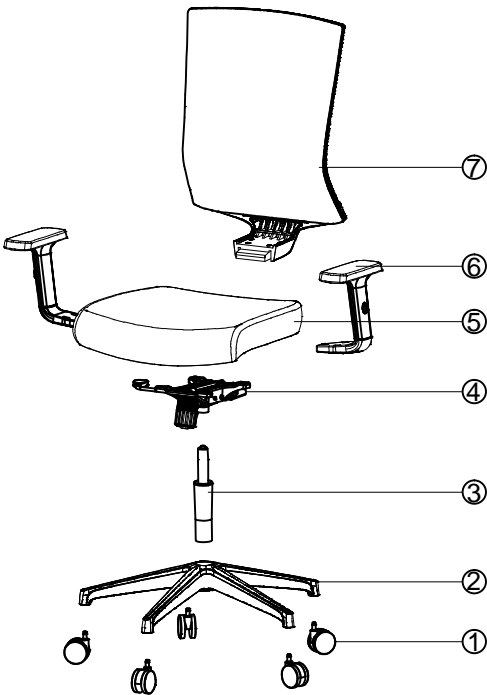Exploded diagram:




No.	Name	Pcs
1	caster	5
2	five-star base	1
3	gas lift	1
4	mechanism	1
5	seat	1
6	armrest	2
7	backrest	1

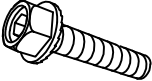Accessory list:

A 			B 			C 		
Screw	1/4"*5/4"	6	Screw	1/4"*3/4"	4	Screw	M8*20	2
D 			E 			F 		
Screw	M8*35	1	Washer	Ø16*Ø6.5*1	10	Allen wrench	5#	1


1. First fit casters into the five-star base. Then insert the bottom end of the gas lift into the central hole of the base.

 1

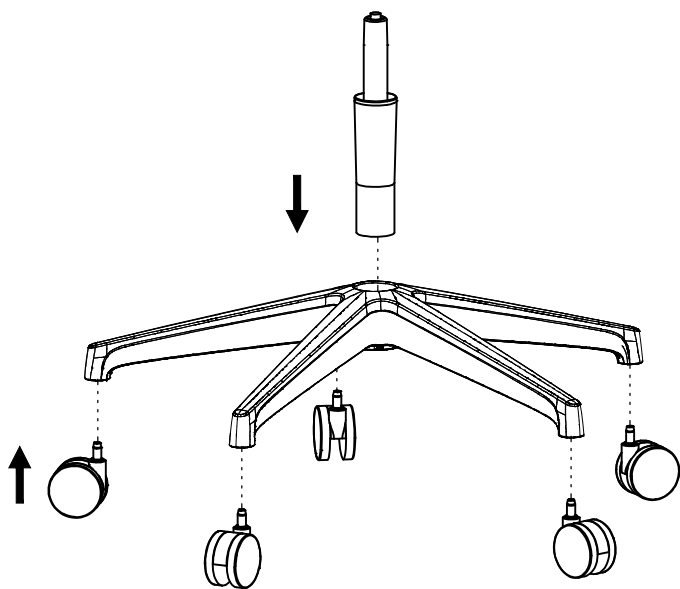


2. Follow the order of screw (A), washer (E), armrests, seat cushion and fix the armrests to the seat cushion.

 
2

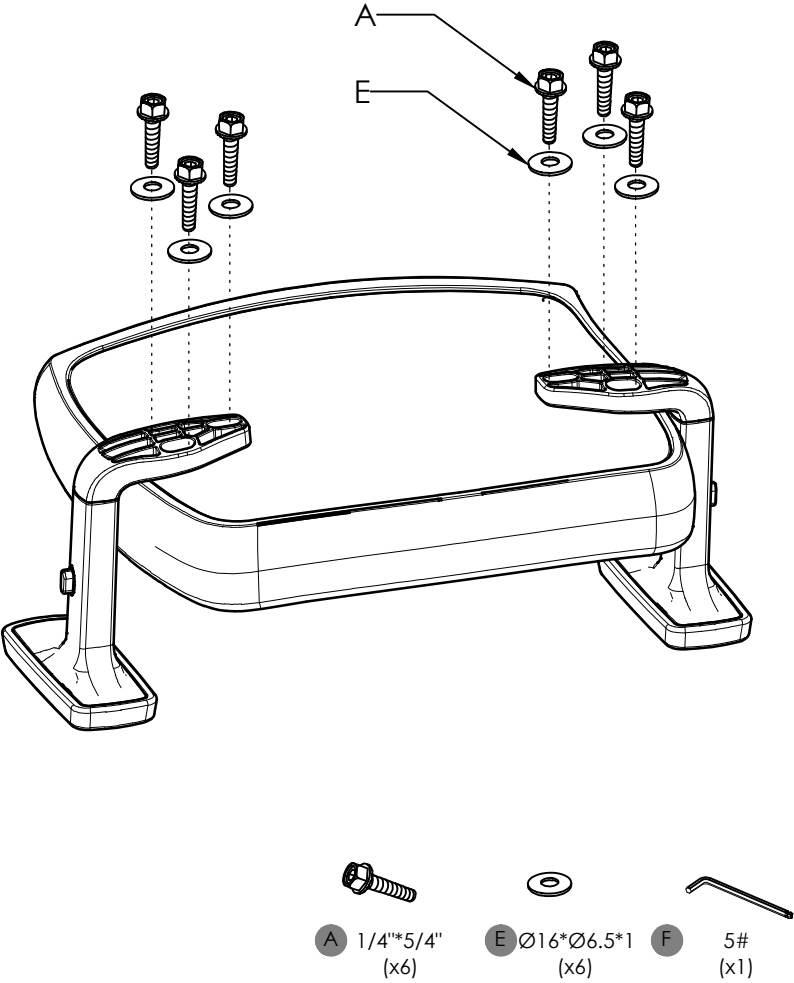



 3. Follow the order of screw(B), washer(E), mechanism, seat cushion and fix the mechanism to the seat cushion.

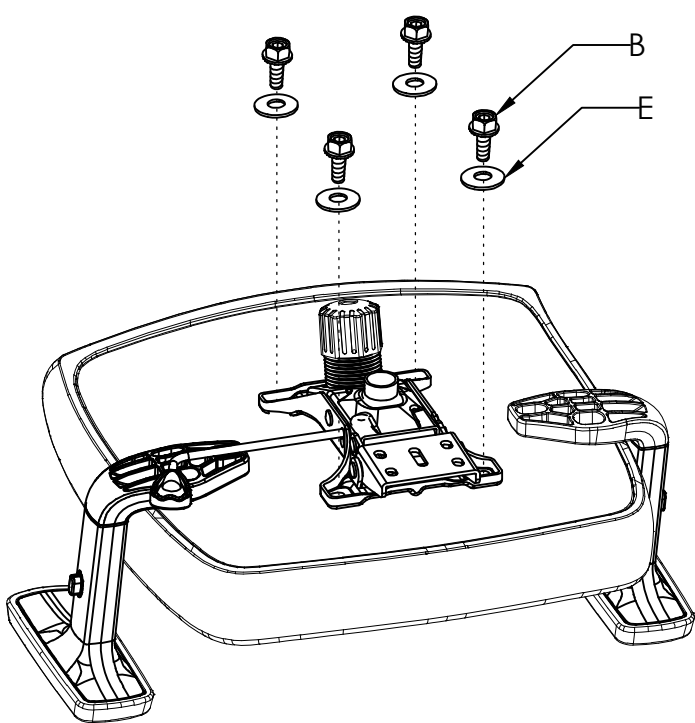3



- 

 
B 1/4"*3/4"
(x4)
- 

E Ø16*Ø6.5*1
(x4)
- 

F 5#
(x1)


4. Follow the order of screw(C&D), mechanism, backrest and fix the backrest to the mechanism.

4

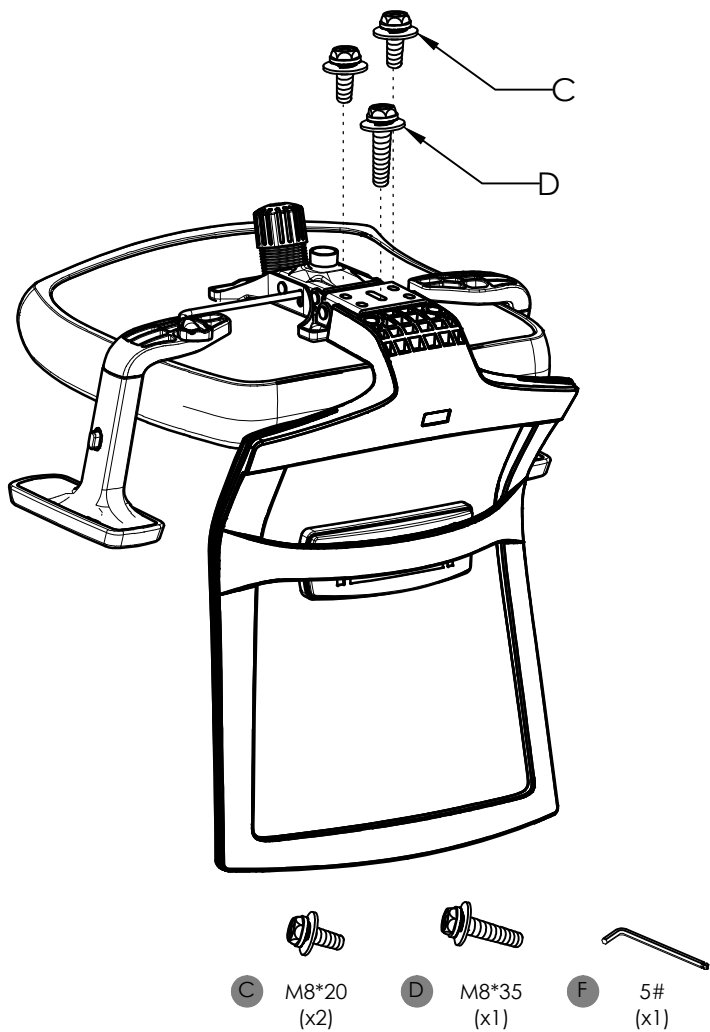

-
5. Align the mechanism hole with the upper end of the gas lift and lay down the chair vertically. The installation of chair is done.
-

 5

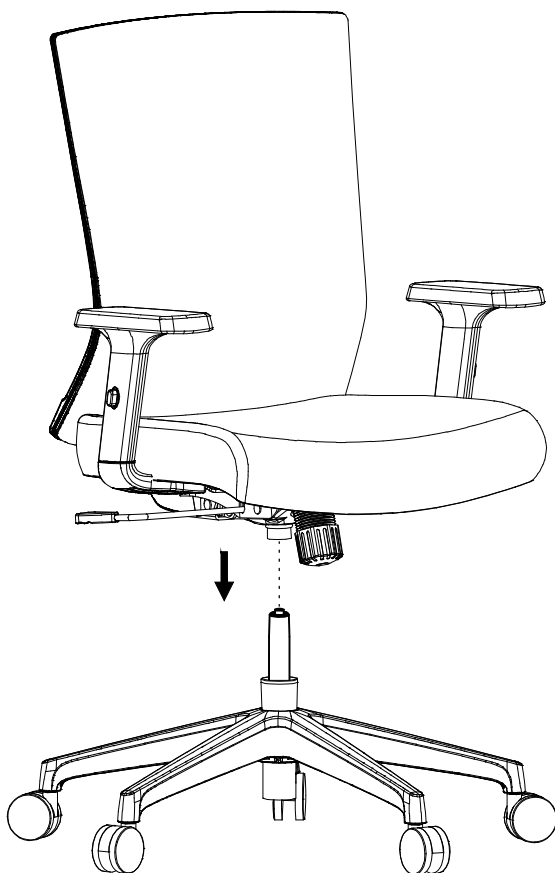


Done !

Function:

1. Adjust Armrest Height

Upward: press and hold the button and lift the armrest to a desired height.

 Downward: press and hold the button and push down the armrest to a desired height.

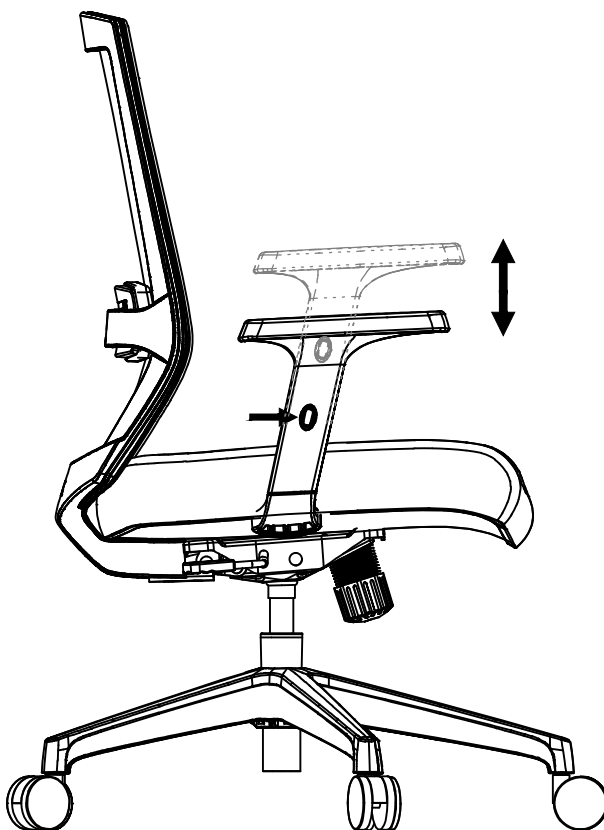


Function:

2. Adjust Seat Height

Upward: get your body off the seat and pull the lever to lift the seat to an appropriate height.

 
Downward: press down and pull the lever to lower the seat to the appropriate height.

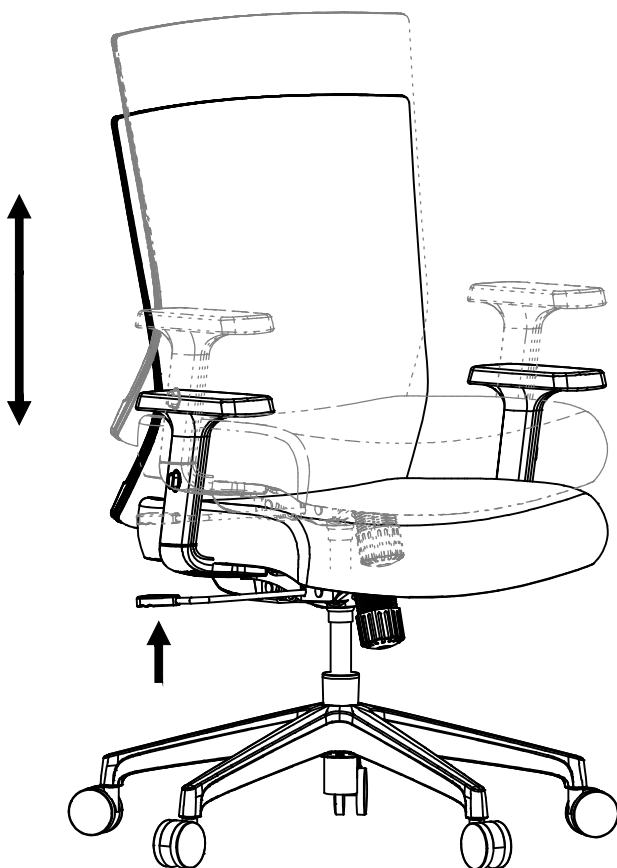

Function:

3. Adjust Lumbar Support

 
Rotate the lumbar support upward or downward to adjust it to an appropriate position.

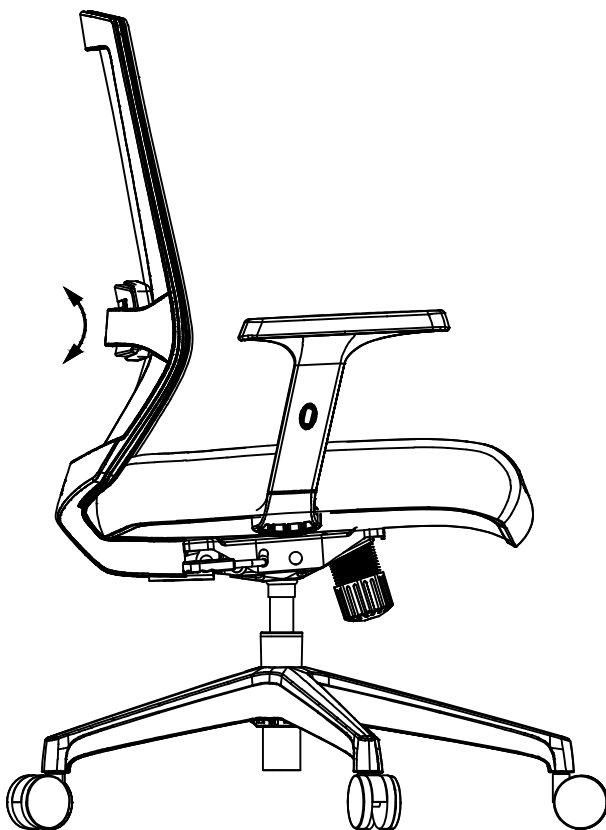

Function:

4. Tilting and Locking Adjustment

 Pull out the lever to tilt the backrest at will, and push the handle inward to lock the backrest.

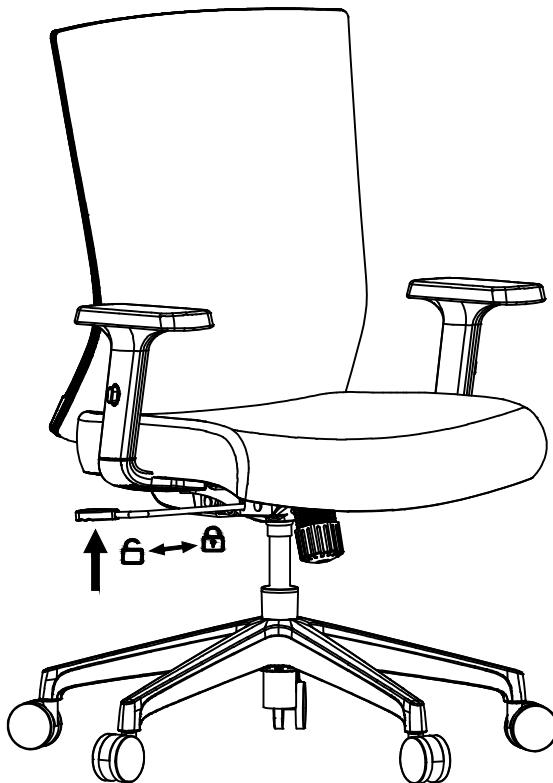


Function:

5. Adjust Backrest Tilt Tension


Rotate the knob under the seat to adjust the tilt tension of backrest according to your need.



 Acceptance note:

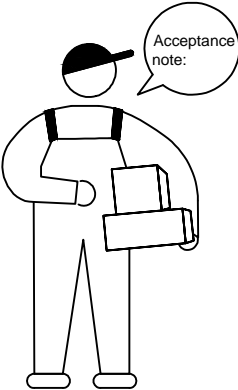


● Clean the surface.

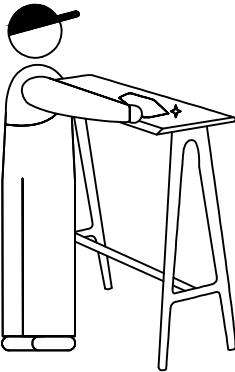 

● Tidy up.



 ● Check and deliver.

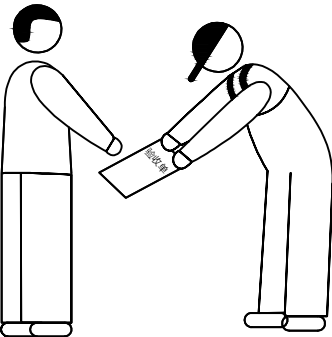




 Suite 150, Building 525 Technology Drive, Irvine, CA.92618

 sunonglobal.com

 949-337-8838

 info.us@isunon.com



 


IRON II Series Installation Manual




This manual is used for the installation of CIR62SW-2&CIR63SW-2
Please read this manual carefully before use and keep it properly.


Assembly note:

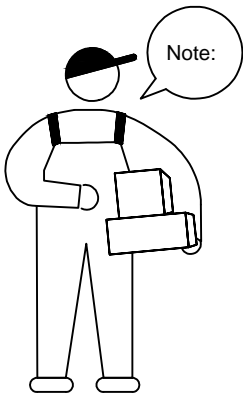

 
● Use a protective mat and handle the product with care.

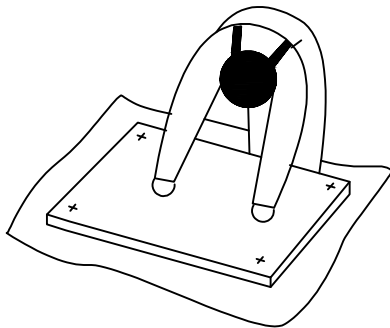

● At least two people are required.

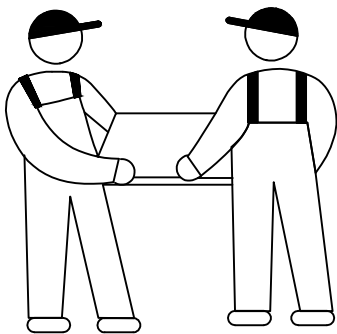 


  ● Contact Sunon if you have any confusions.

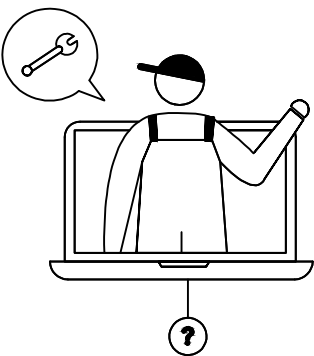



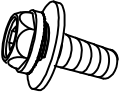
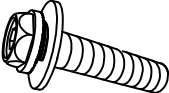


This picture shows all the accessories required, among which some are key accessories.
If you have missed any, please contact Sunon at 949-337-8838

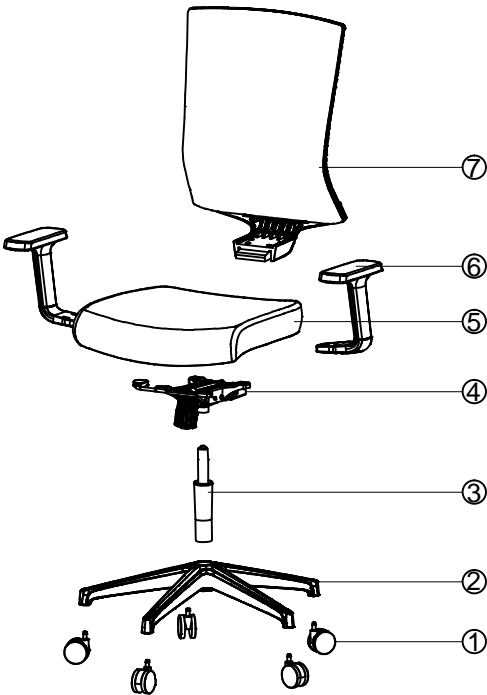Exploded diagram:




No.	Name	Pcs
1	caster	5
2	five-star base	1
3	gas lift	1
4	mechanism	1
5	seat	1
6	armrest	2
7	backrest	1

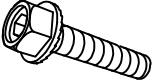Accessory list:

A 			B 			C 		
Screw	1/4"*5/4"	6	Screw	1/4"*3/4"	4	Screw	M8*20	2
D 			E 			F 		
Screw	M8*35	1	Washer	Ø16*Ø6.5*1	10	Allen wrench	5#	1


1. First fit casters into the five-star base. Then insert the bottom end of the gas lift into the central hole of the base.

 1

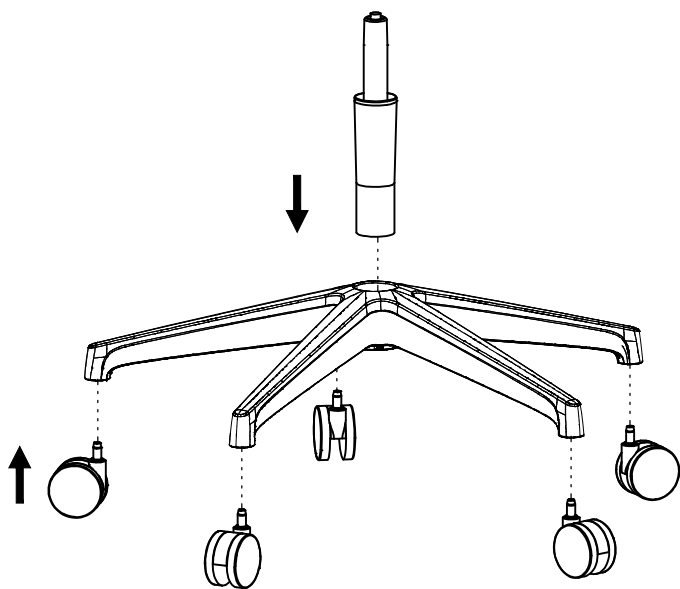


2. Follow the order of screw (A), washer (E), armrests, seat cushion and fix the armrests to the seat cushion.

 
2

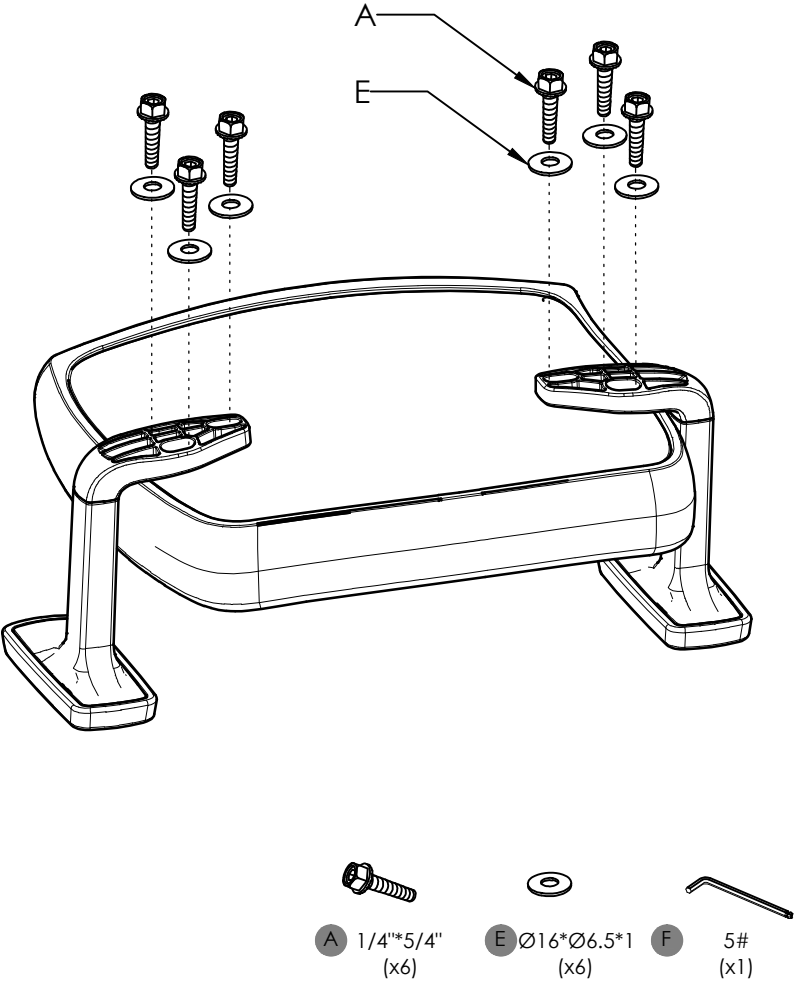



 3. Follow the order of screw(B), washer(E), mechanism, seat cushion and fix the mechanism to the seat cushion.

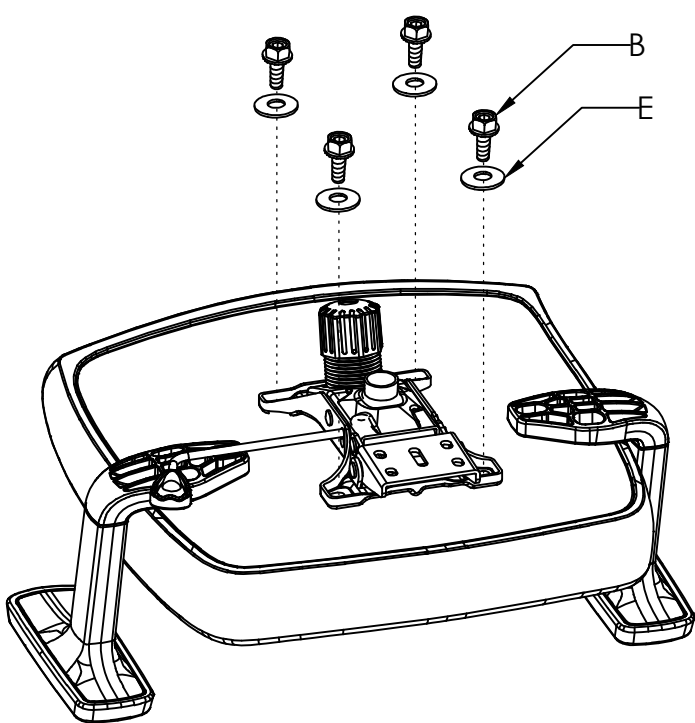3



- 

 
B 1/4"*3/4"
(x4)
- 




E Ø16*Ø6.5*1
(x4)
- 

F 5#
(x1)

4. Follow the order of screw(C&D), mechanism, backrest and fix the backrest to the mechanism.

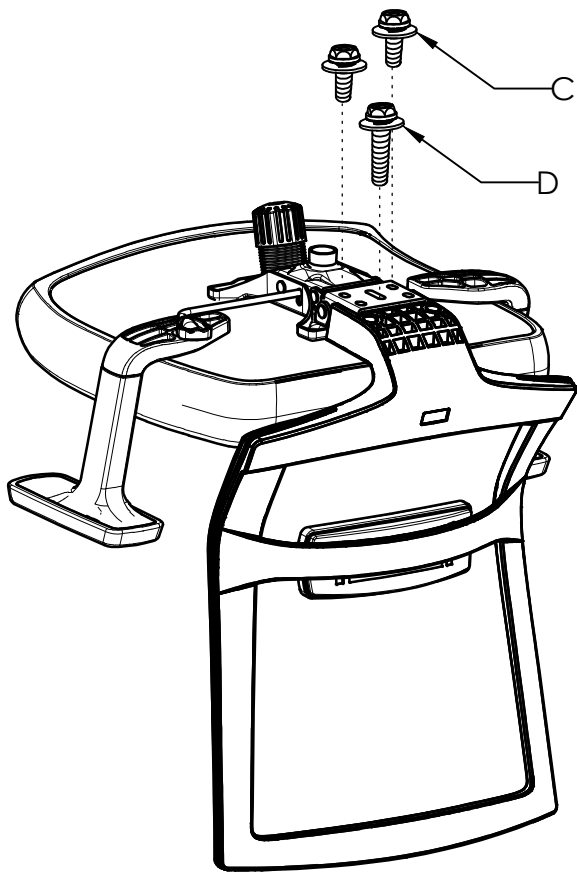
4



- | | | |
|---|---|---|
|  |  |  |
| C M8*20
(x2) | D M8*35
(x1) | F 5#
(x1) |

-
5. Align the mechanism hole with the upper end of the gas lift and lay down the chair vertically. The installation of chair is done.
-

 5

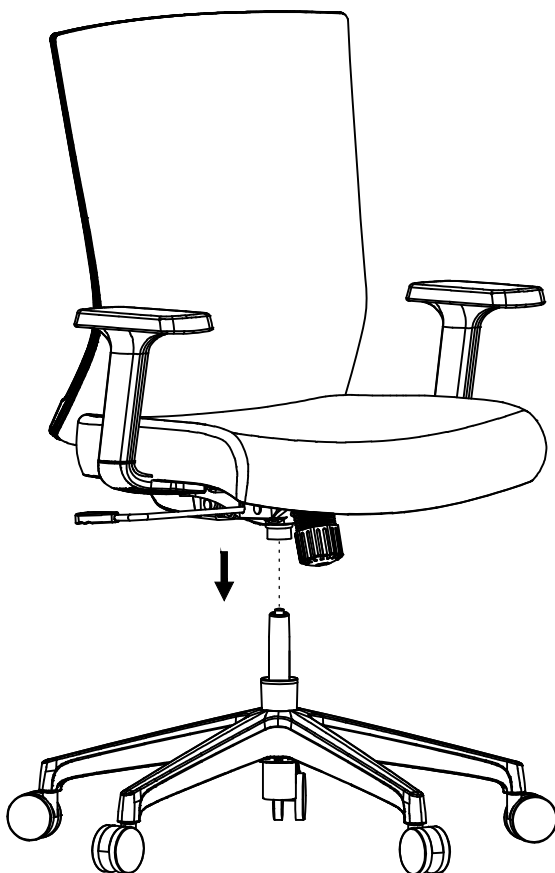


Done !

Function:

1. Adjust Seat Height

Upward: get your body off the seat and pull the lever to lift the seat to an appropriate height.

 
Downward: press down and pull the lever to lower the seat to the appropriate height.

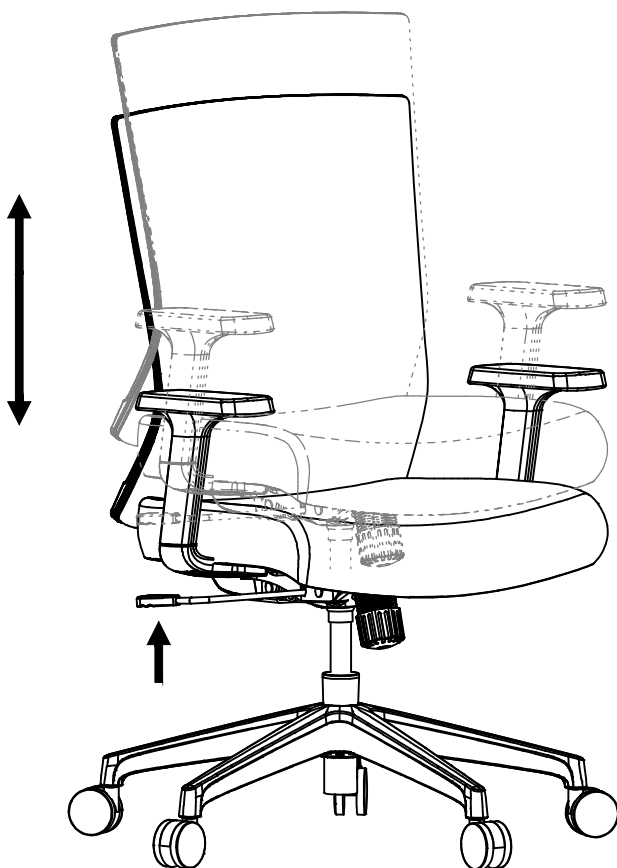

Function:

2. Adjust Lumbar Support

 
Rotate the lumbar support upward or downward to adjust it to an appropriate position.

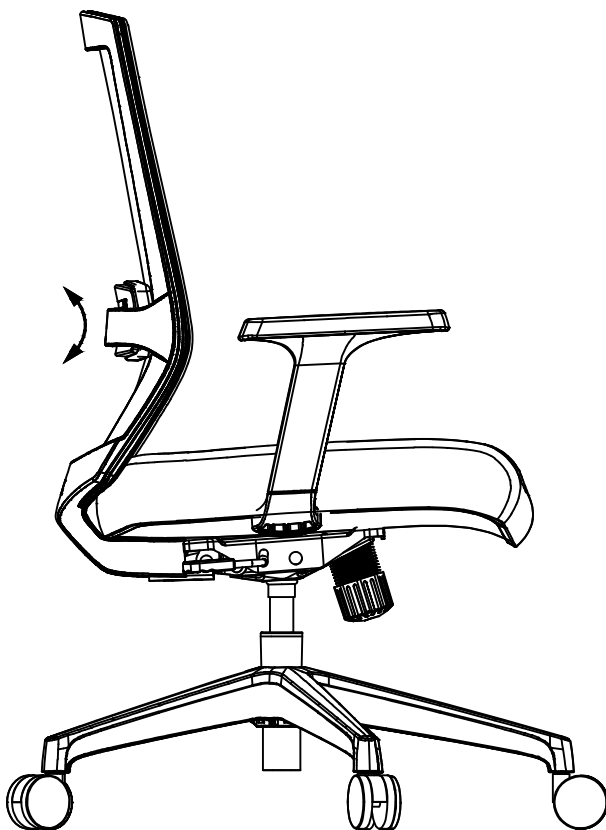

Function:

3. Tilting and Locking Adjustment

 Pull out the lever to tilt the backrest at will, and push the handle inward to lock the backrest.

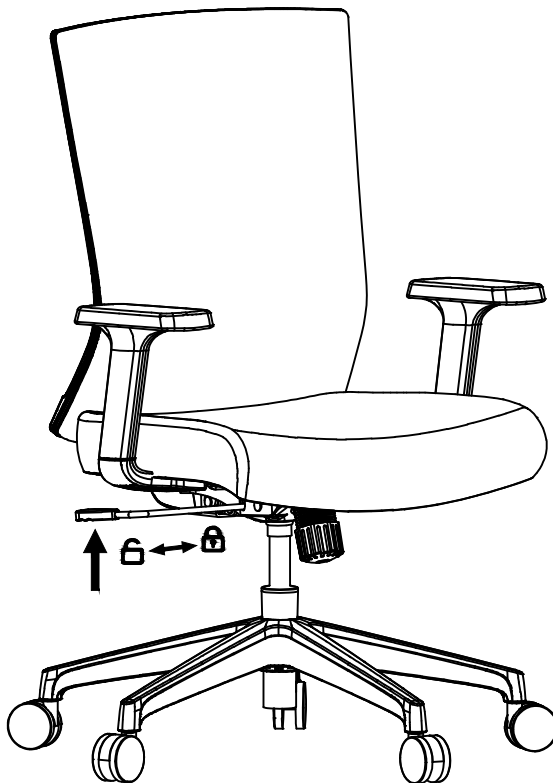


Function:

4. Adjust Backrest Tilt Tension


Rotate the knob under the seat to adjust the tilt tension of backrest according to your need.



 Acceptance note:

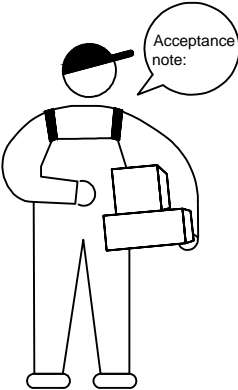


● Clean the surface.

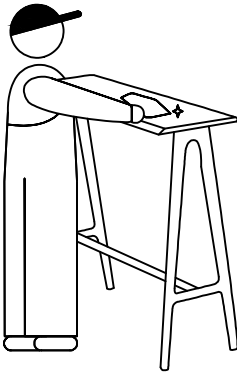 

● Tidy up.



 
● Check and deliver.

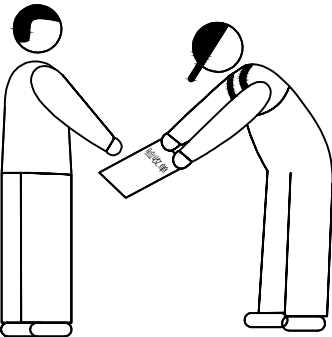



 Suite 150, Building 525 Technology Drive, Irvine, CA.92618

 sunonglobal.com

 949-337-8838

 info.us@isunon.com



 


IRON II Series Installation Manual




This manual is used for the installation of CIR64SW-2&CIR65SW-2
Please read this manual carefully before use and keep it properly.


Assembly note:

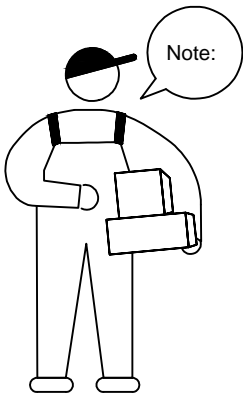

 
● Use a protective mat and handle the product with care.

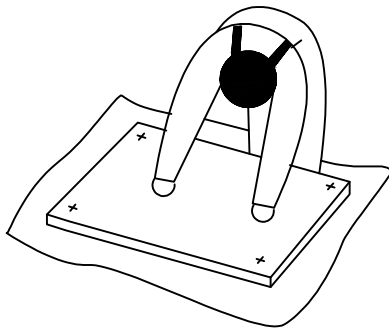

● At least two people are required.

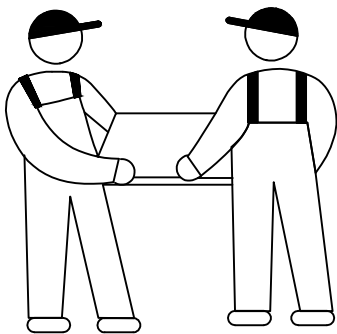 


  ● Contact Sunon if you have any confusions.

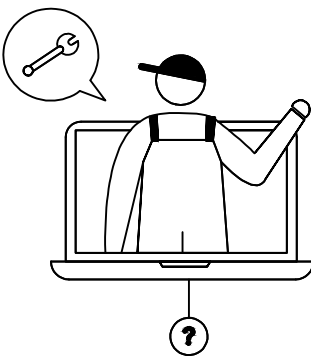



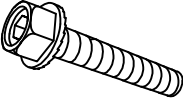


This picture shows all the accessories required, among which some are key accessories.
If you have missed any, please contact Sunon at 949-337-8838

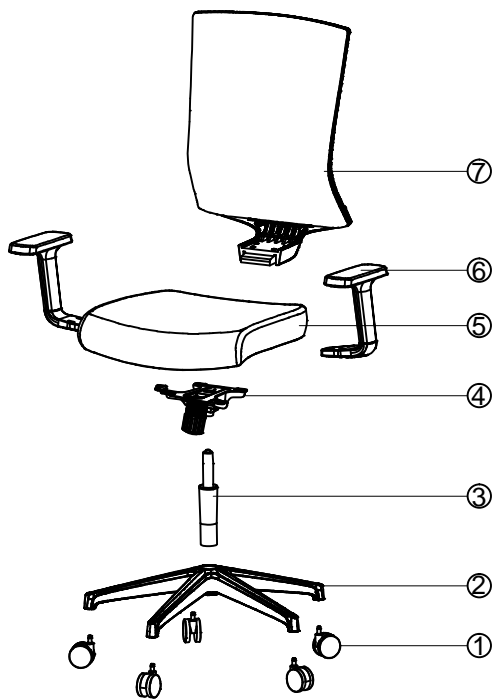Exploded diagram:




No.	Name	Pcs
1	caster	5
2	five-star base	1
3	gas lift	1
4	mechanism	1
5	seat	1
6	armrest	2
7	backrest	1

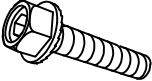Accessory list:

A 			B 			C 		
Screw	1/4"*5/4"	6	Screw	1/4"*3/4"	4	Screw	1/4"*3/2"	4
D 			E 					
Washer	Ø16*Ø6.5*1	14	Allen wrench	5#	1			


1. First fit casters into the five-star base. Then insert the bottom end of the gas lift into the central hole of the base.

 1

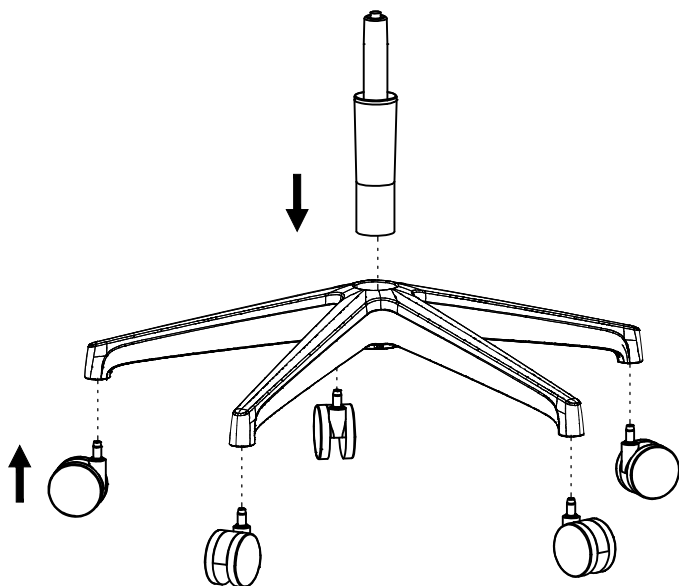


2. Follow the order of screw (A), washer (D), armrests, seat cushion and fix the armrests to the seat cushion.

 2

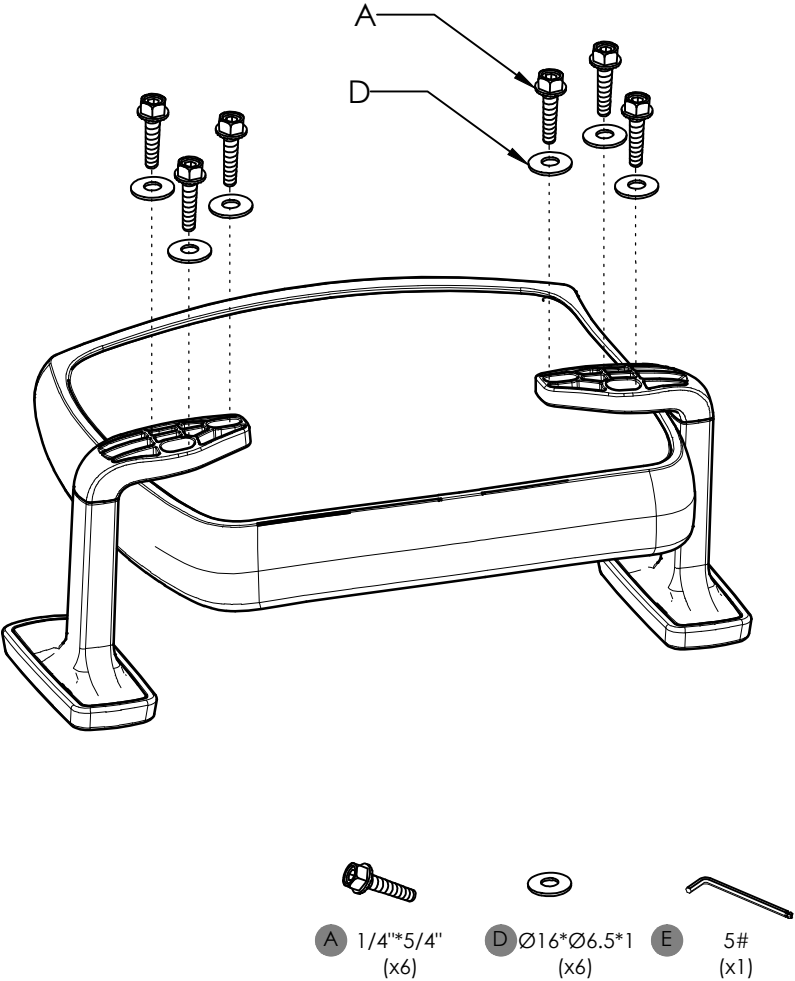


3. Follow the order of screw(B), washer(D), mechanism, seat cushion and fix the mechanism to the seat cushion.

 3

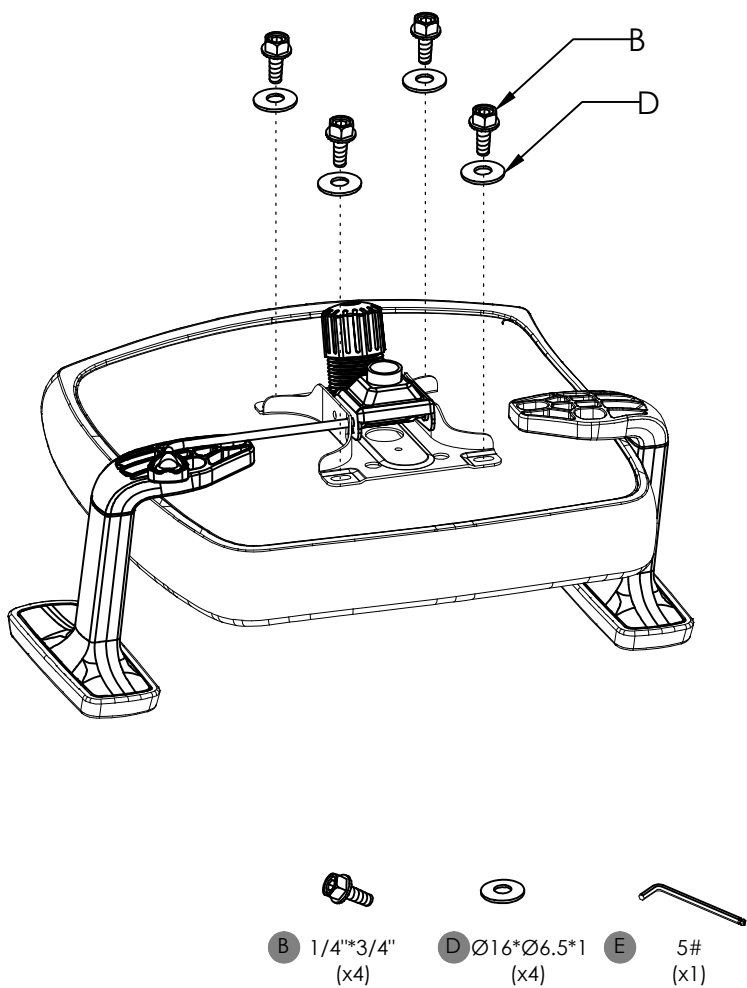

4. Follow the order of screw (C), washer (D), backrest, seat cushion and fix the backrest to the seat cushion.

 
4

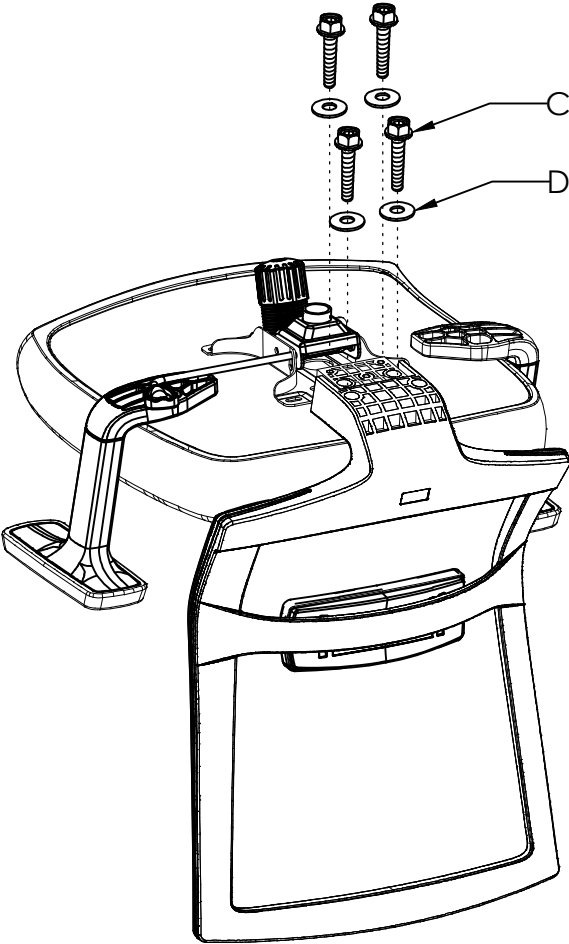

- C 1/4"×3/2" (x4) D Ø16*Ø6.5*1 (x4) E 5# (x1)

-
5. Align the mechanism hole with the upper end of the gas lift and lay down the chair vertically. The installation of chair is done.
-

 5

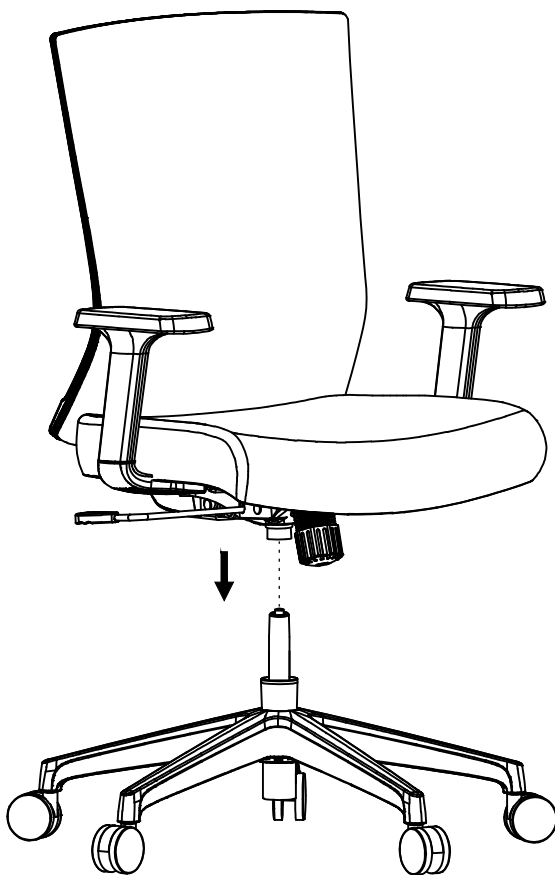


Done !

Function:

1. Adjust Seat Height

 
Upward: get your body off the seat and pull the lever to lift the seat to an appropriate height.
Downward: press down and pull the lever to lower the seat to the appropriate height.

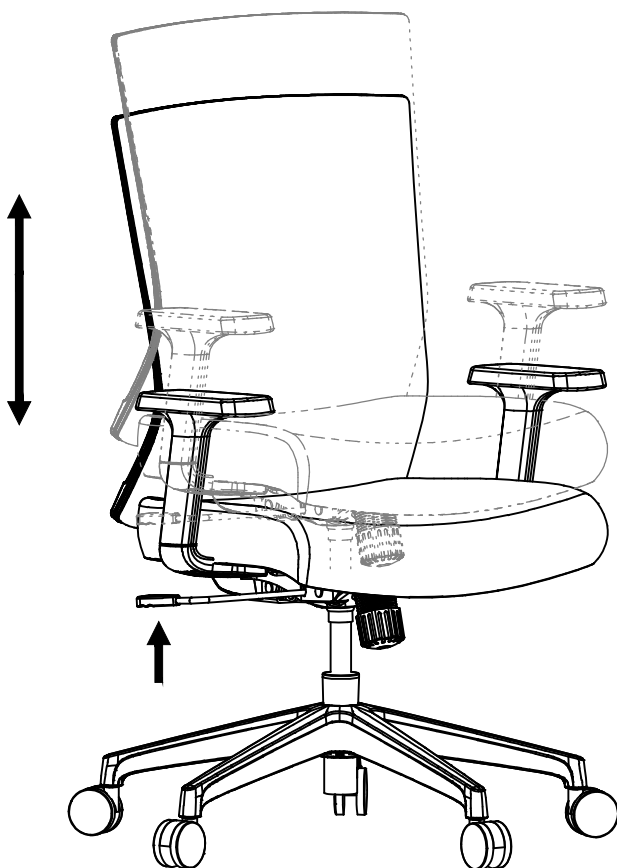

Function:

2. Adjust Lumbar Support

 
Rotate the lumbar support upward or downward to adjust it to an appropriate position.

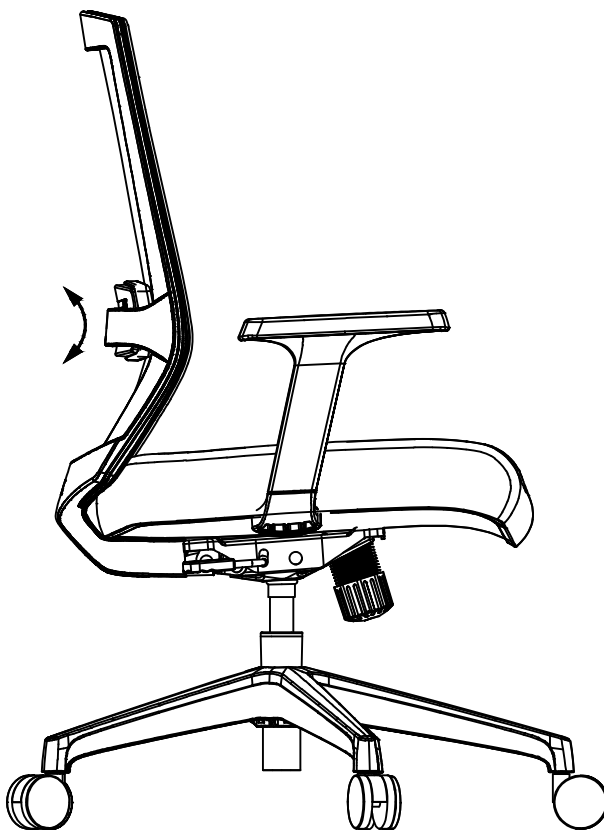

Function:

3. Tilting and Locking Adjustment

 Pull out the lever to tilt the backrest at will, and push the handle inward to lock the backrest.

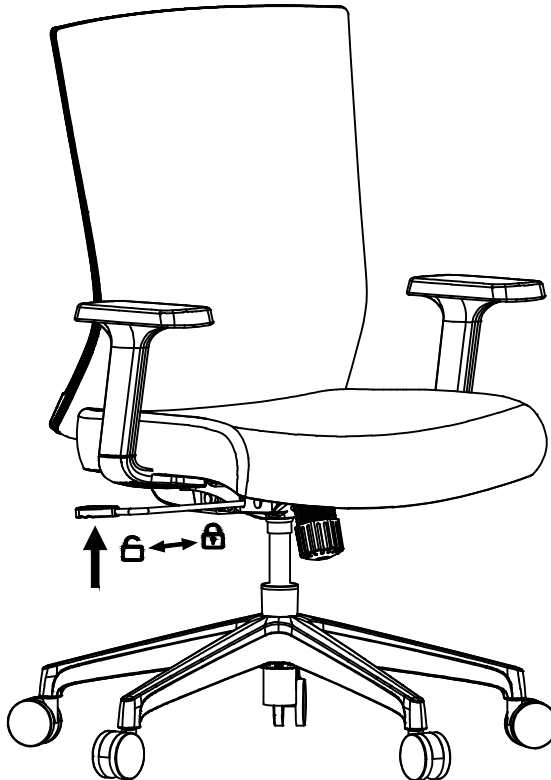


Function:

4. Adjust Backrest Tilt Tension


Rotate the knob under the seat to adjust the tilt tension of backrest according to your need.



 Acceptance note:

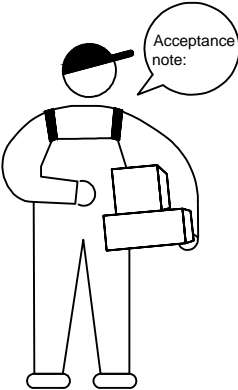


● Clean the surface.

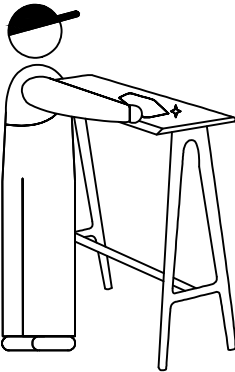 

● Tidy up.



 ● Check and deliver.

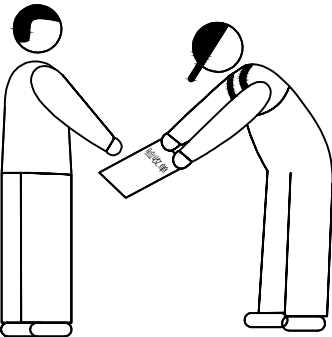




 Suite 150, Building 525 Technology Drive, Irvine, CA.92618

 sunonglobal.com

 949-337-8838

 info.us@isunon.com



 


IRON II Series Installation Manual




This manual is used for the installation of CIR66SW-2
Please read this manual carefully before use and keep it properly.


Assembly note:

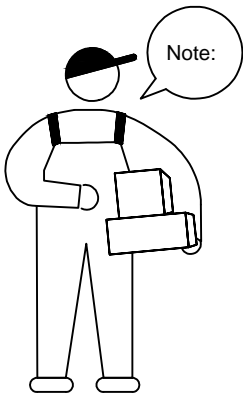

 
● Use a protective mat and handle the product with care.

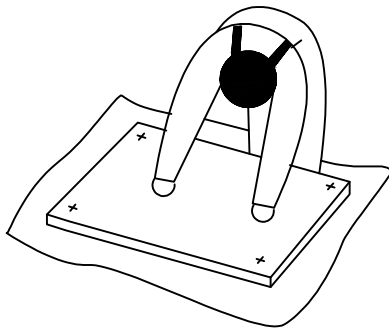

● At least two people are required.

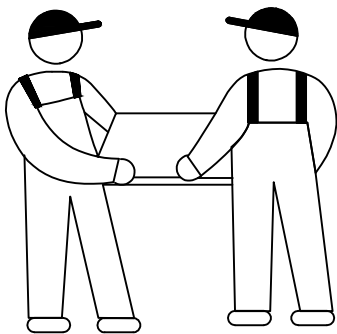 


  ● Contact Sunon if you have any confusions.

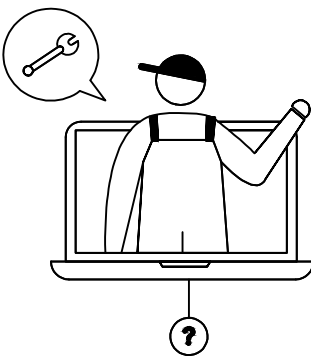



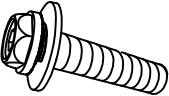


This picture shows all the accessories required, among which some are key accessories.
If you have missed any, please contact Sunon at 949-337-8838

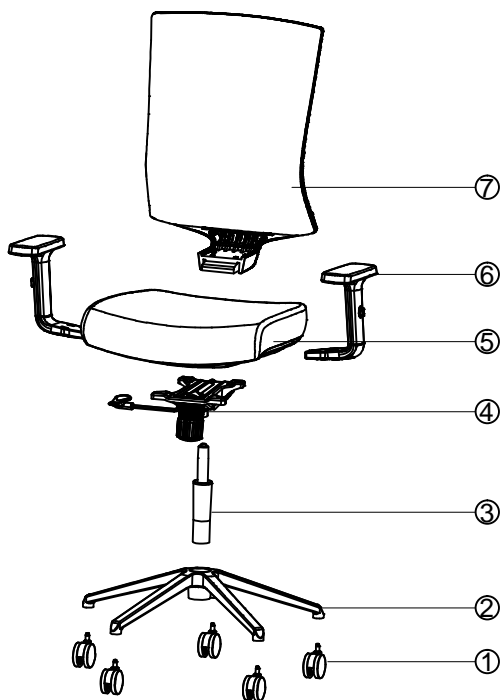Exploded diagram:




No.	Name	Pcs
1	caster	5
2	five-star base	1
3	gas lift	1
4	mechanism	1
5	seat	1
6	armrest	2
7	backrest	1

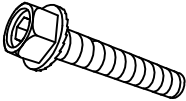Accessory list:

A 			B 			C 		
Screw	1/4"*3/2"	10	Screw	M8*20	2	Screw	M8*35	1
D 			E 					
Washer	Ø16*Ø6.5*1	10	Allen wrench	5#	1			


1. First fit casters into the five-star base. Then insert the bottom end of the gas lift into the central hole of the base.

 1

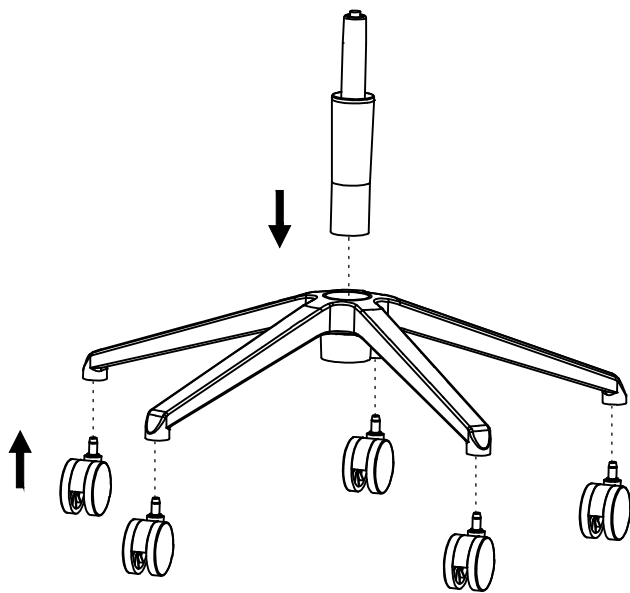

2. Follow the order of screw (A), washer (D), armrests, seat cushion and fix the armrests to the seat cushion.

 2

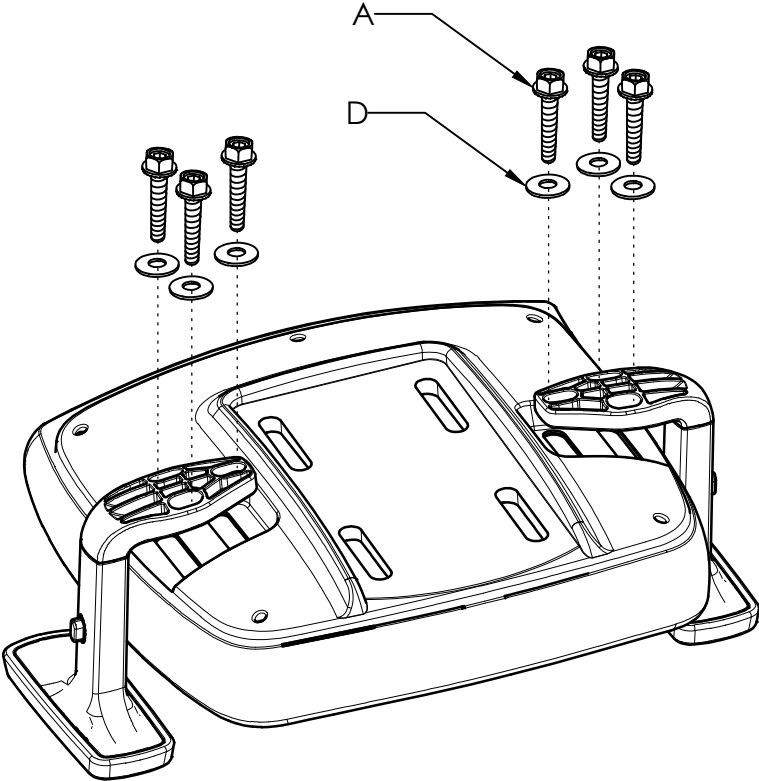


A 1/4"*3/2"
(x6)

D Ø16*Ø6.5*1
(x6)

E 5#
(x1)


3. Follow the order of screw(A), washer(D), mechanism, seat cushion and fix the mechanism to the seat cushion.

 3

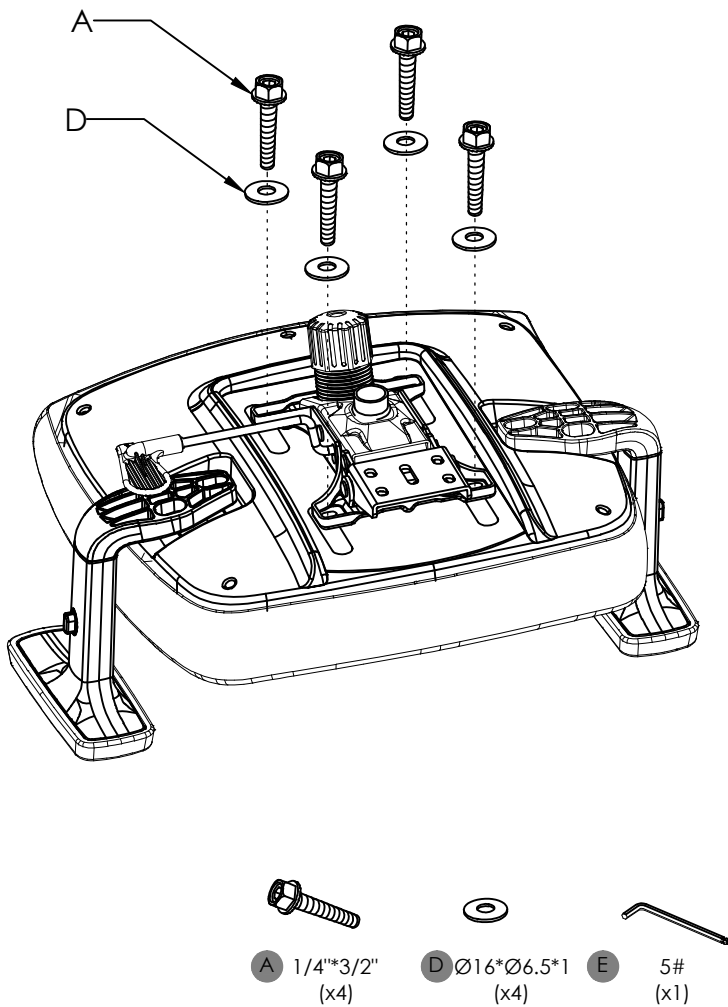


4. Follow the order of screw(B&C), mechanism, backrest and fix the backrest to the mechanism.

 4

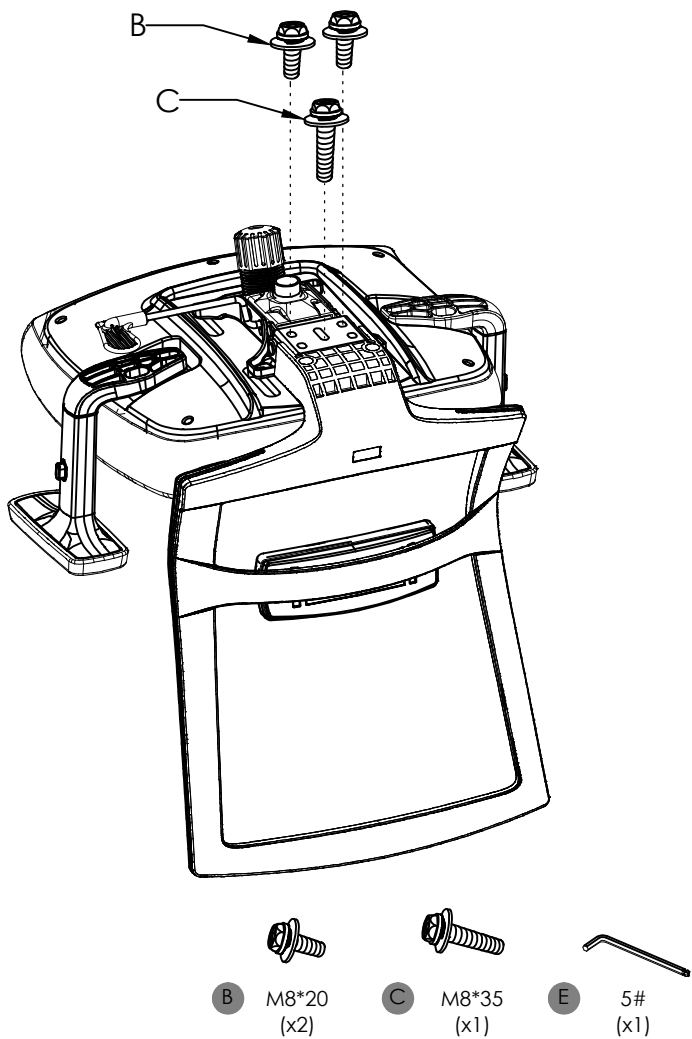

-
5. Align the mechanism hole with the upper end of the gas lift and lay down the chair vertically. The installation of chair is done.
-

 5

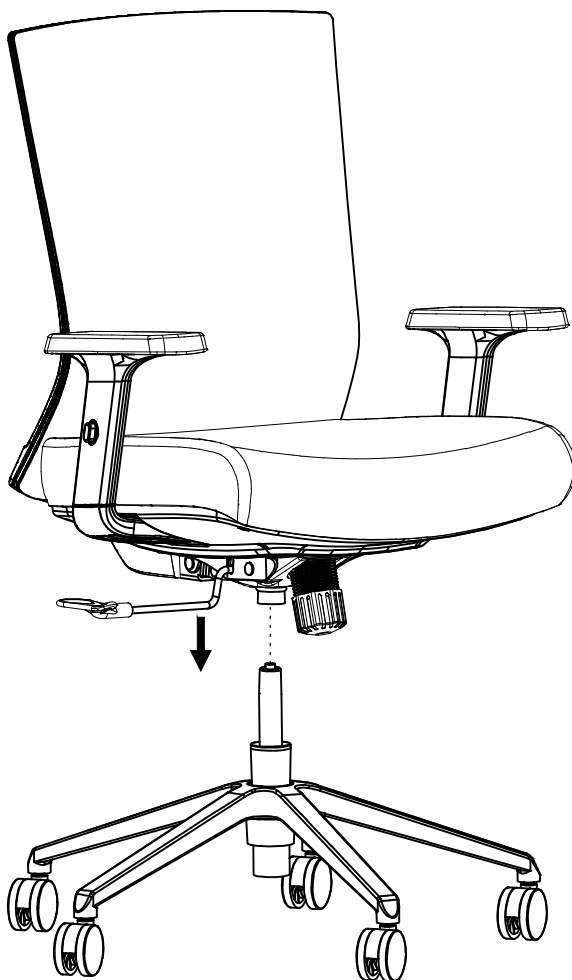


Done !

Function:

1. Adjust Armrest Height

Upward: press and hold the button and lift the armrest to a desired height.

 Downward: press and hold the button and push down the armrest to a desired height.

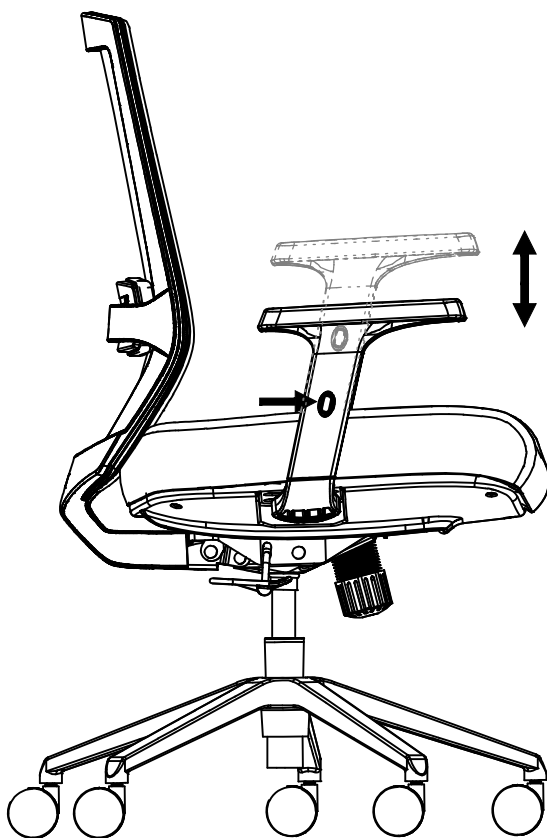


Function:

2. Adjust Seat Height

Upward: get your body off the seat and pull the lever to lift the seat to an appropriate height.

 
Downward: press down and pull the lever to lower the seat to the appropriate height.

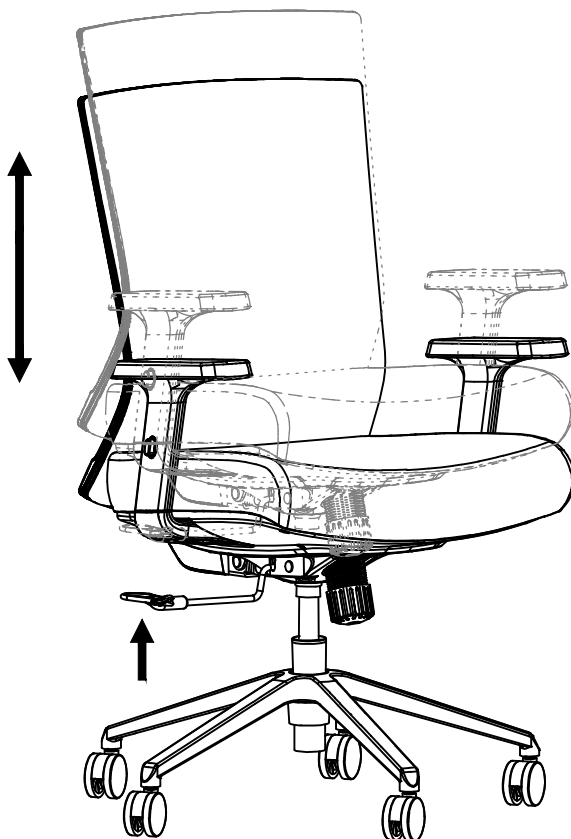

Function:

3. Adjust Lumbar Support

 
Rotate the lumbar support upward or downward to adjust it to an appropriate position.

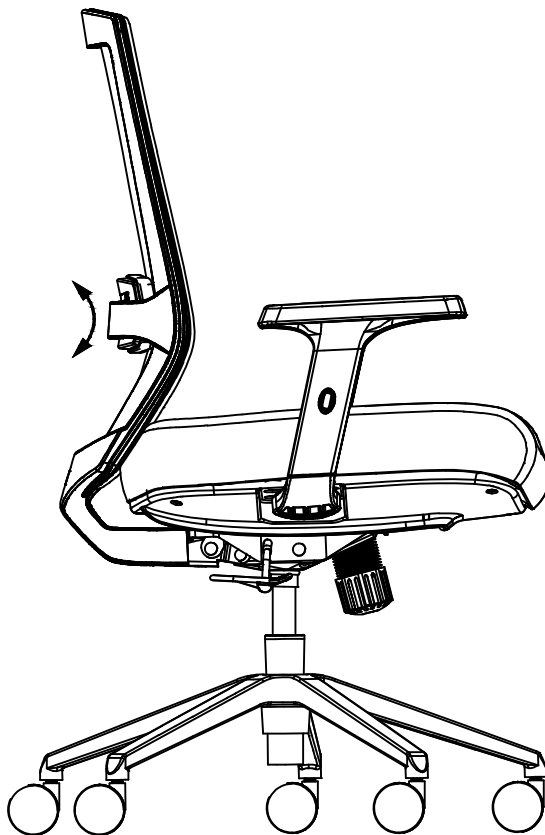

Function:

4. Tilting and Locking Adjustment

 Push the lever outward for tilting operation, and the chair will be locked once the lever was pulled back. 3 positions can be locked.

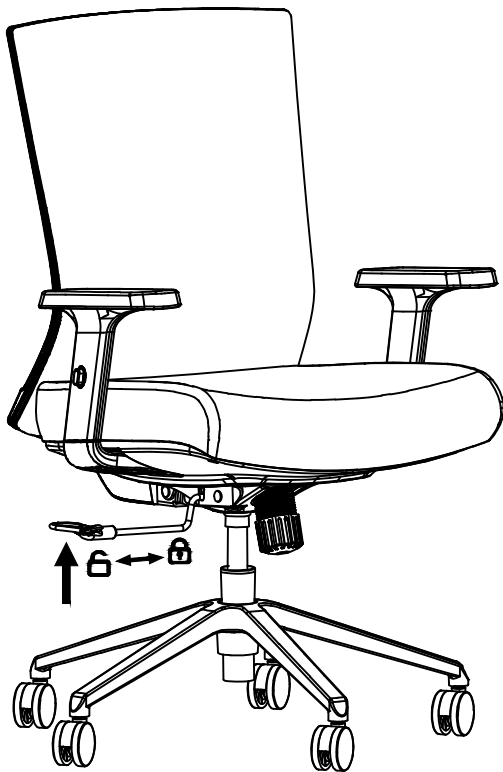


Function:

5. Adjust Backrest Tilt Tension


Rotate the knob under the seat to adjust the tilt tension of backrest according to your need.



 Acceptance note:

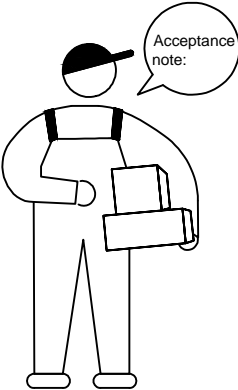


● Clean the surface.

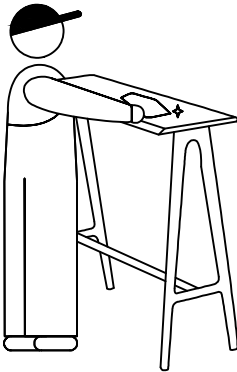 

● Tidy up.



 
● Check and deliver.

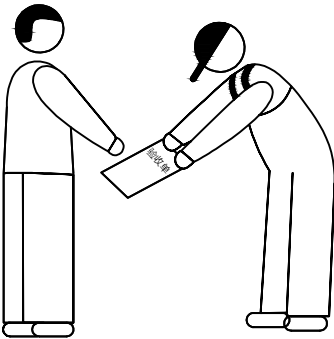



 Suite 150, Building 525 Technology Drive, Irvine, CA.92618

 sunonglobal.com

 
 949-337-8838

 info.us@isunon.com






IRON II Series Installation Manual

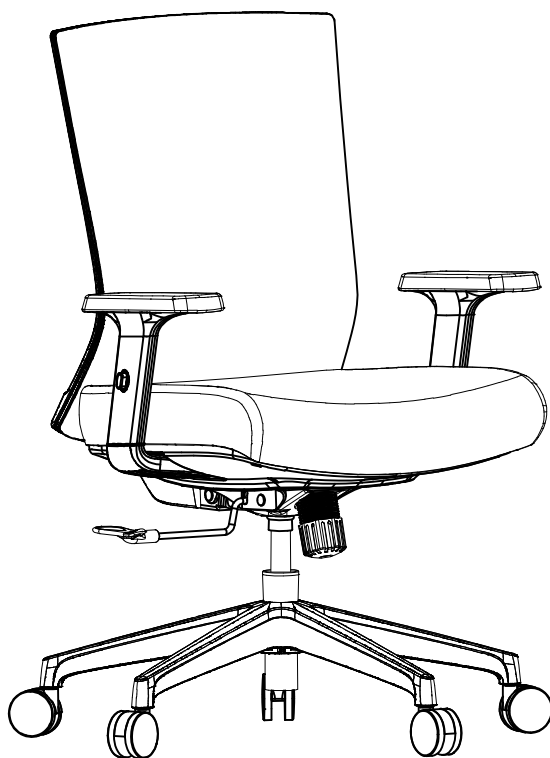


This manual is used for the installation of CIR69SW-2
Please read this manual carefully before use and keep it properly.

 
Assembly note:

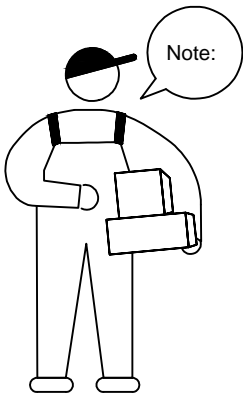

 
● Use a protective mat and handle the product with care.

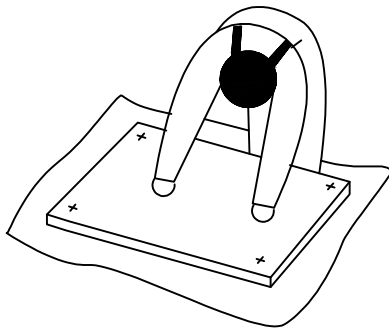

● At least two people are required.

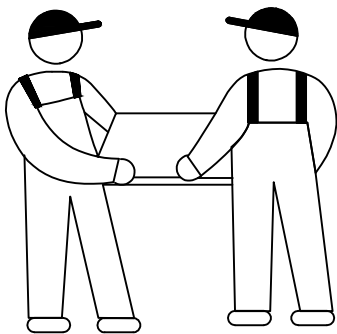 


  ● Contact Sunon if you have any confusions.

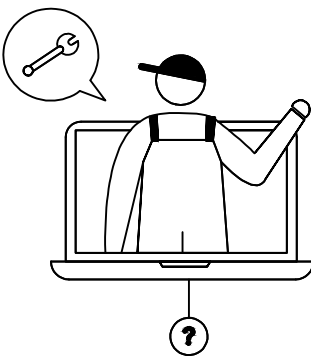



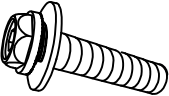


This picture shows all the accessories required, among which some are key accessories.
If you have missed any, please contact Sunon at 949-337-8838

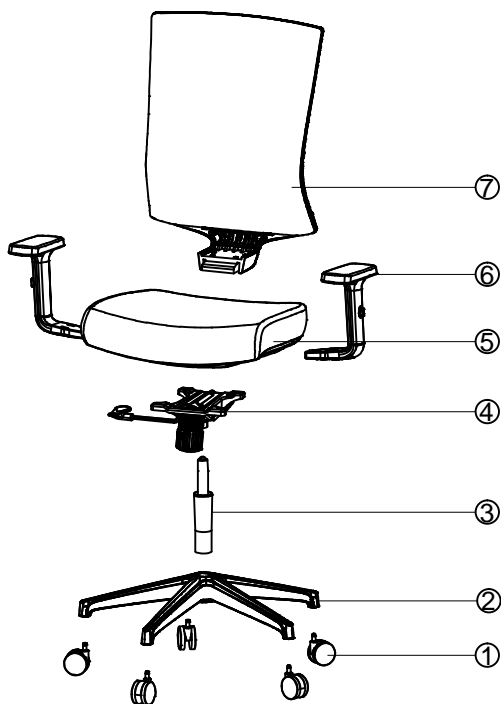Exploded diagram:




No.	Name	Pcs
1	caster	5
2	five-star base	1
3	gas lift	1
4	mechanism	1
5	seat	1
6	armrest	2
7	backrest	1

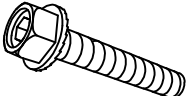Accessory list:

A 			B 			C 		
Screw	1/4"*3/2"	10	Screw	M8*20	2	Screw	M8*35	1
D 			E 					
Washer	Ø16*Ø6.5*1	10	Allen wrench	5#	1			


1. First fit casters into the five-star base. Then insert the bottom end of the gas lift into the central hole of the base.

 1

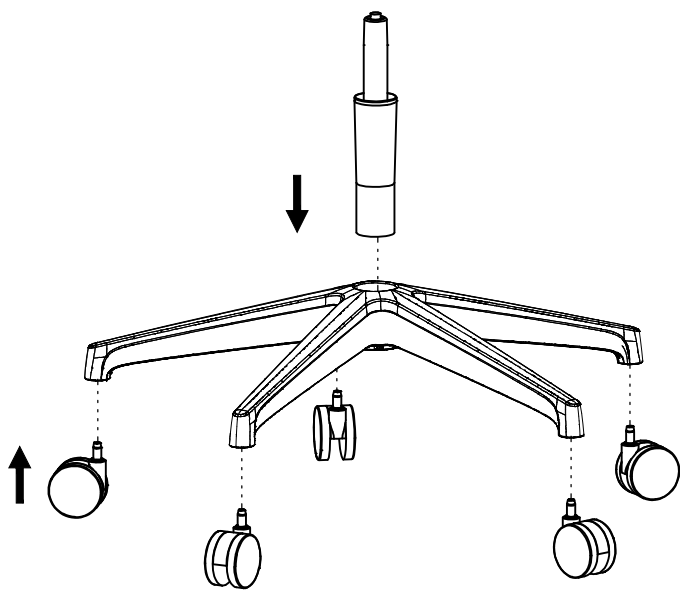

2. Follow the order of screw (A), washer (D), armrests, seat cushion and fix the armrests to the seat cushion.

 
2

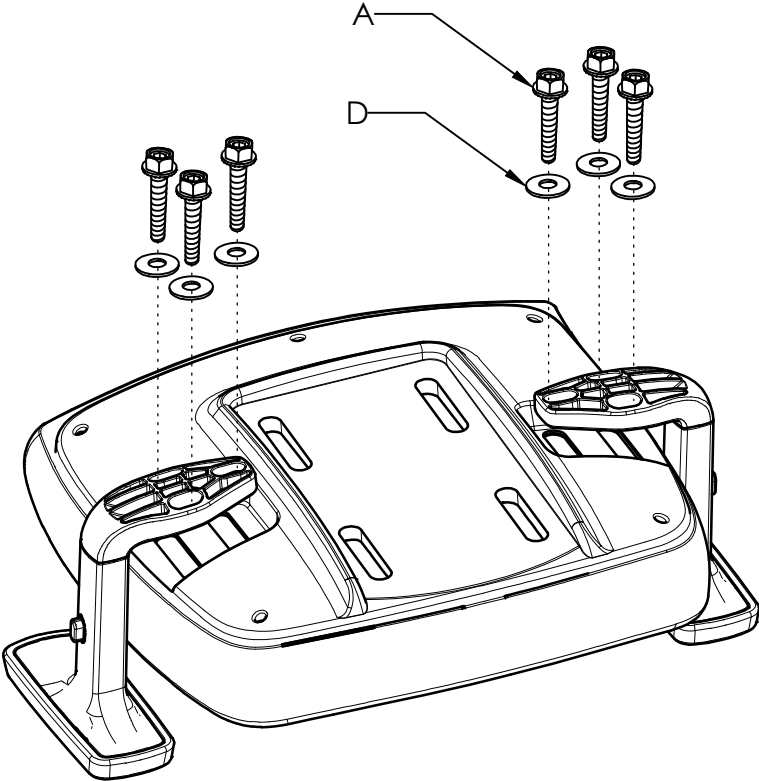

- A 1/4"×3/2" (x6) D Ø16*Ø6.5*1 (x6) E 5# (x1)


3. Follow the order of screw(A), washer(D), mechanism, seat cushion and fix the mechanism to the seat cushion.

 3

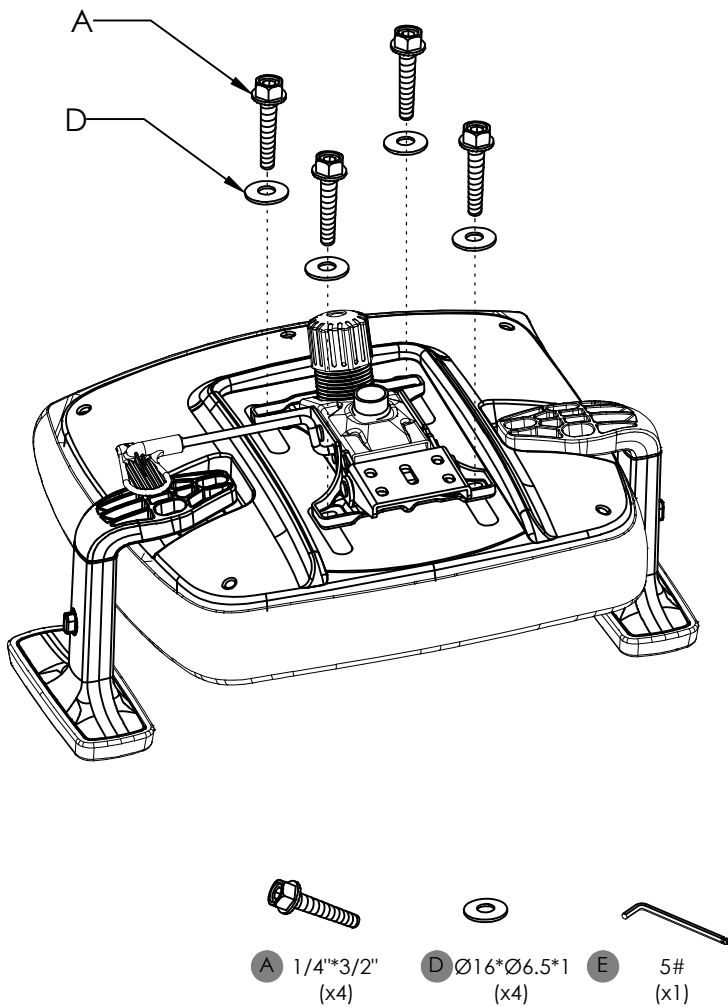

4. Follow the order of screw(B&C), mechanism, backrest and fix the backrest to the mechanism.

 4

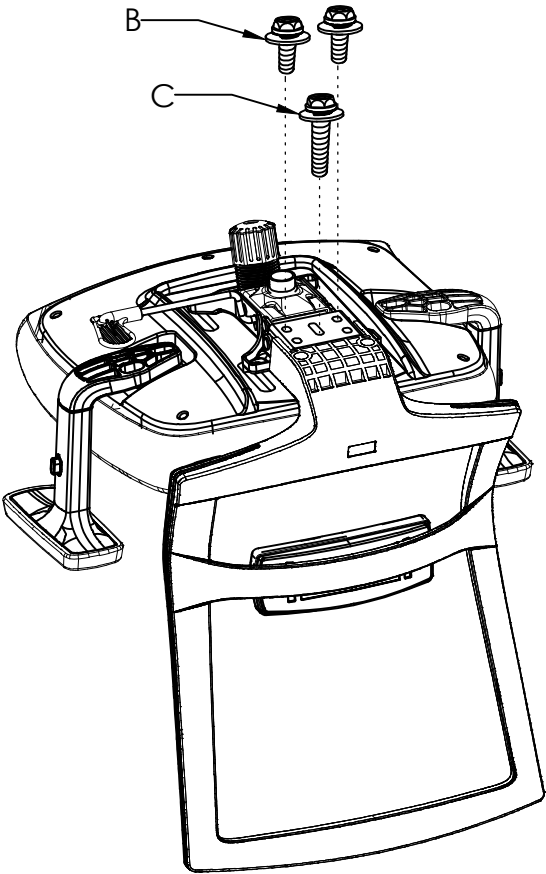


B M8*20
(x2)

C M8*35
(x1)

E 5#
(x1)

-
5. Align the mechanism hole with the upper end of the gas lift and lay down the chair vertically. The installation of chair is done.
-

 5

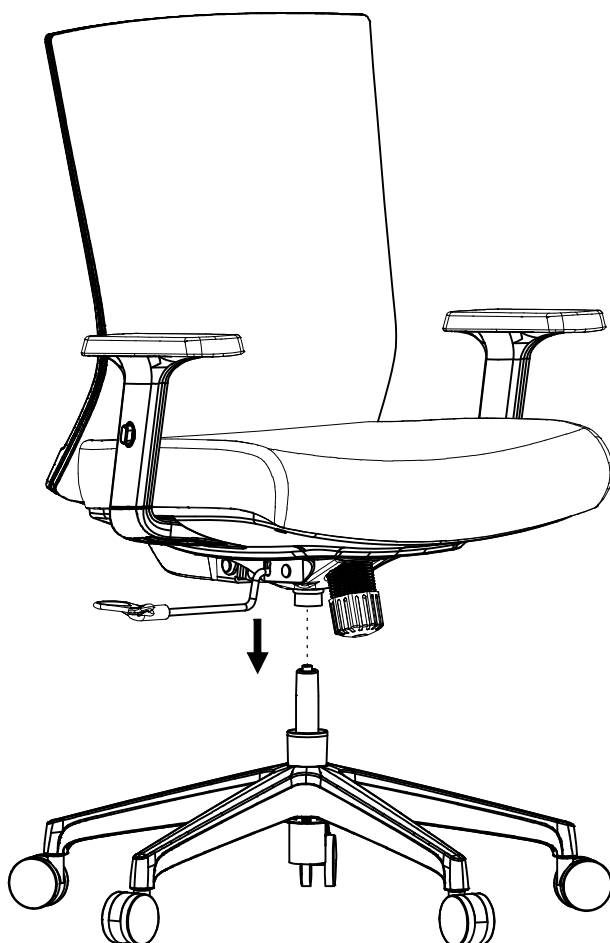


Done !

Function:

1. Adjust Armrest Height

Upward: press and hold the button and lift the armrest to a desired height.

 
Downward: press and hold the button and push down the armrest to a desired height.

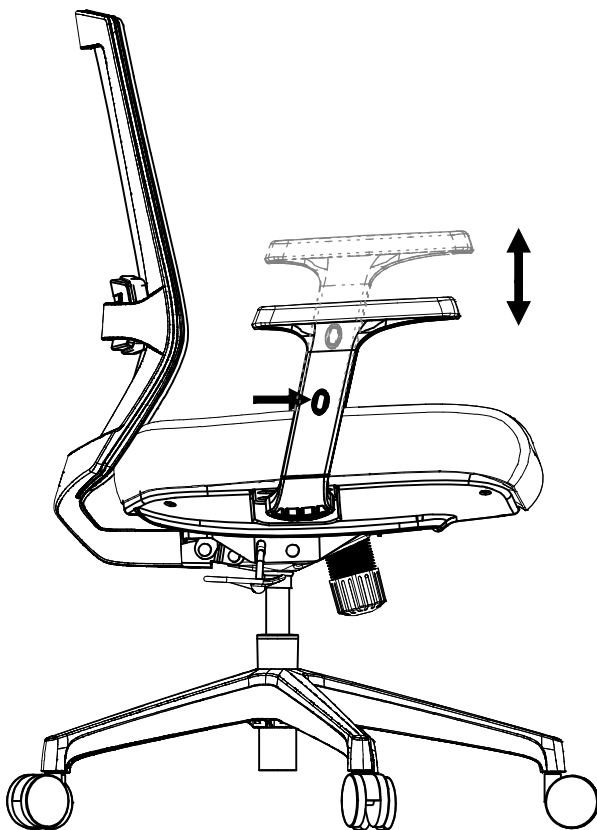

Function:

2. Adjust Seat Height

 
Upward: get your body off the seat and pull the lever to lift the seat to an appropriate height.
Downward: press down and pull the lever to lower the seat to the appropriate height.

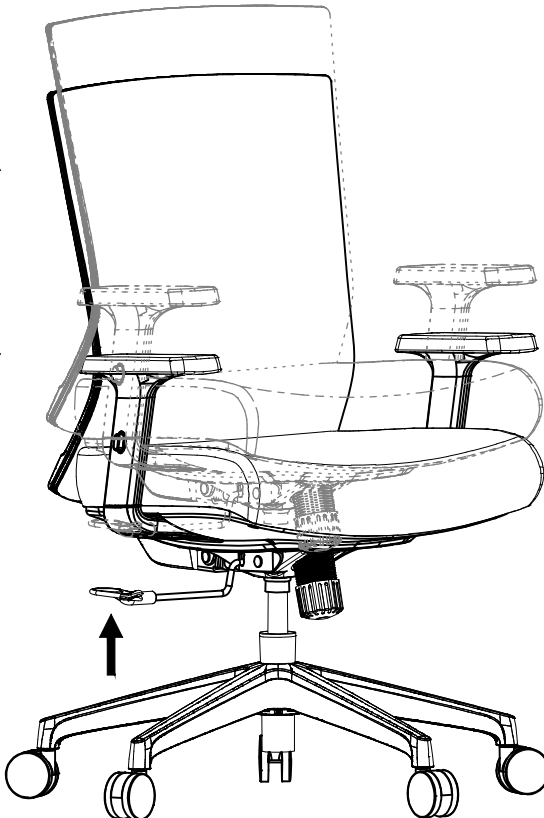

Function:

3. Adjust Lumbar Support

 
Rotate the lumbar support upward or downward to adjust it to an appropriate position.

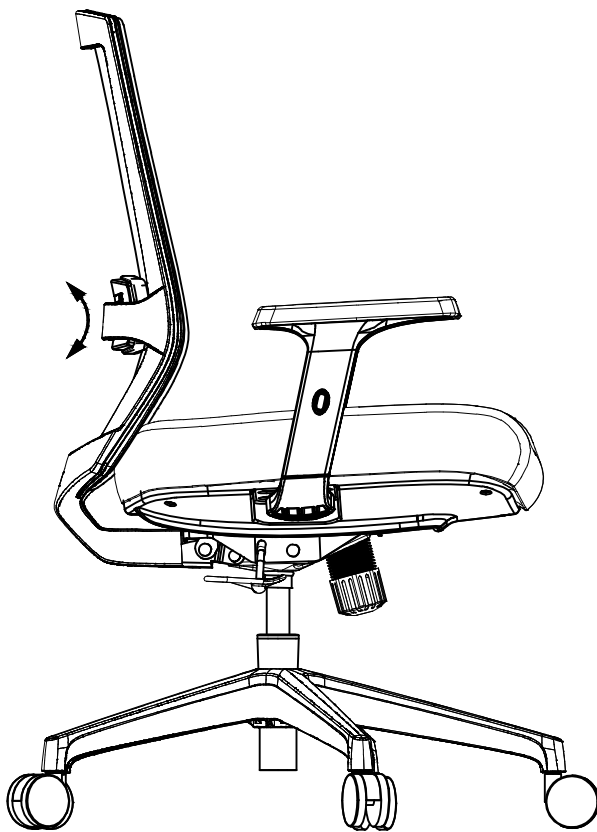

Function:

4. Tilting and Locking Adjustment

 
Push the lever outward for tilting operation, and the chair will be locked once the lever was pulled back. 3 positions can be locked.

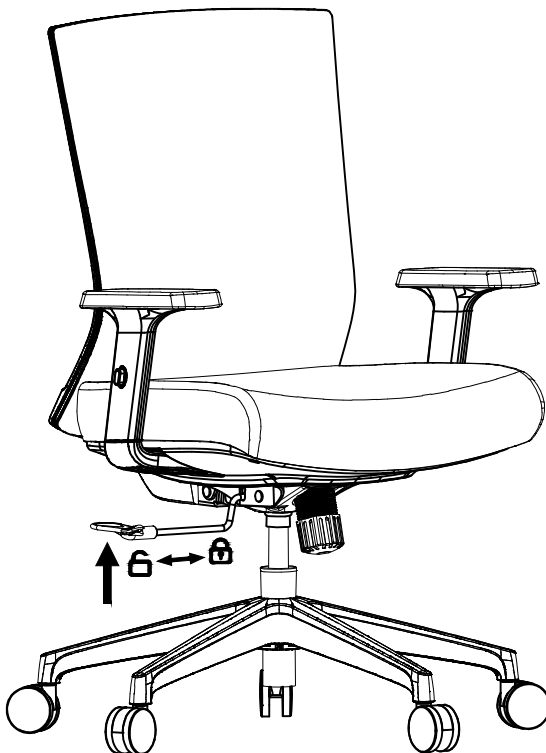


Function:

5. Adjust Backrest Tilt Tension

 
Rotate the knob under the seat to adjust the tilt tension of backrest according to your need.

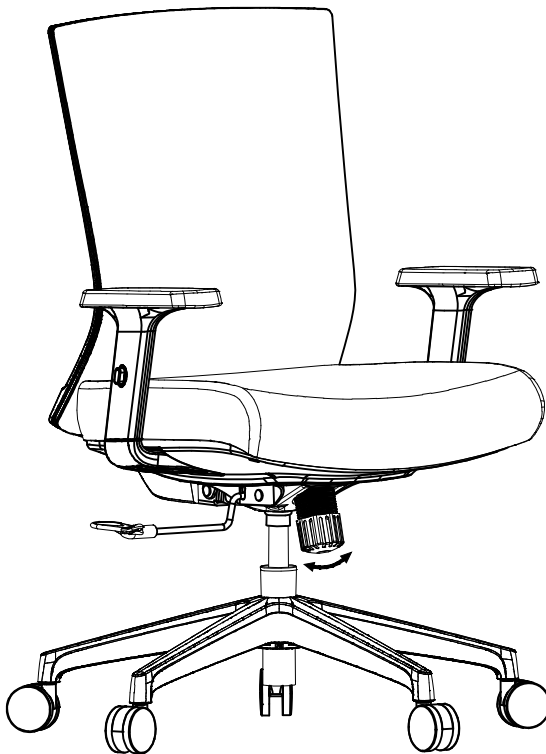

Acceptance note:

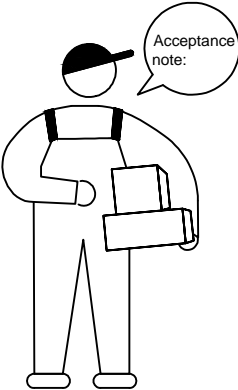 


● Clean the surface.

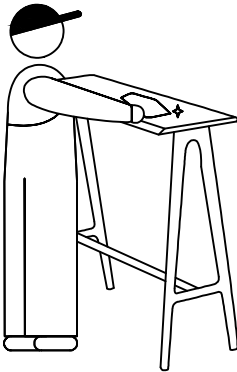 

● Tidy up.



 ● Check and deliver.

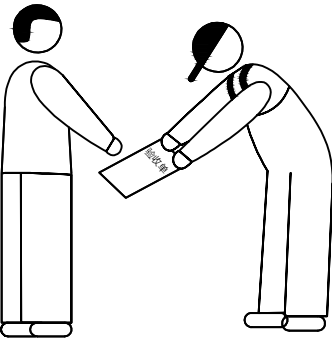




 Suite 150, Building 525 Technology Drive, Irvine, CA.92618

 sunonglobal.com

 
 949-337-8838

 info.us@isunon.com






IRON II Series Installation Manual

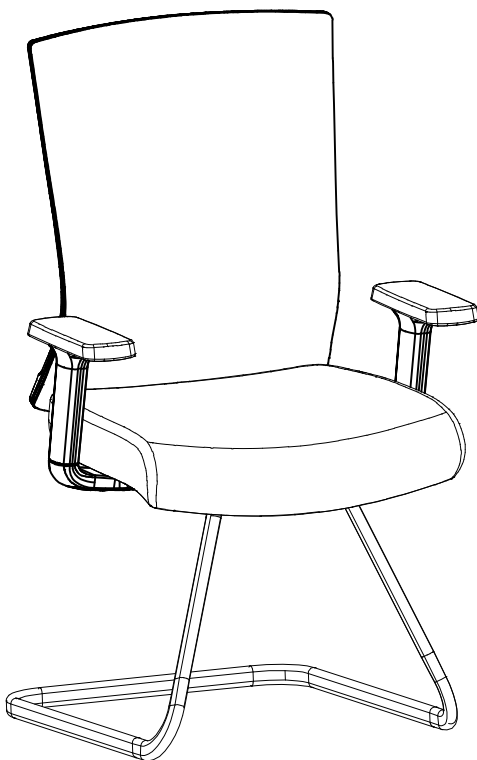


This manual is used for the installation of CIR70SW-2&CIR71SW-2
Please read this manual carefully before use and keep it properly.

 
Assembly note:

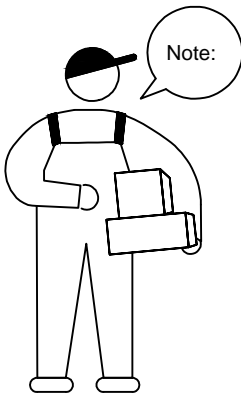

 
● Use a protective mat and handle the product with care.

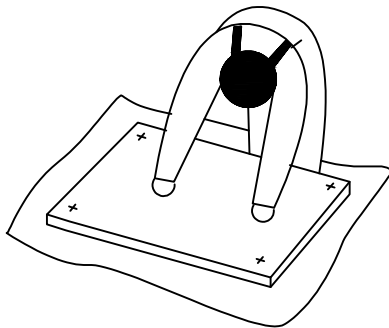

● At least two people are required.

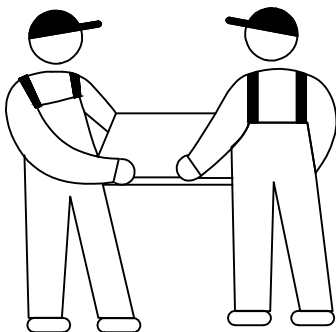 


  ● Contact Sunon if you have any confusions.

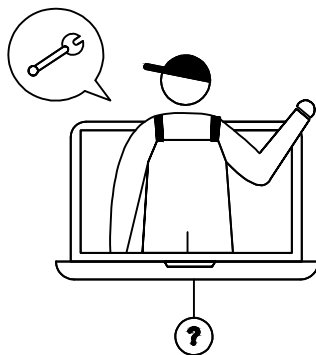




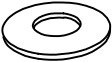

This picture shows all the accessories required, among which some are key accessories.
If you have missed any, please contact Sunon at 949-337-8838

Exploded diagram:

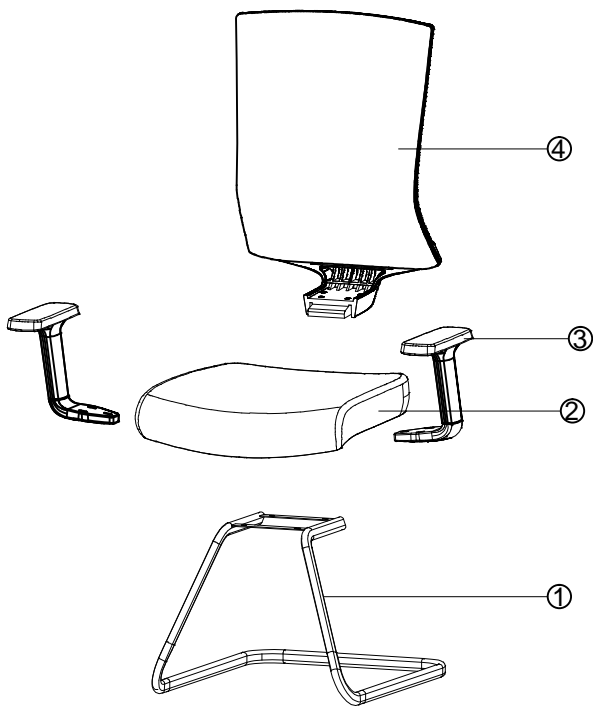


No.	Name	Pcs
1	foot	1
2	seat	1
3	armrest	2
4	backrest	1

Accessory list:

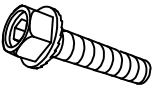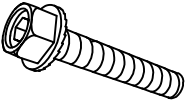A 			B 			C 		
Screw	1/4"*5/4"	10	Screw	1/4"*3/2"	4	Washer	Ø16*Ø6.5*1	10
D 			E 					
Washer	Ø9(D20)	4	Allen wrench	5#	1			

1. Follow the order of screw (A), washer (C), armrests, seat cushion and fix the armrests to the seat cushion.

 1

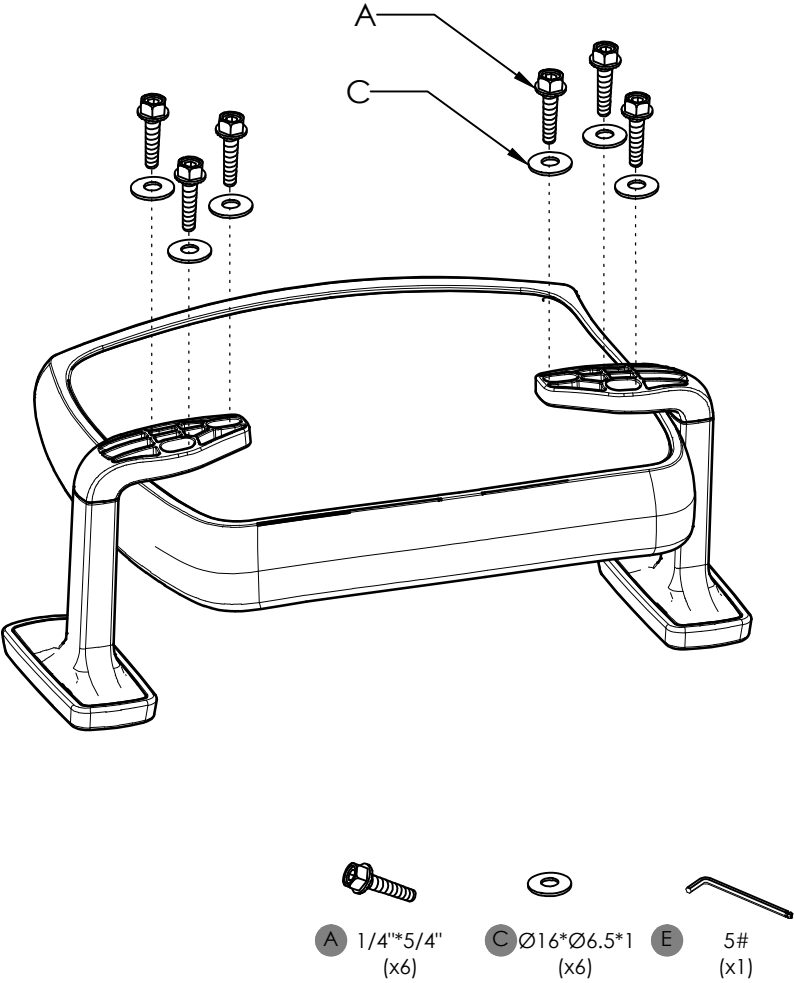


2. Follow the order of screw(B), washer(C), backrest, seat cushion and fix the backrest to the seat cushion.

2



3. Follow the order of screw(A), washer(D), foot, seat cushion and fix the foot to the seat cushion.

 
3

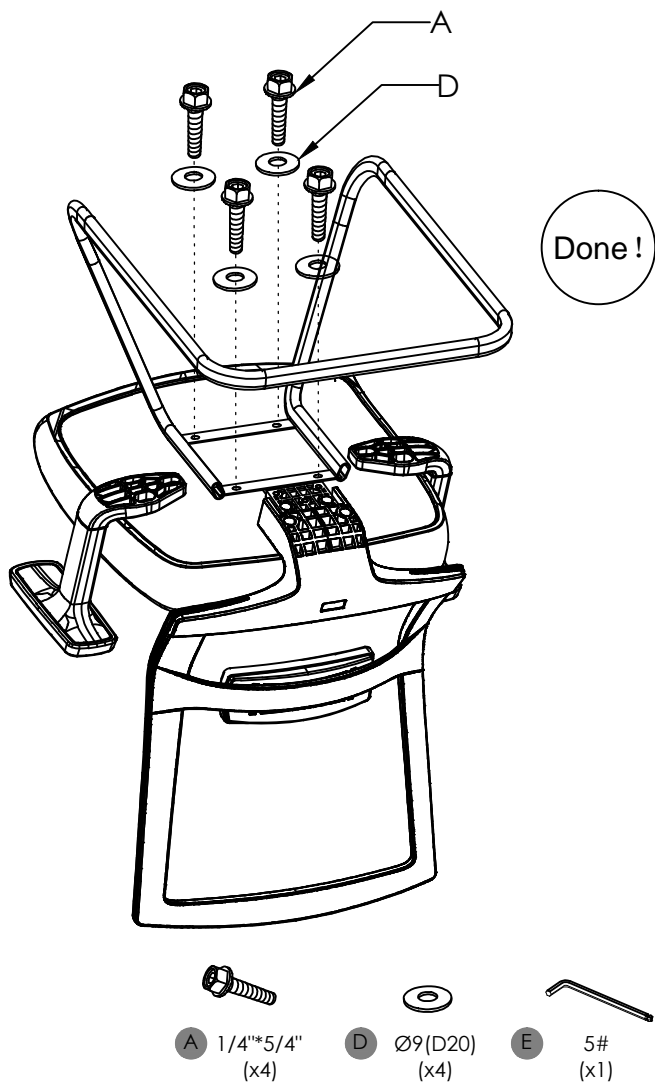


Function:

1. Adjust Lumbar Support

 
Rotate the lumbar support upward or downward to adjust it to an appropriate position.

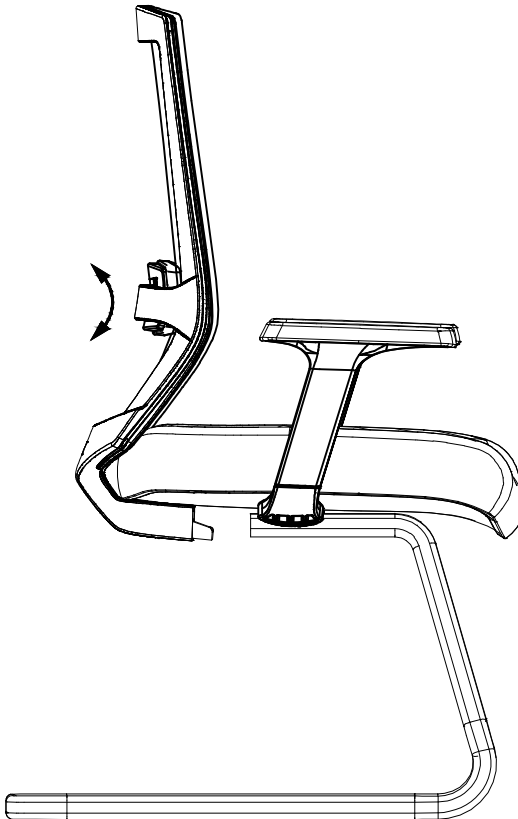

Acceptance note:

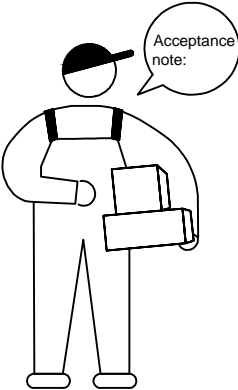 


● Clean the surface.

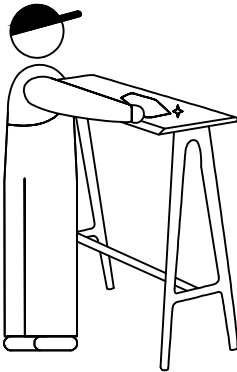 

● Tidy up.



 
● Check and deliver.

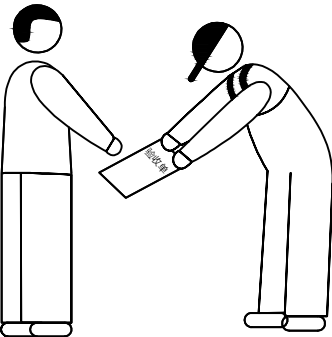



 Suite 150, Building 525 Technology Drive, Irvine, CA.92618

 sunonglobal.com

 949-337-8838

 info.us@isunon.com



 


IRON II Series Installation Manual




This manual is used for the installation of MG.CIR73BW-2
Please read this manual carefully before use and keep it properly.


Assembly note:

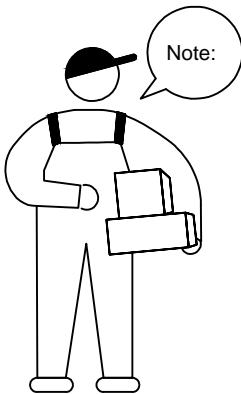


● Use a protective mat and handle the product with care.

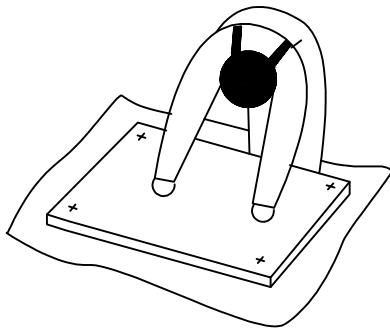

● At least two people are required.

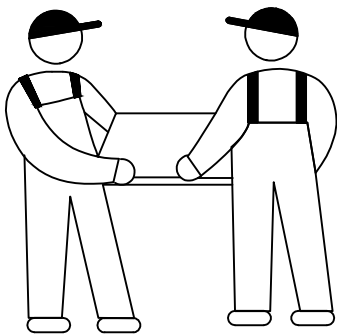


 ● Contact Sunon if you have any confusions.

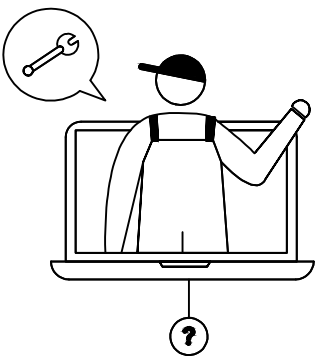



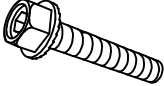



This picture shows all the accessories required, among which some are key accessories.
If you have missed any, please contact Sunon at 949-337-8838

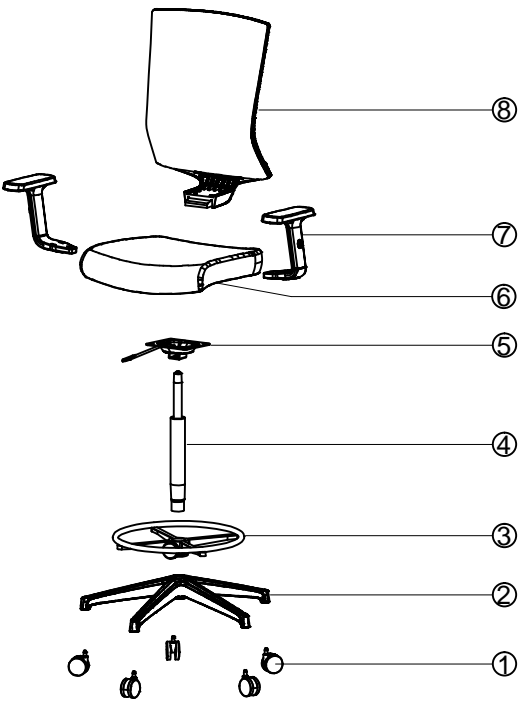Exploded diagram:




No.	Name	Pcs
1	caster	5
2	star base	1
3	foot rest	1
4	gas lift	1
5	mechanism	1
6	seat	1
7	armrest	2
8	backrest	1

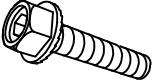Accessory list:

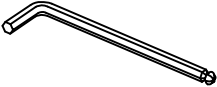A 			B 			C 		
Screw	1/4"*5/4"	6	Screw	1/4"*3/4"	4	Screw	1/4"*3/2"	4
D 			E 			F 		
Washer	Ø9(D20)	4	Washer	Ø16*Ø6.5*1	10	Allen wrench	5#	1


1. Place the star base upside down and insert the 5 casters into the holes at the end of each leg of the star base.

 1

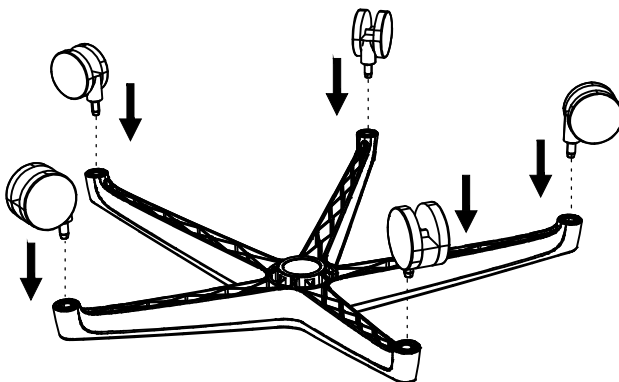


2. Turn the star base over insert the foot rest from the bottom of the gas lift; insert gas lift with foot rest through the center hole on top of the star base. Then turn the adjustment knob C clockwise to tighten the foot rest.

 2

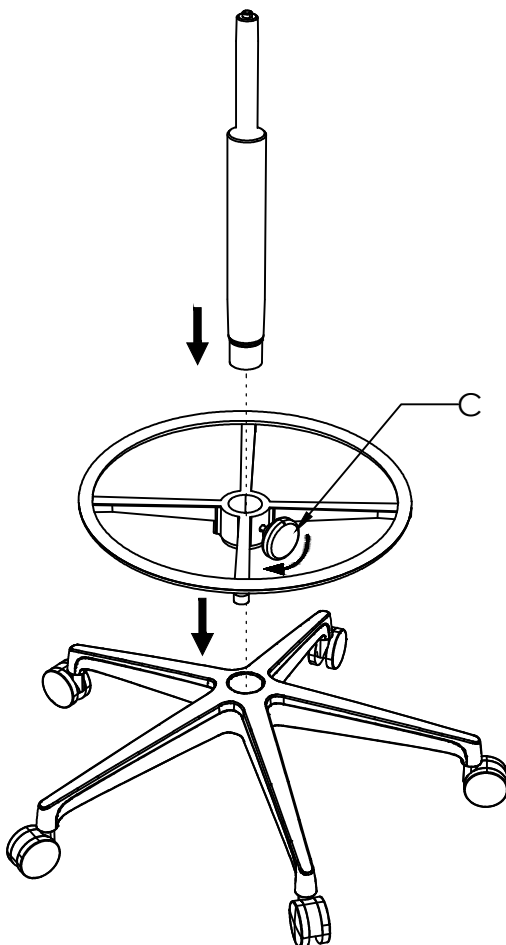


3. Follow the order of screw (A), washer (E), armrests, seat cushion and fix the armrests to the seat cushion.

 3

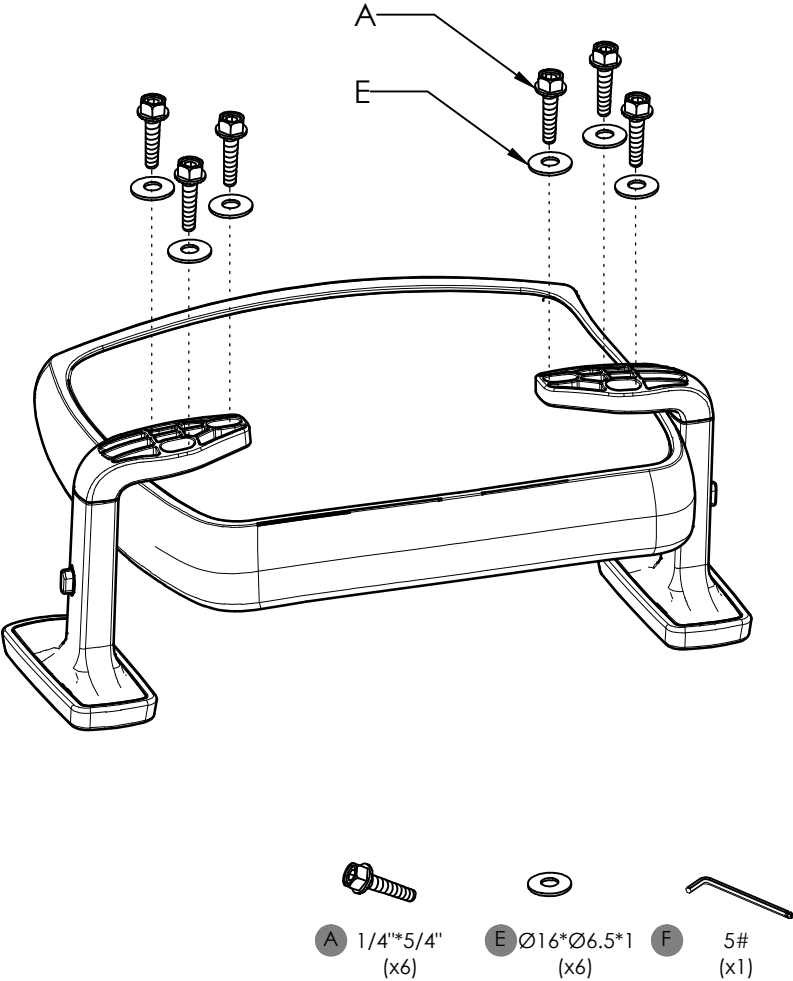


4. Follow the order of screw(B), washer(E), mechanism, seat cushion and fix the mechanism to the seat cushion.

 4

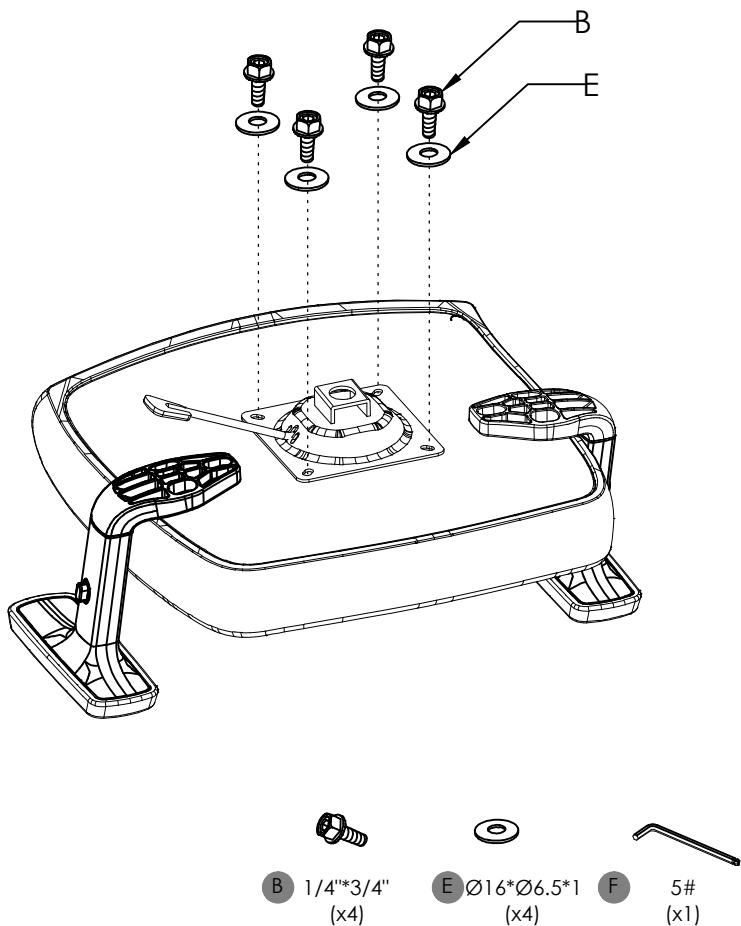

5. Follow the order of screw(C&D), backrest, seat cushion and fix the backrest to the seat cushion.

 5

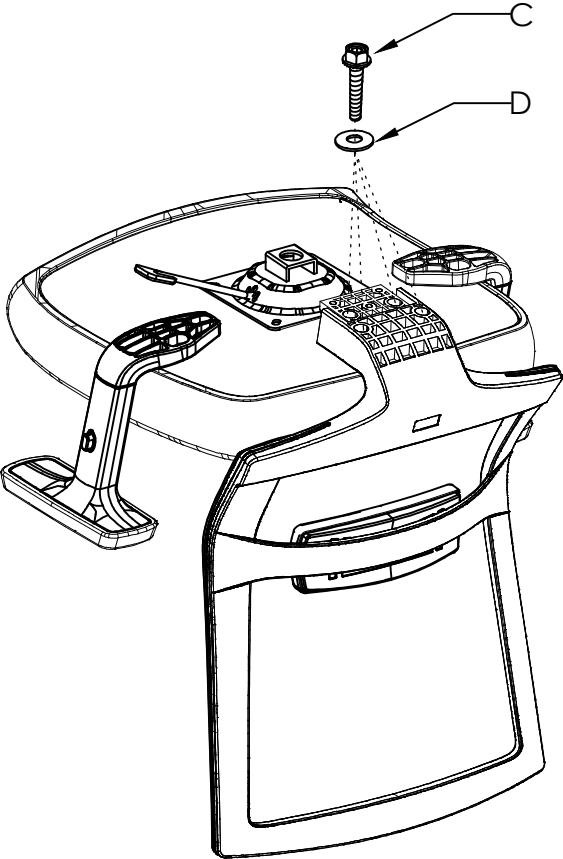


C 1/4"×3/2"
(x4)

D Ø9(D20)
(x4)

F 5#
(x1)

-
6. Align the mechanism hole with the upper end of the gas lift and lay down the chair vertically. The installation of chair is done.
-

 6

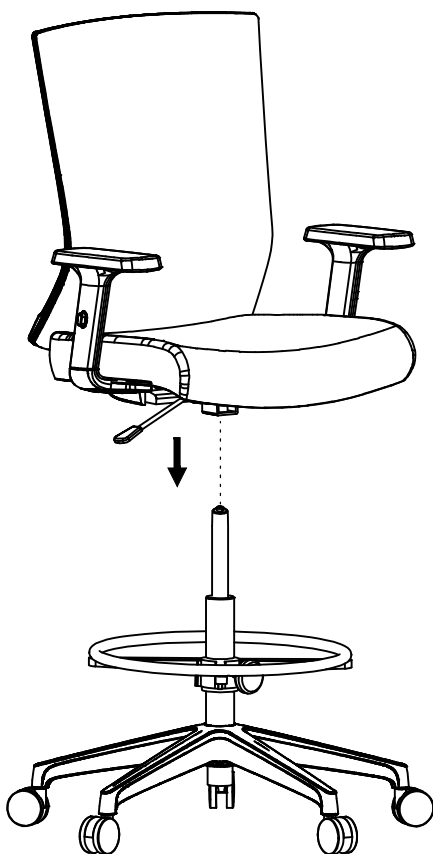


Done !

Function:

1. Adjust Armrest Height

Upward: press and hold the button and lift the armrest to a desired height.

 Downward: press and hold the button and push down the armrest to a desired height.

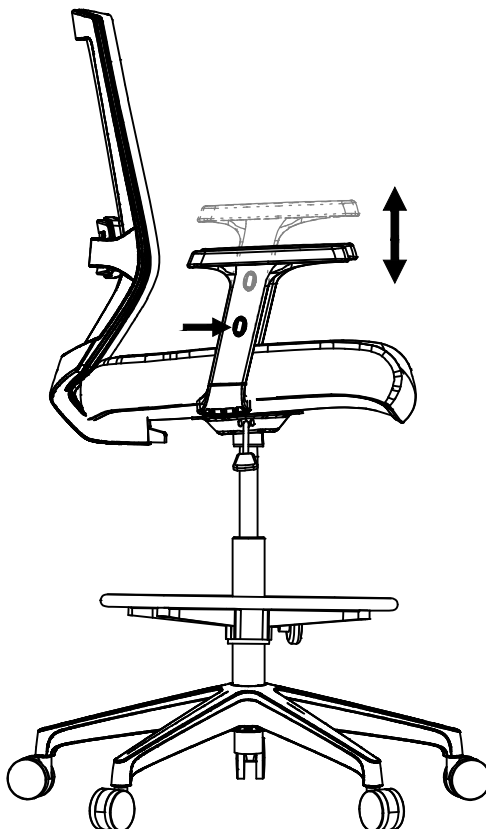


Function:

2. Adjust Seat Height

Upward: get your body off the seat and pull the lever to lift the seat to an appropriate height.

 
Downward: press down and pull the lever to lower the seat to the appropriate height.

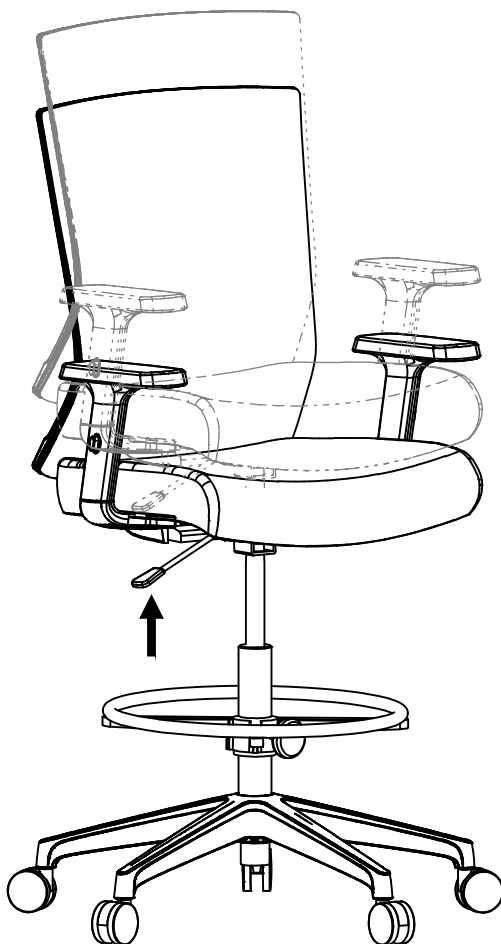

Function:

3. Adjust Lumbar Support

 
Rotate the lumbar support upward or downward to adjust it to an appropriate position.

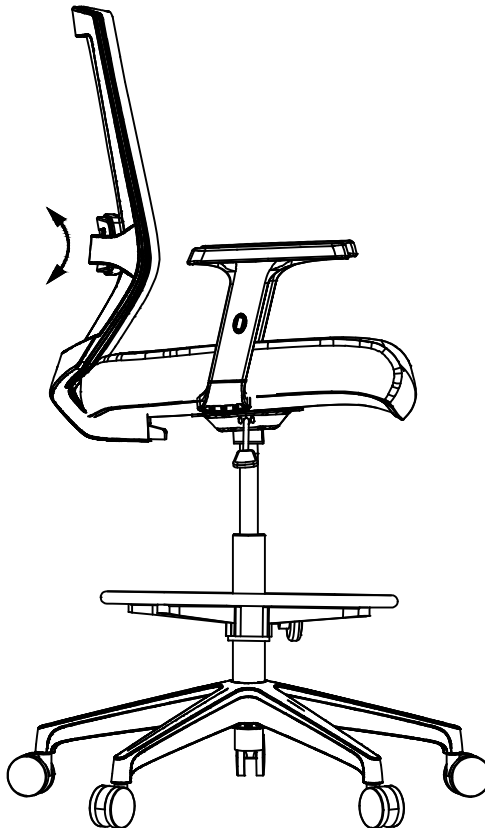


Function:

4. Foot rest height adjustment

 
Turn the adjustment knob C counterclockwise to loose the foot rest and adjust it to the right position. Then turn the adjustment knob C clockwise to fix the foot rest.

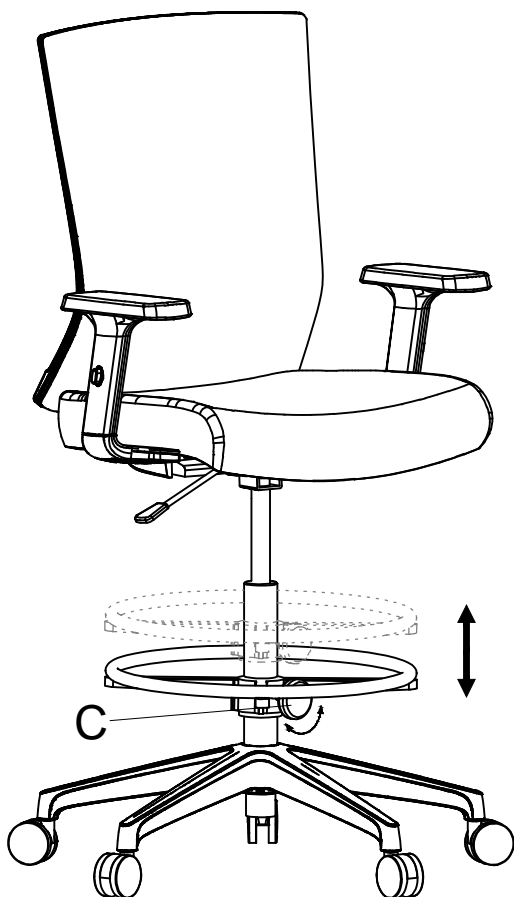

Acceptance note:

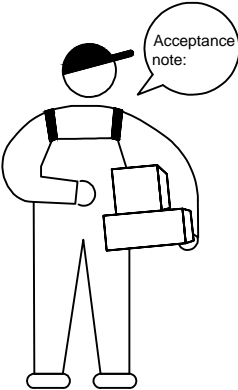 


● Clean the surface.

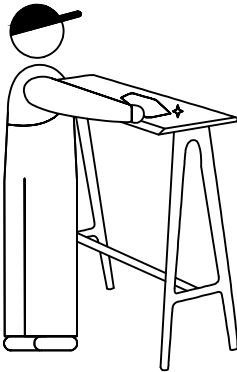 

● Tidy up.



 ● Check and deliver.

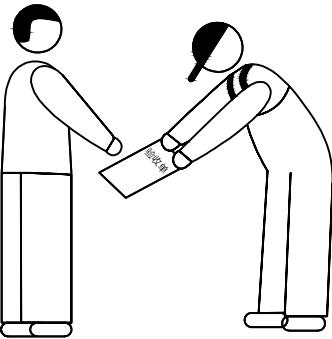




 Suite 150, Building 525 Technology Drive, Irvine, CA.92618

 sunonglobal.com

 949-337-8838

 info.us@isunon.com

