

Sunon

CIR69SW-2


Assembly Instructions




This manual is applicable to the installation of CIR69SW-2.

Please read this manual carefully before use and keep it in a safe place.


Installation Notes

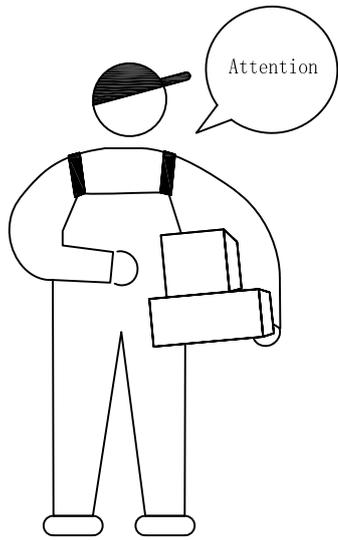


- ① Handle with care and use protective padding when necessary.

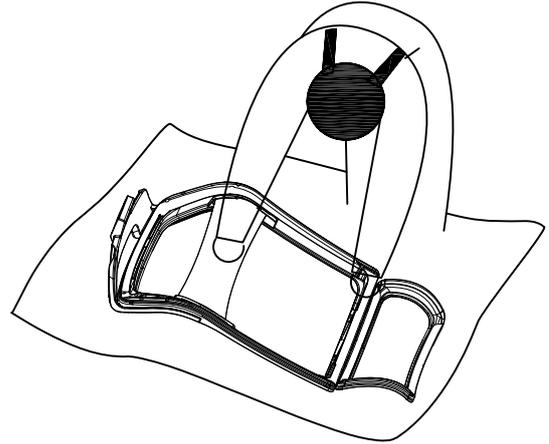

- ② Secure transportation requires assistance from two persons.

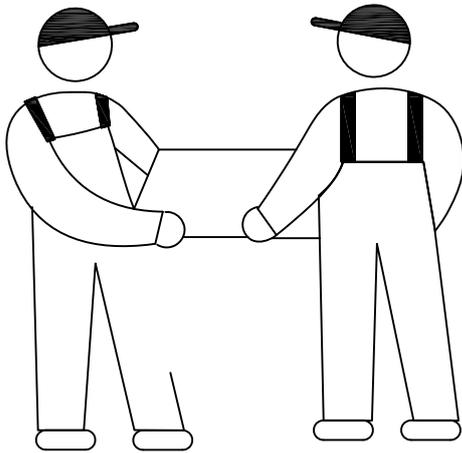


- ③ For any inquiries, please contact Sunon.

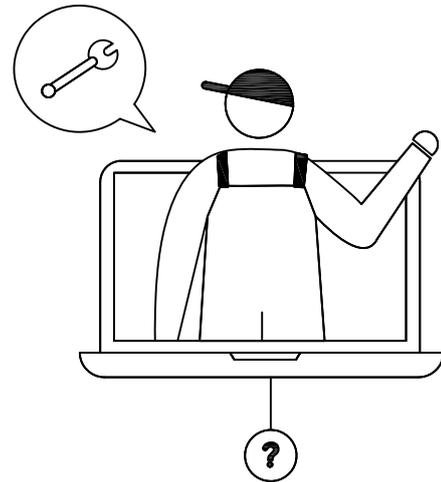





The manual indicates the components included with this product, with some parts considered as critical components. If the parts displayed here do not match your order, please contact Sunon at +86-400-8600-666.

Exploded Diagram

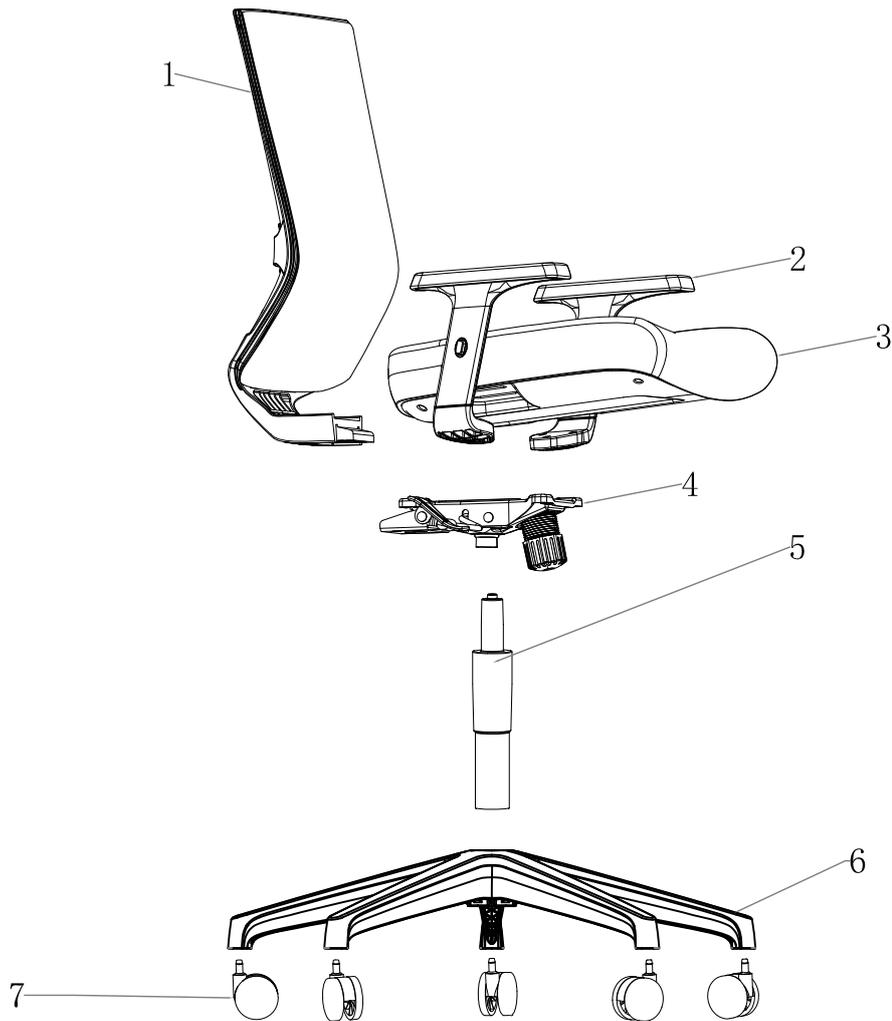


No	Name	Quantity
1	Chair Back	1
2	Armrest	2
3	Seat Component	1
4	Mechanism	1
5	Gas Cylinder	1
6	Five-Star Base	1
7	Chair Casters	5

Accessory list:

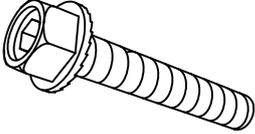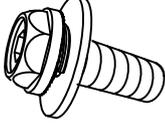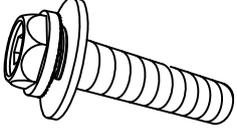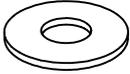								
internal/external hex screw	1/4*3/2	10	three-in-one internal/external hex screw	M8*20	2	three-in-one internal/external hex screw	M8*35	1
								
Gasket	ø6.5	10	Allen wrench with round ball	5#	1			

1. Secure the armrest to the chair seat using a 1/4" x 1-1/2" hex socket head cap screw with a $\phi 6.5$ washer, installed from the outermost side.

1

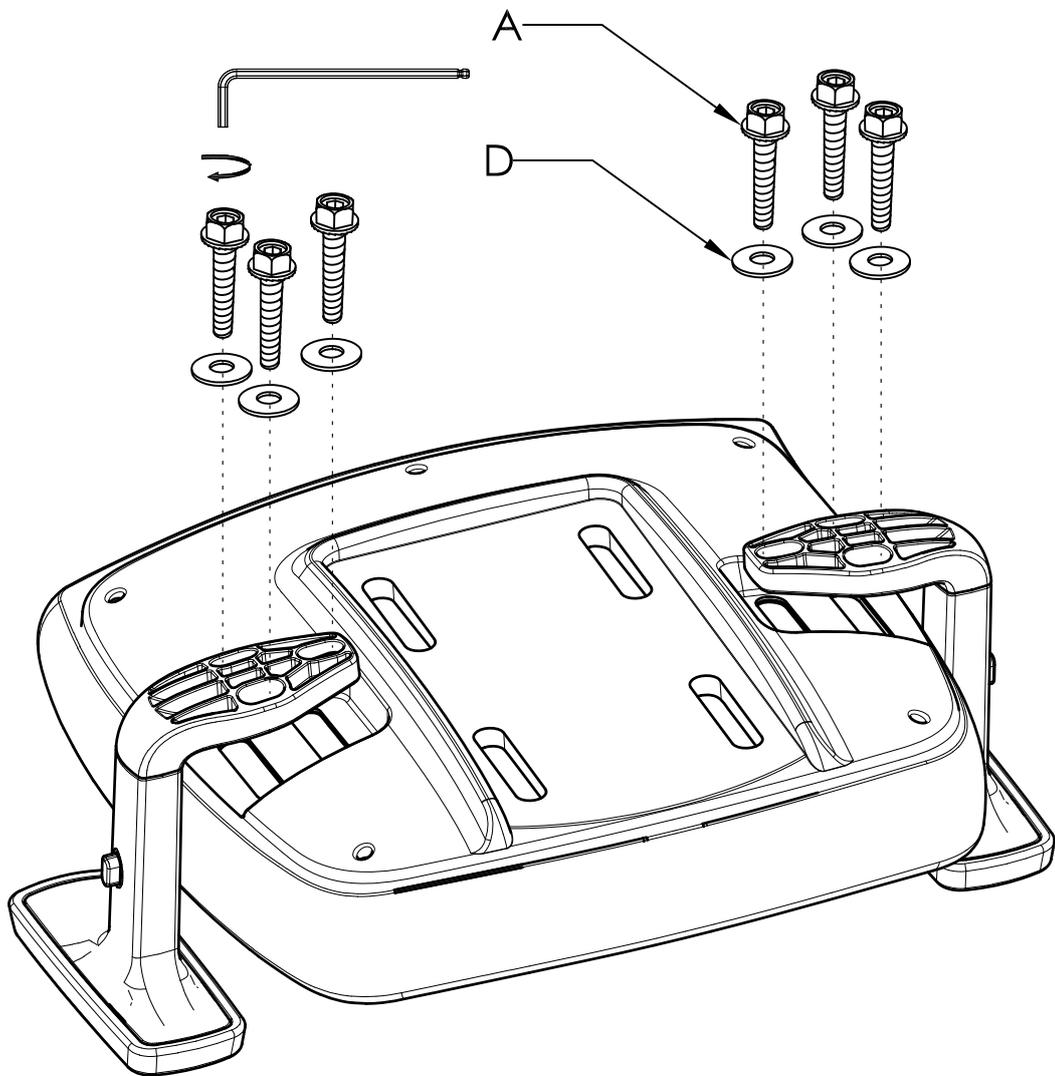



Ⓐ 1/4*3/2
(X6)


Ⓓ $\phi 6.5$
(X6)


Ⓔ 5#wrench
(X1)

1、The chassis is fastened with 1/4" * 1-1/2" combo hex screws and $\phi 6.5$ washers.

2

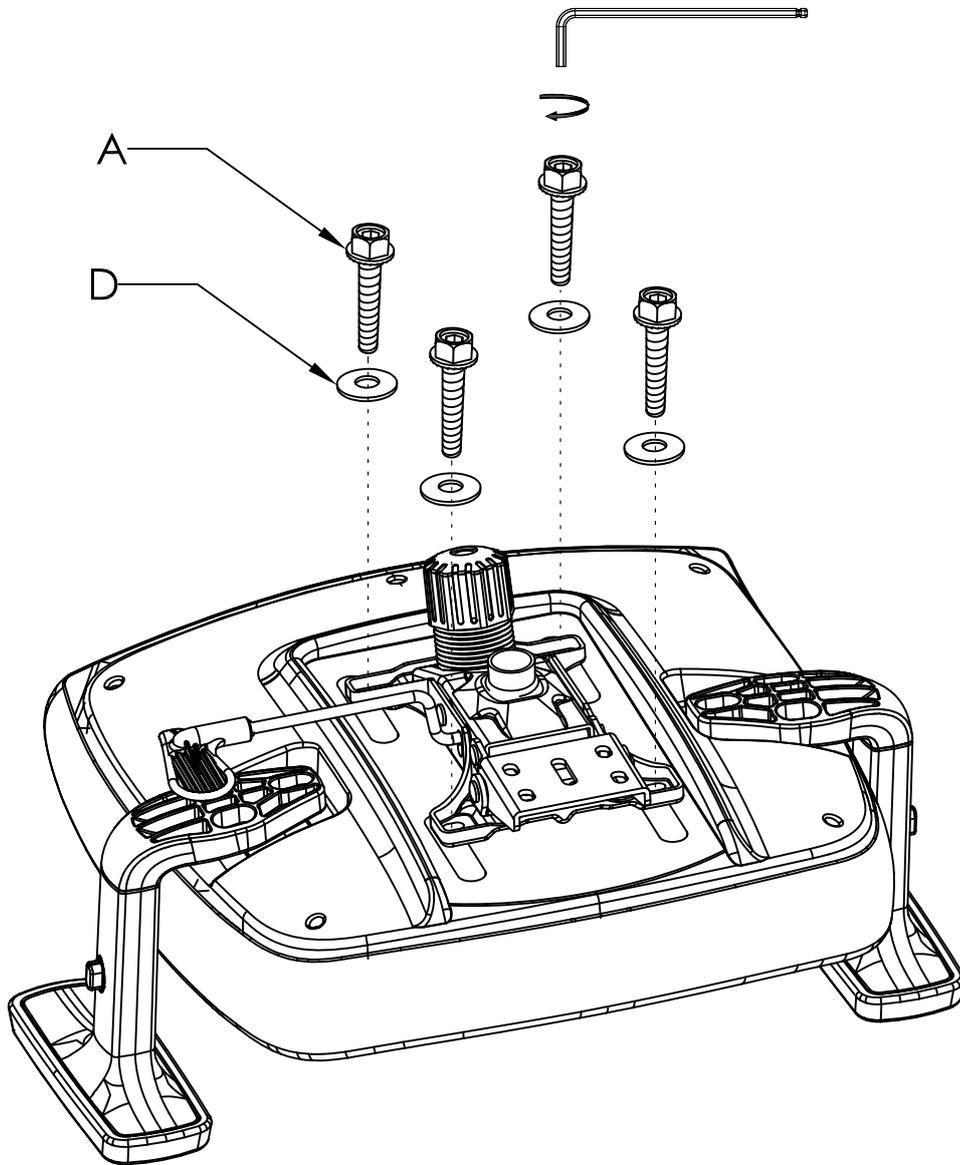



A 1/4*3/2
(X4)


D $\phi 6.5$
(X4)


E 5#wrench
(X1)

1, The English translation is: "The chair back is assembled to the chassis, with the center hole fastened using an M8x35 combo hex socket head cap screw, and both sides fastened using M8x20 combo hex socket head cap screws.

3

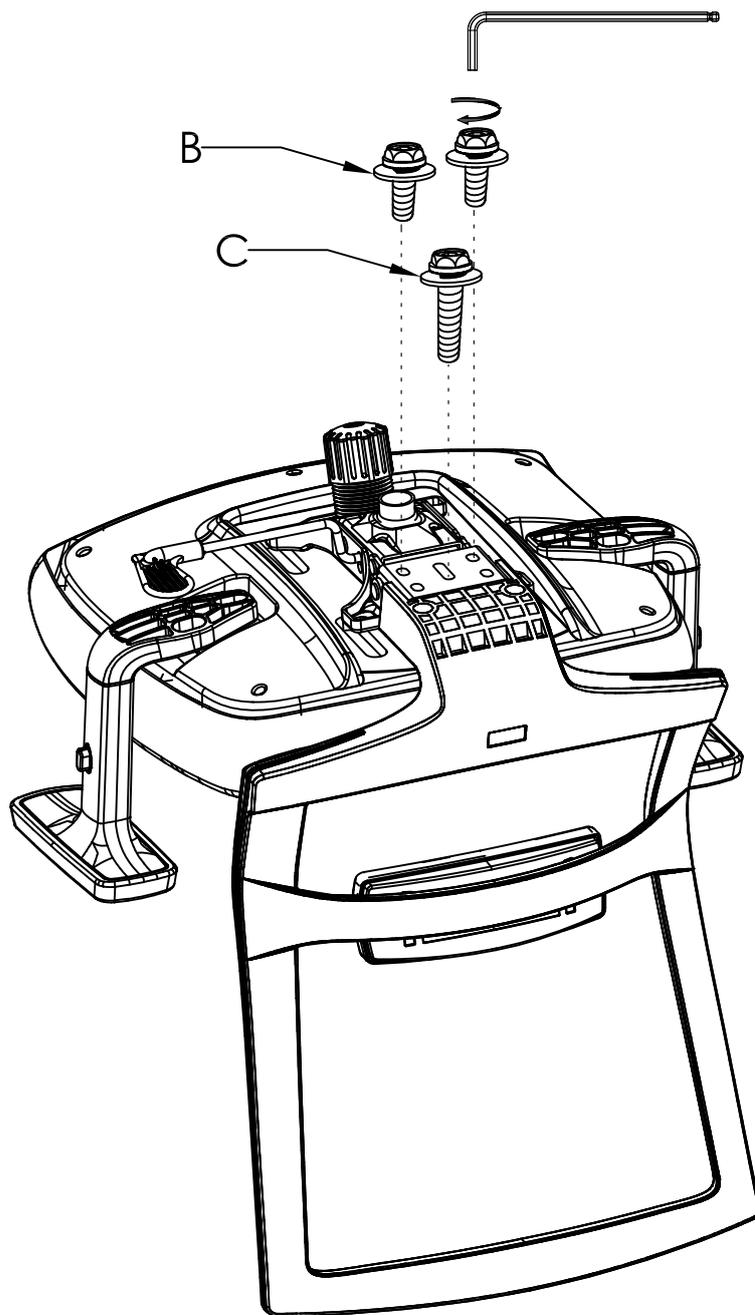


Ⓑ M8*20
(X2)

Ⓒ M8*35
(X1)

Ⓔ5#wrench
(X1)

1. Align the chair wheels with the holes at the bottom of the star-shaped base and install them. Insert the gas lift into the central tube of the star-shaped base. Place the chassis by fitting its tapered hole onto the contact head of the gas lift.

4

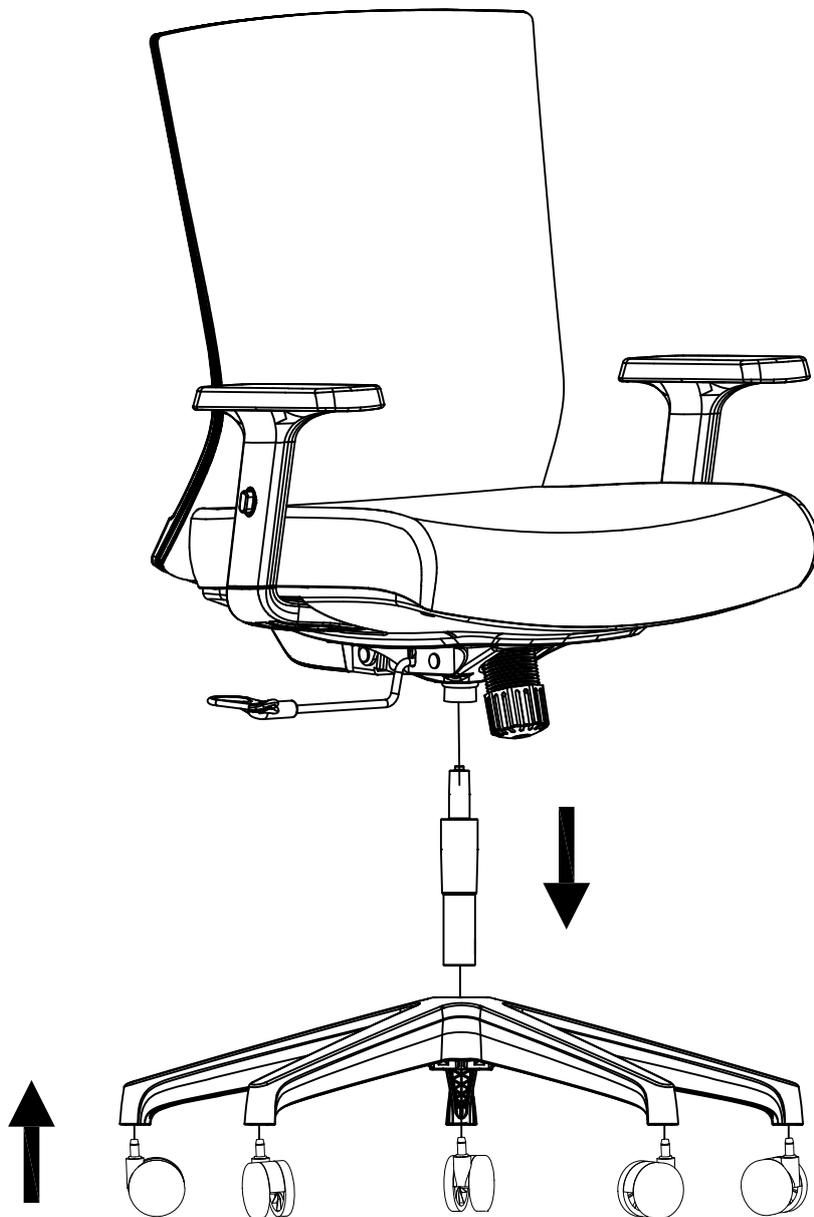

Done!




Functional Description

1. Adjusting the Armrest Height

To raise the armrest: Press and hold the button, then lift the armrest upward to the desired height.


To lower the armrest: Press and hold the button, then push the armrest downward to the desired height.

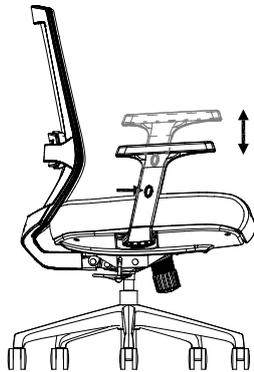

2. Seat Height Adjustment


To raise the seat: Stand up slightly, pull the control lever, and lift the seat to a comfortable height.

To lower the seat: Apply downward pressure, pull the control lever, and lower the seat to a comfortable position.

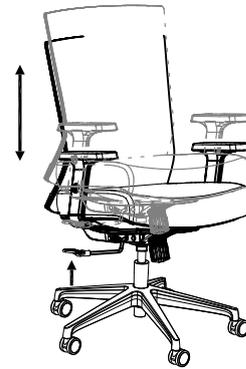

3. Lumbar Support Adjustment

Slide the lumbar support up and down to adjust it to a comfortable position.

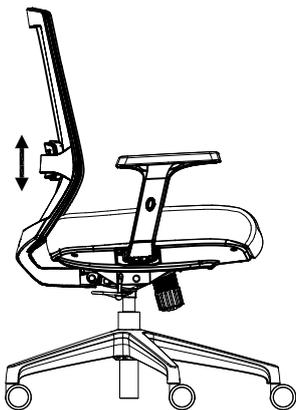


4. Recline and Recline Lock Adjustment


Pull the handle outward to unlock the seat for free recline. Release the handle to lock the seat in one of three available positions.



Acceptance Notes

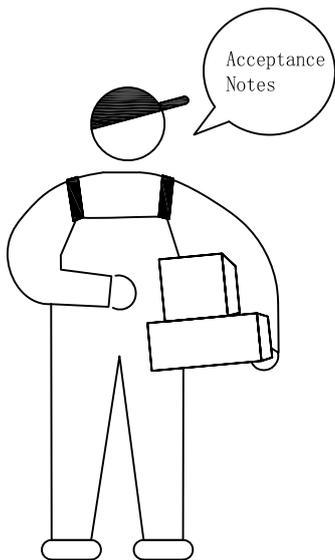


① Keep the product surface clean.

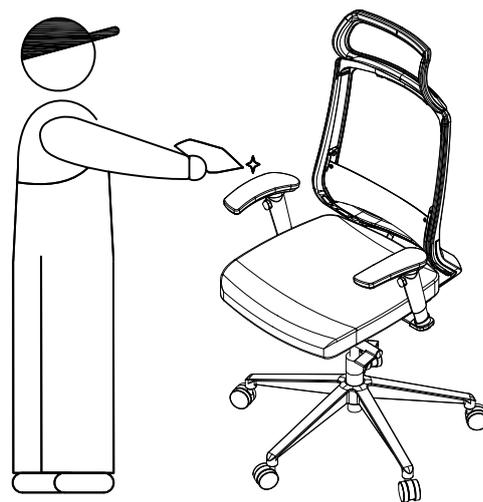

② Keep the site clean after the installation.



③ Let the customer confirm the receipt.

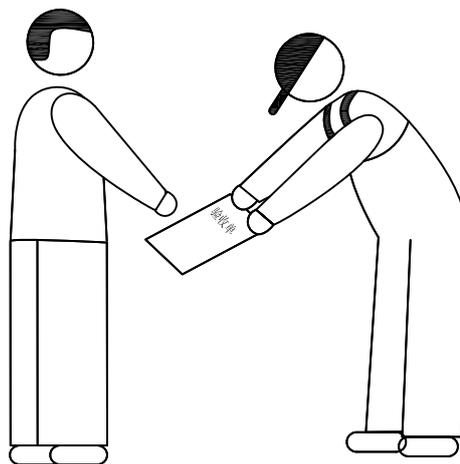

Sunon

Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com

