





# Jason Series EW71 Occasional Table Installation Manual

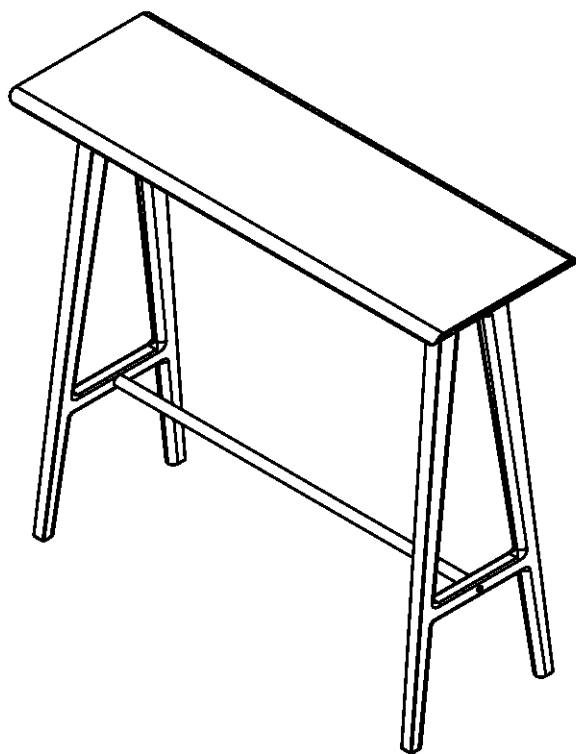


This manual is used for the installation of EW71.  
Please read this manual carefully before use and keep it properly.


## Assembly note:

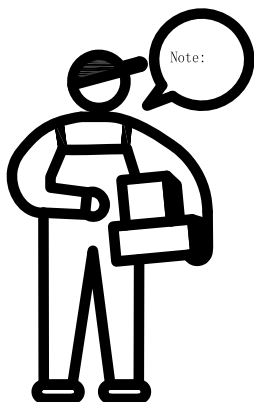


● Use a protective layer and handle the product with care.

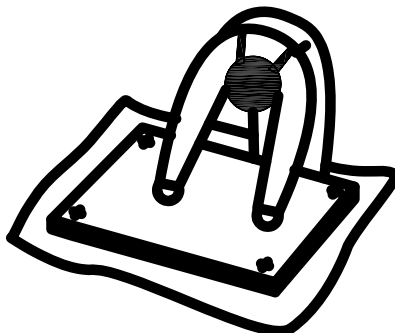

● At least two people are required.

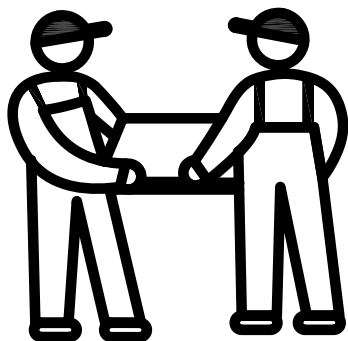

● Contact Sunon if you have any confusions.

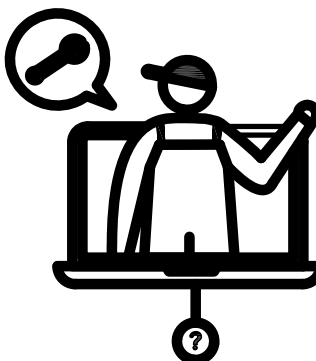


---

This picture shows all the accessories required, among them some are key accessories.  
If you have missed any, please contact Sunon. Tel:+86-400-8600-666








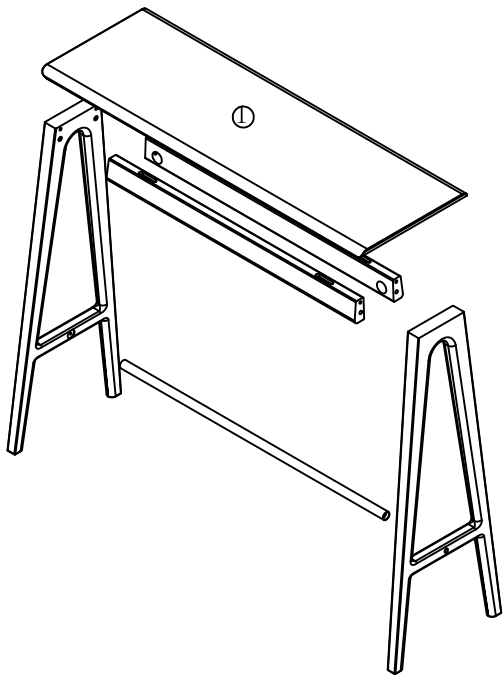







---

Explosion diagram:



No	Name	Pcs
1	tabletop	1

## Accessory list:


<div>A</div> 	<div>B</div> 	<div>C</div> 
<div>adjuster</div> <div>M6x18</div> <div>4</div>	<div>pulling strip</div> <div>930x70x35</div> <div>2</div>	<div>circlip set</div> <div>M5</div> <div>4</div>
<div>D</div> 	<div>E</div> 	<div>F</div> 
<div>countersunk tapping screw</div> <div>ST3.5x16</div> <div>8</div>	<div>table leg</div> <div>1022x400x42</div> <div>12</div>	<div>nut</div> <div>M8x5</div> <div>4</div>
<div>G</div> 	<div>H</div> 	<div>I</div> 
<div>double head bolt</div> <div>M8x70</div> <div>4</div>	<div>crescent</div> <div>30x15x8</div> <div>4</div>	<div>ring sticker</div> <div>0.5</div> <div>2</div>
<div>J</div> 	<div>K</div> 	<div>L</div> 
<div>wood stick</div> <div>Φ8x40</div> <div>4</div>	<div>pulling rod</div> <div>Φ25x984</div> <div>1</div>	<div>shielding piece</div> <div>42*15*14</div> <div>1</div>
<div>M</div> 	<div>N</div> 	<div>O</div> 
<div>cylinder head hex screw</div> <div>M6x40</div> <div>2</div>	<div>hex wrench</div> <div>M8</div> <div>1</div>	<div>Allen key ( with round ball )</div> <div>5#</div> <div>1</div>

---


1. Install adjusters.

---

1

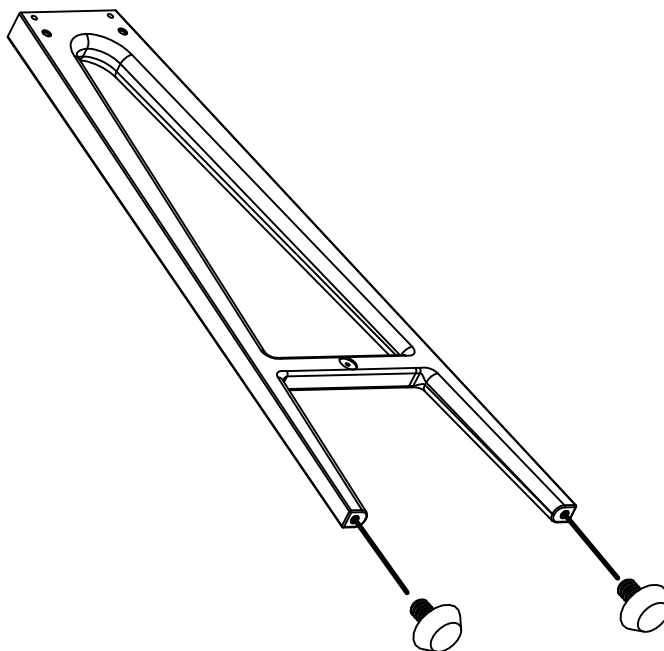

● M6x18  
(x4)


●   
1022x400x42  
(x2)

---


1. Install circlips on the pulling strip.

---

# 2

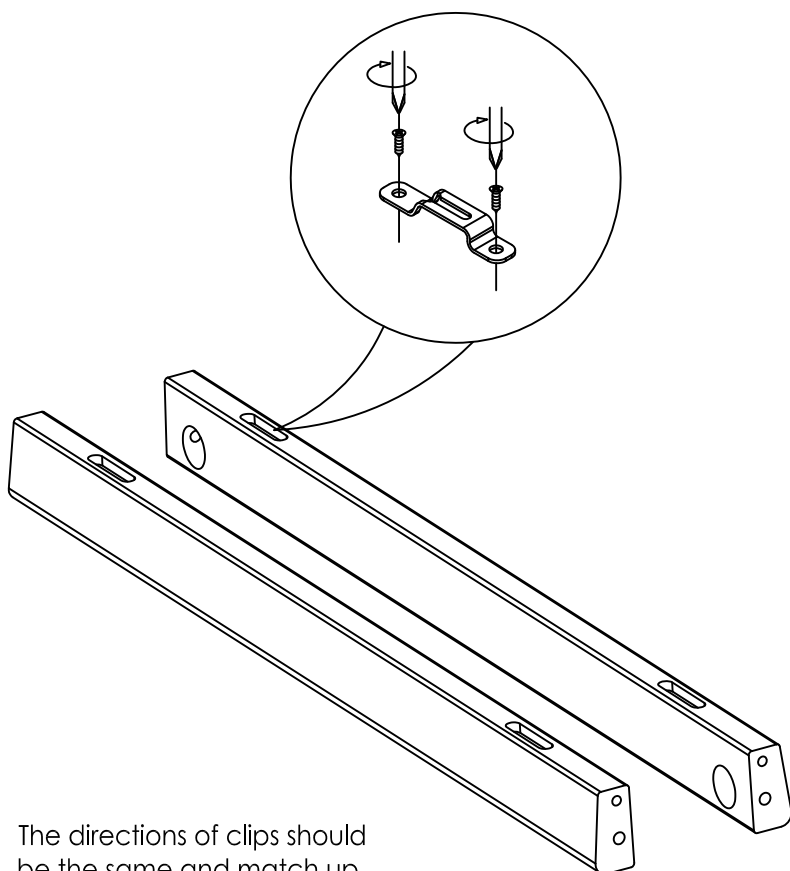

The directions of clips should be the same and match up with each other.




---

1. Connect table legs with pulling strips.

---

# 3

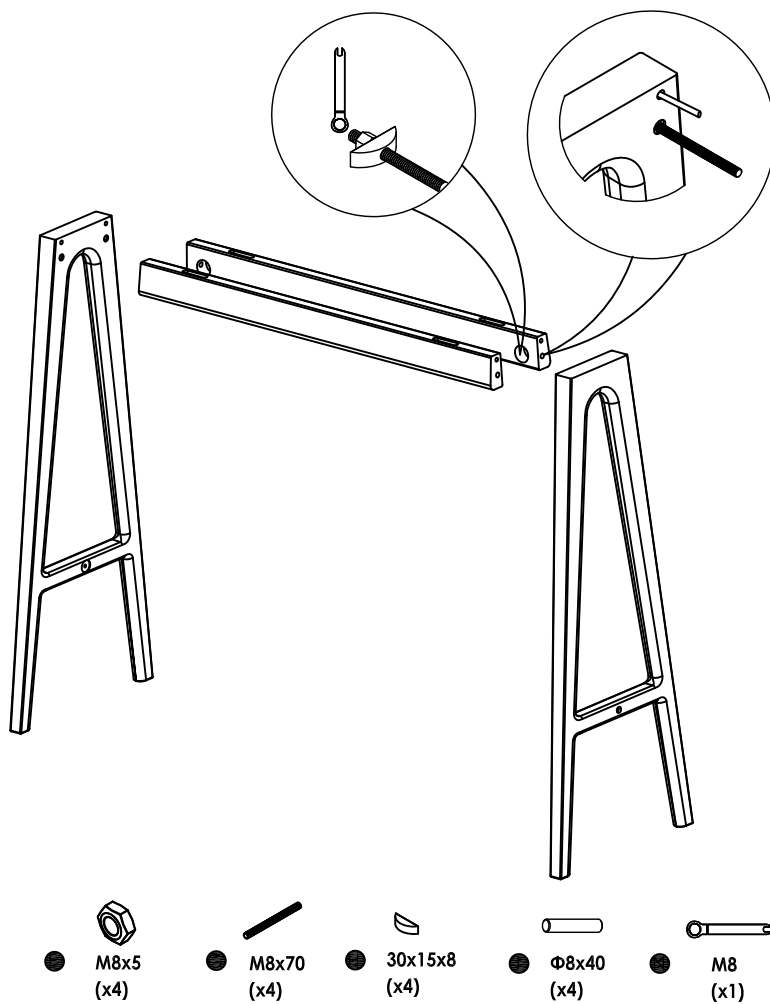


---

1. Install pulling rod.

---

# 4

After tighten the screws,  
paste ring stickers.

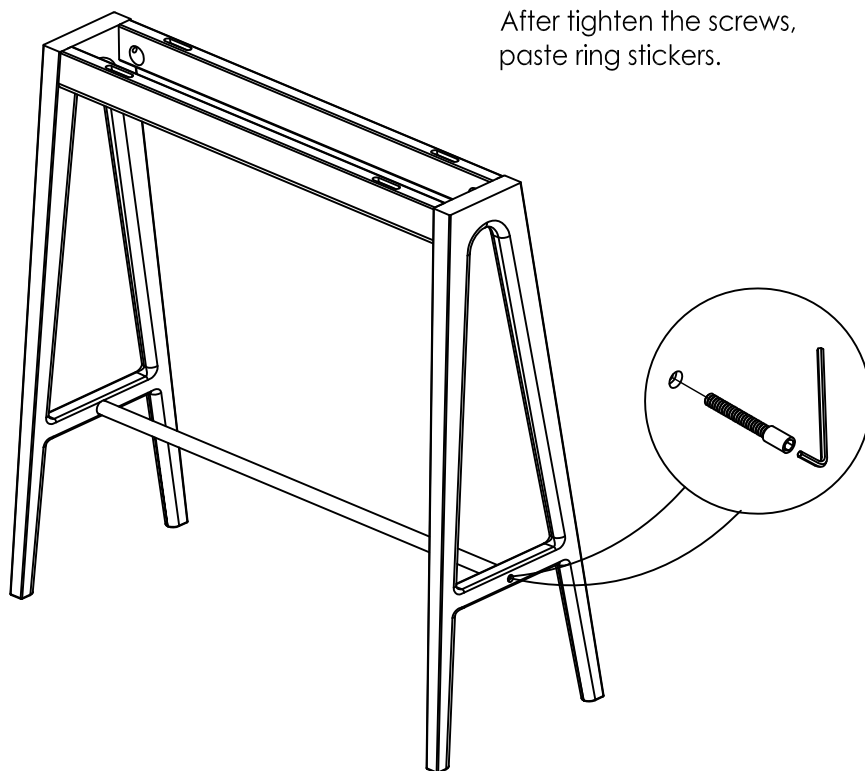

● 0.5  
(x2)

● Φ25\*984  
(x1)

● M6x40  
(x2)

● 5#  
(x1)





---

1. Install the circlip stews on the tabletop.

---

# 5

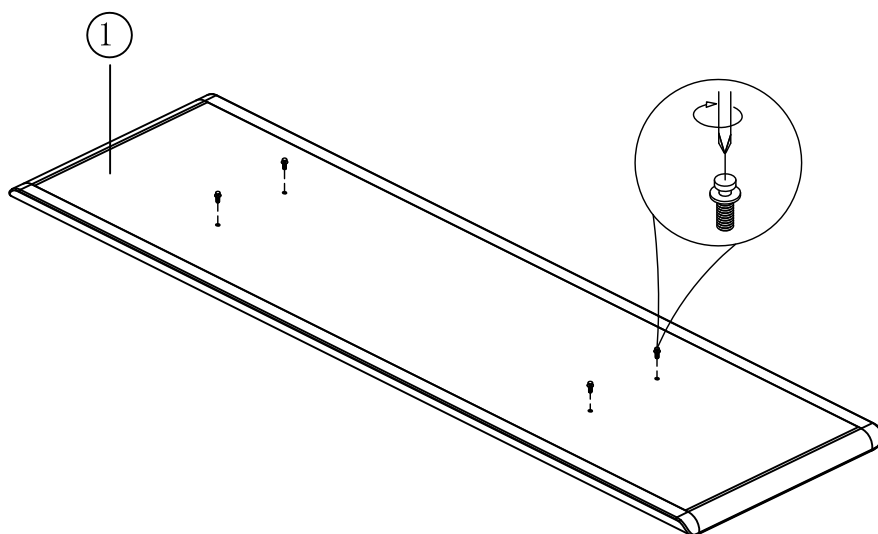

  
● M5  
(x4)


---

1. Snap the circlip screws on the tabletop into the circlips.


---

6

Circlip connection:

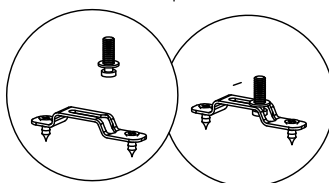

- ① Turn circlip screws to the big holes of circlip.      ② Push the circlip screws to small holes from big holes and tighten them.

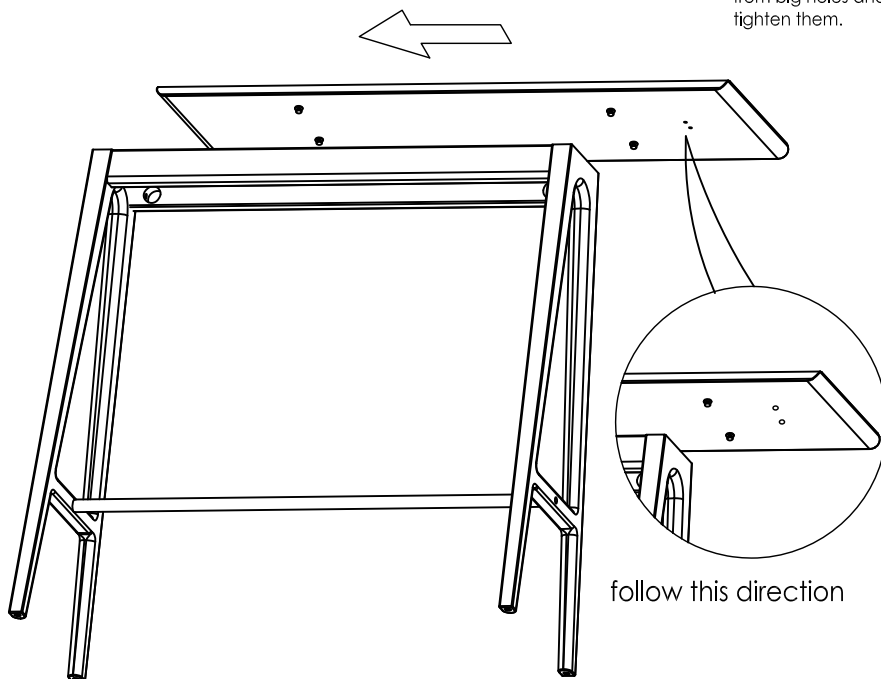


---

1. Install the shielding piece on the tabletop.

---


7

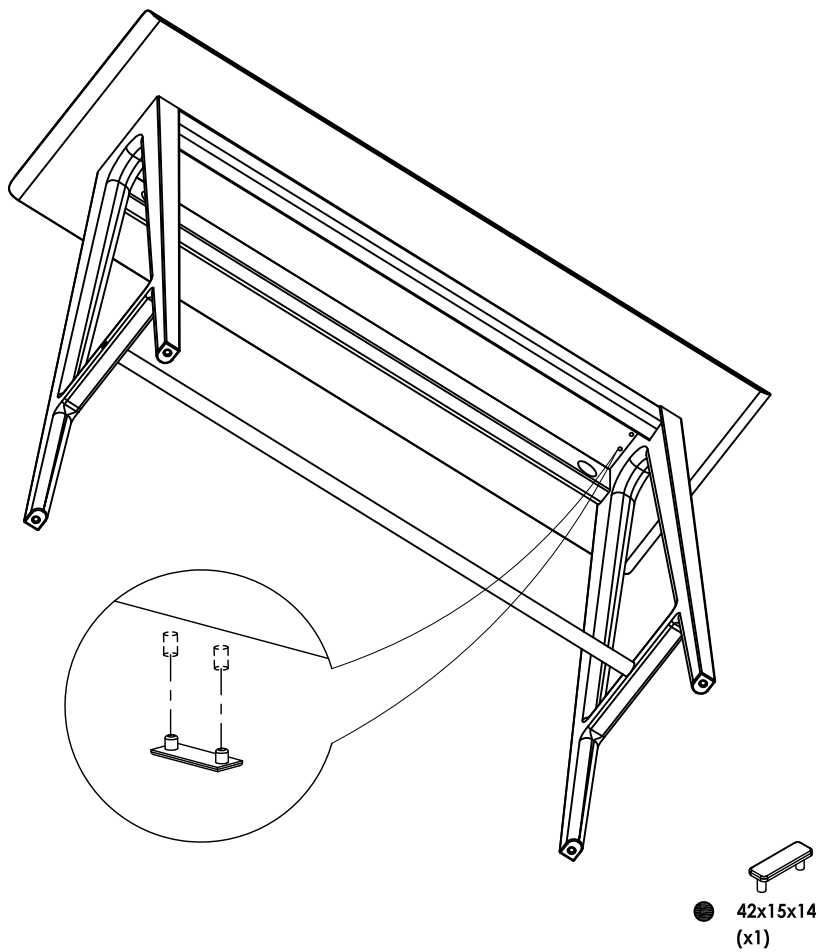

Done !



Acceptance note:

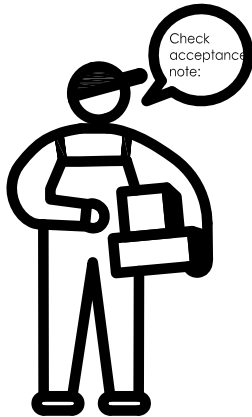


● Clean the surface.



● Tidy up the scene.



● Check and accept.

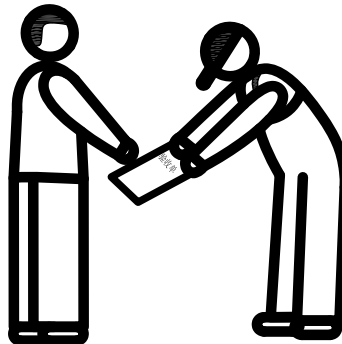



Suite 150, Building 525 Technology Drive, Irvine, CA.92618  
sunonglobal.com      949-337-8838      info.us@isunon.com

