




Jason Series EW71 Occasional Table Installation Manual




This manual is used for the installation of EW71.
Please read this manual carefully before use and keep it properly.


Assembly note:

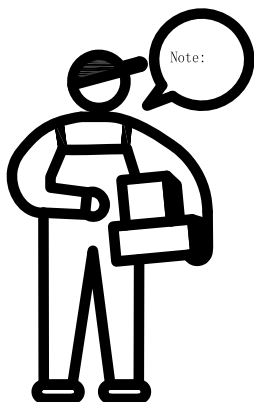


● Use a protective layer and handle the product with care.

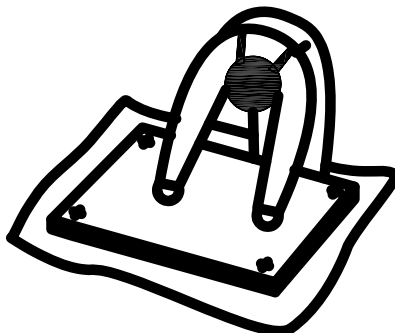

● At least two people are required.

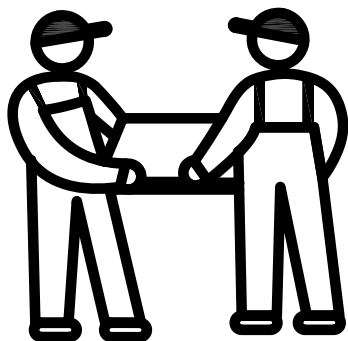


● Contact Sunon if you have any confusions.

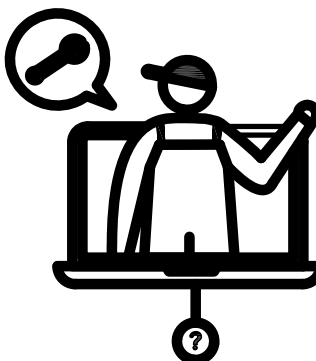








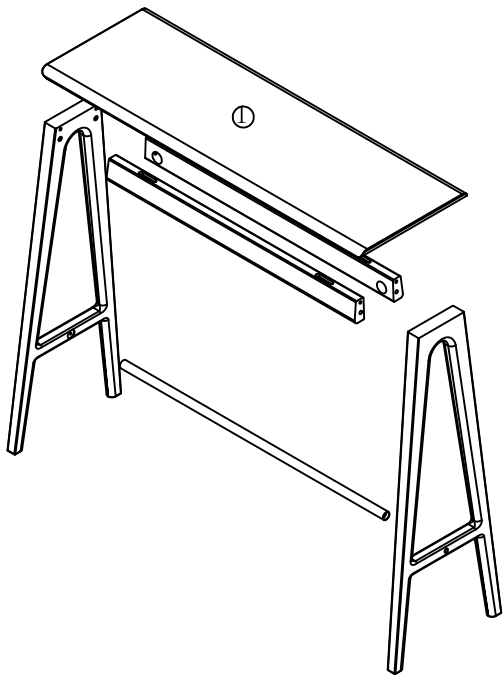







This picture shows all the accessories required, among them some are key accessories.
If you have missed any, please contact Sunon. Tel:+86-400-8600-666

Explosion diagram:




No	Name	Pcs
1	tabletop	1

Accessory list:


<div>A</div> 	<div>B</div> 	<div>C</div> 
<div>adjuster</div> <div>M6x18</div> <div>4</div>	<div>pulling strip</div> <div>930x70x35</div> <div>2</div>	<div>circlip set</div> <div>M5</div> <div>4</div>
<div>D</div> 	<div>E</div> 	<div>F</div> 
<div>countersunk tapping screw</div> <div>ST3.5x16</div> <div>8</div>	<div>table leg</div> <div>1022x400x42</div> <div>12</div>	<div>nut</div> <div>M8x5</div> <div>4</div>
<div>G</div> 	<div>H</div> 	<div>I</div> 
<div>double head bolt</div> <div>M8x70</div> <div>4</div>	<div>crescent</div> <div>30x15x8</div> <div>4</div>	<div>ring sticker</div> <div>0.5</div> <div>2</div>
<div>J</div> 	<div>K</div> 	<div>L</div> 
<div>wood stick</div> <div>Φ8x40</div> <div>4</div>	<div>pulling rod</div> <div>Φ25x984</div> <div>1</div>	<div>shielding piece</div> <div>42*15*14</div> <div>1</div>
<div>M</div> 	<div>N</div> 	<div>O</div> 
<div>cylinder head hex screw</div> <div>M6x40</div> <div>2</div>	<div>hex wrench</div> <div>M8</div> <div>1</div>	<div>Allen key (with round ball)</div> <div>5#</div> <div>1</div>

1. Install adjusters.

1

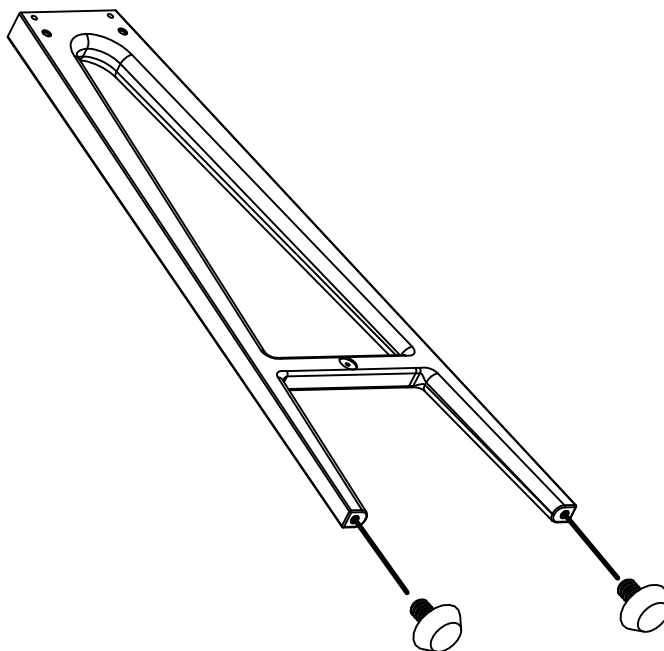


● M6x18
(x4)

● 
1022x400x42
(x2)

1. Install circlips on the pulling strip.

2

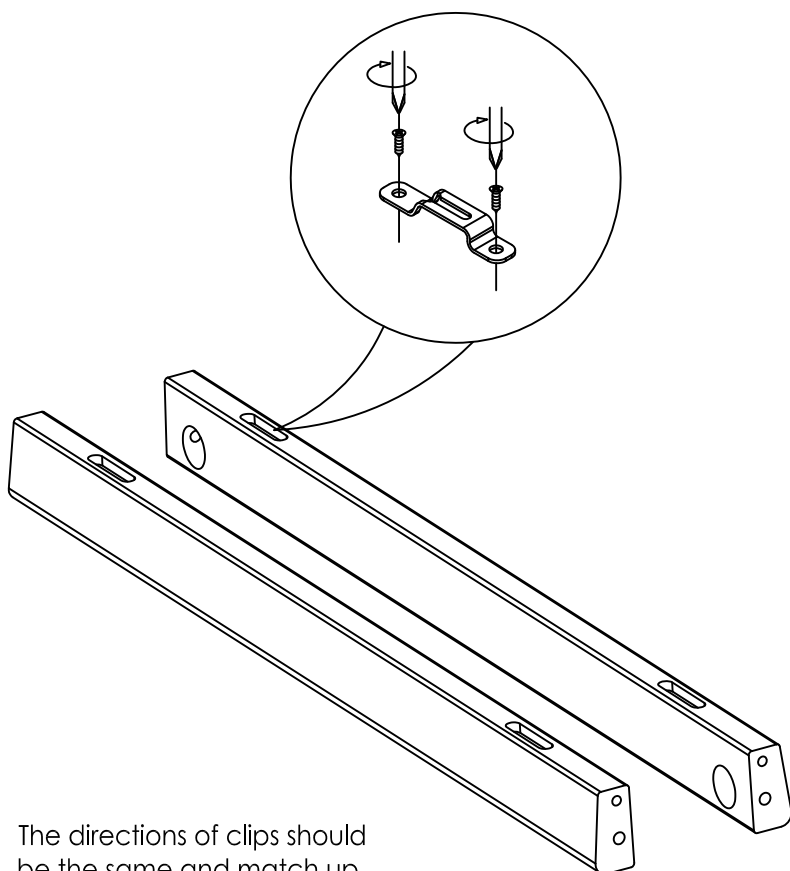


The directions of clips should be the same and match up with each other.

● M5
(x4)

● ST3.5x16
(x8)

1. Connect table legs with pulling strips.


3

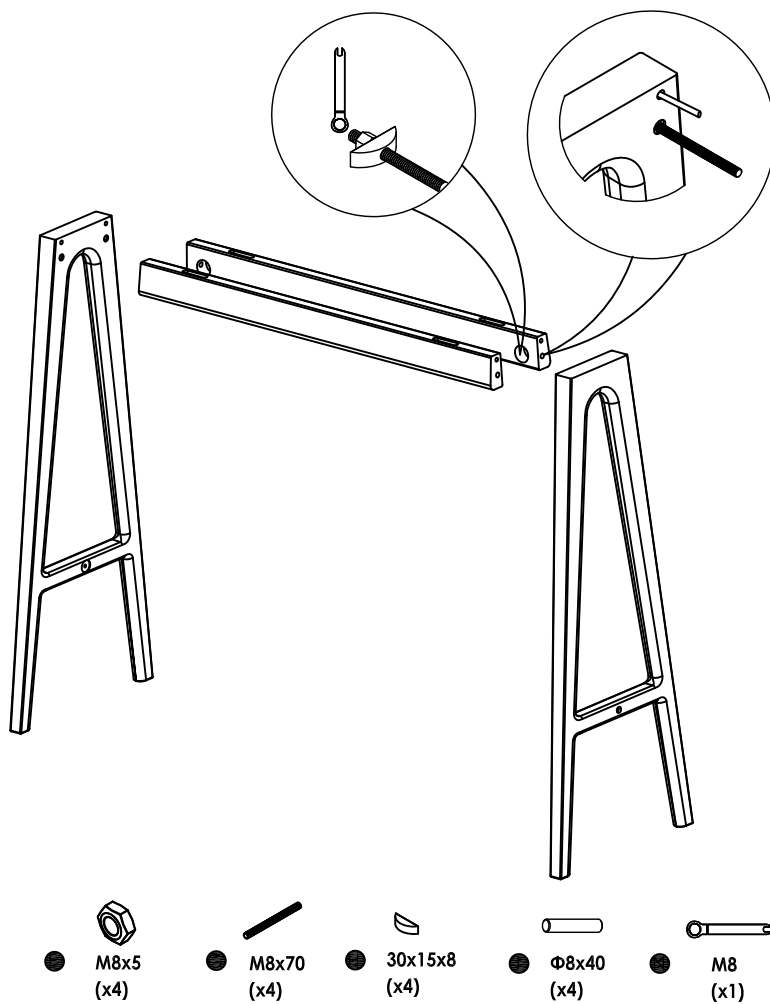

1. Install pulling rod.

4

After tighten the screws,
paste ring stickers.

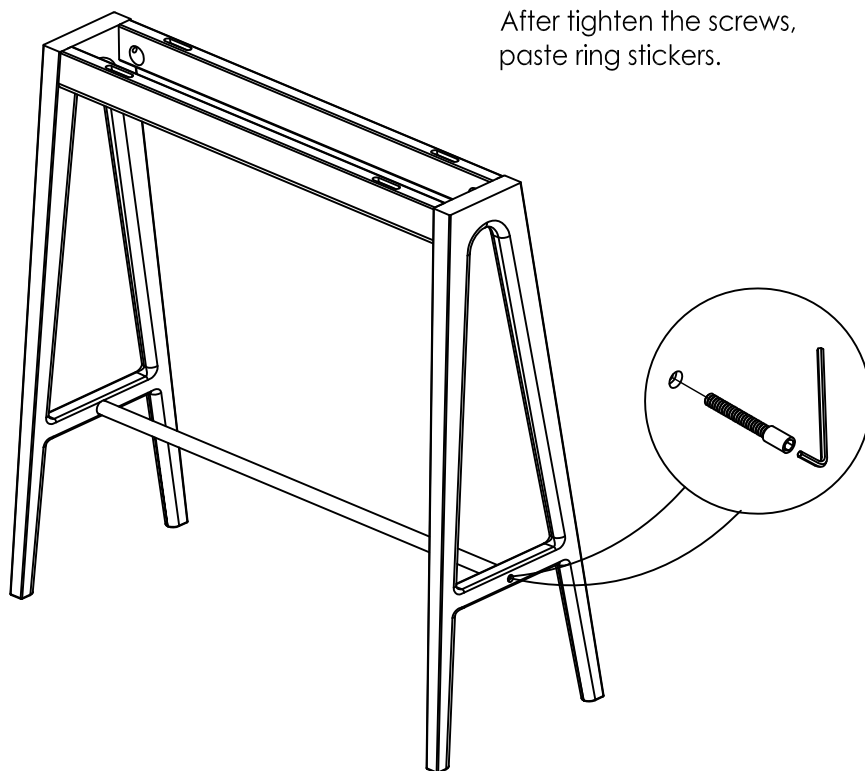

● 0.5
(x2)


● $\Phi 25 \times 984$
(x1)


● M6x40
(x2)

✓ 5#
(x1)

1. Install the circlip stews on the tabletop.

5

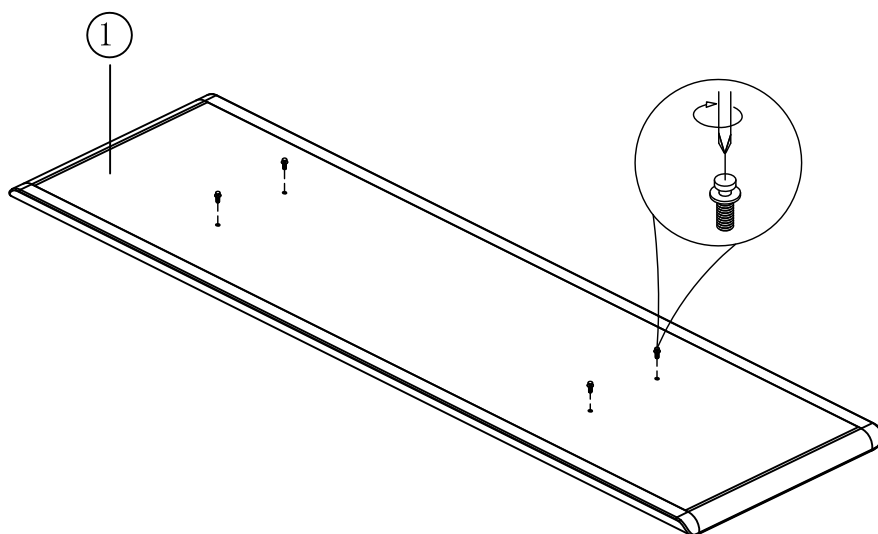



● M5
(x4)


1. Snap the circlip screws on the tabletop into the circlips.

6

Circlip connection:

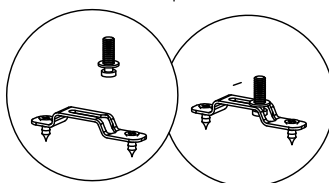


- ① Turn circlip screws to the big holes of circlip. ② Push the circlip screws to small holes from big holes and tighten them.

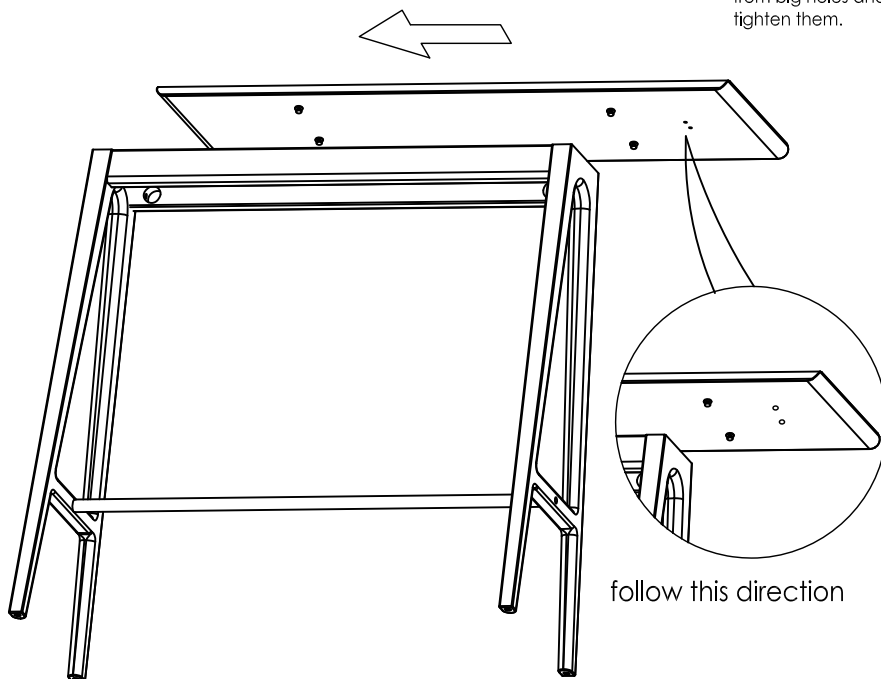

1. Install the shielding piece on the tabletop.


7

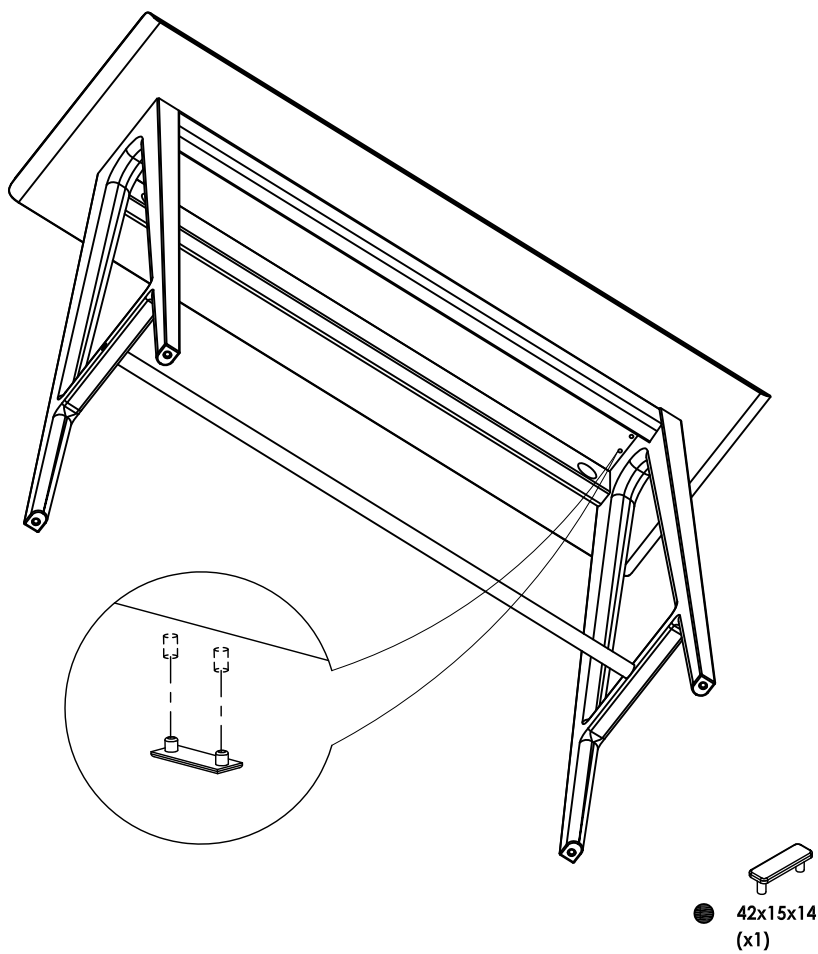

Done !



Acceptance note:

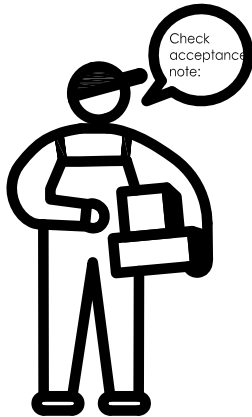


● Clean the surface.



● Tidy up the scene.



● Check and accept.

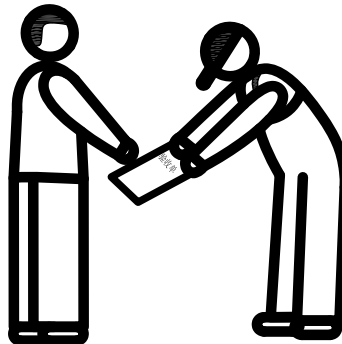




Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com






Jason Series EW77 High Conference Table Installation Manual

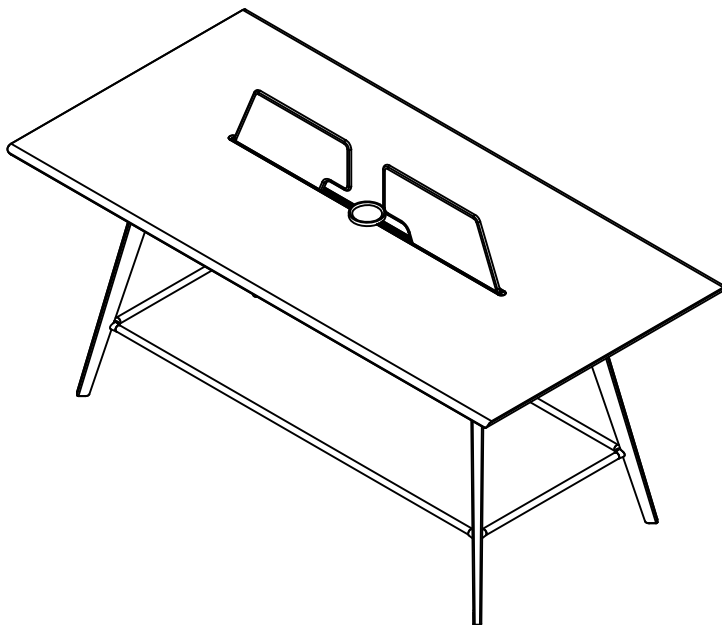


This manual is used for the installation of EW77.240120.
Please read this manual carefully before use and keep it properly.


Assembly note:

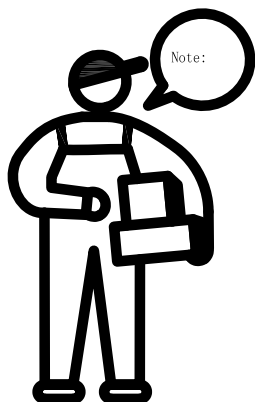


● Use a protective layer and handle the product with care.

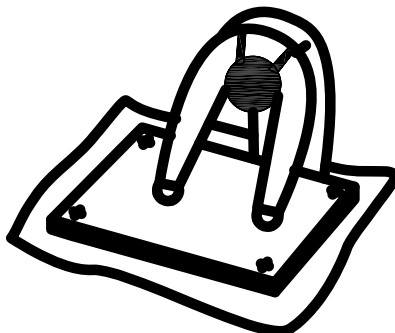

● At least two people are required.

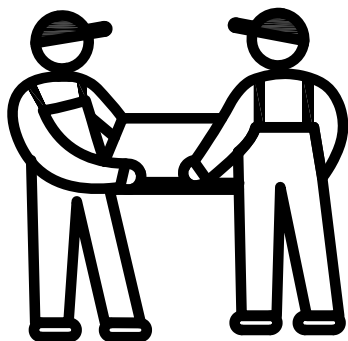


● Contact Sunon if you have any confusions.

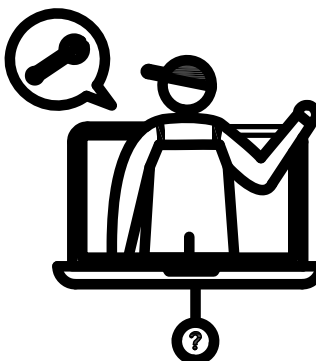

This picture shows all the accessories required, among them some are key accessories.
If you have missed any, please contact Sunon. Tel:+86-400-8600-666

Explosion diagram:

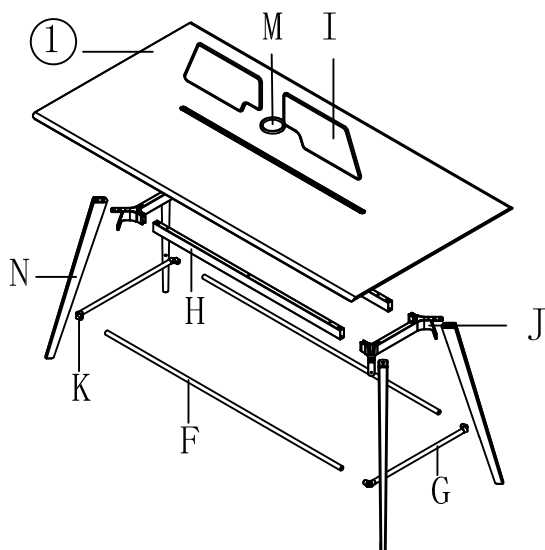



No.	Name	Pcs
1	tabletop	1

Accessory list:

A			B			C		
Allen key	4#	1	Allen key	5#	1	round-head hex screw	M6x15	6
D			E			F		
countersunk hex screw	M6x40	8	countersunk hex screw	M6x25	4	pulling rod	φ25*1760	2
G			H			I		
pulling rod	φ25*661	2	steel beam	1398*60*30	2	felt screen	585*300*12	2
J			K			L		
leg connector	abnormal shape	2	footrest connector	abnormal shape	4	adjuster	M6x18	4
M			N					
round tray	130*15	1	leg	1069*76*48	4			


1. Install the adjuster.

1

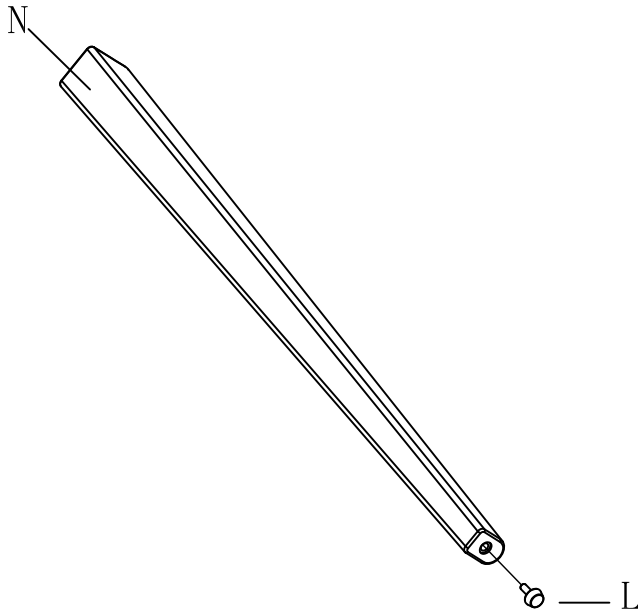


-
1. Install leg connectors (the accessory comes with 12 M6*25 screws)
 2. Don't tighten the screws until all screws have been installed.
-

2

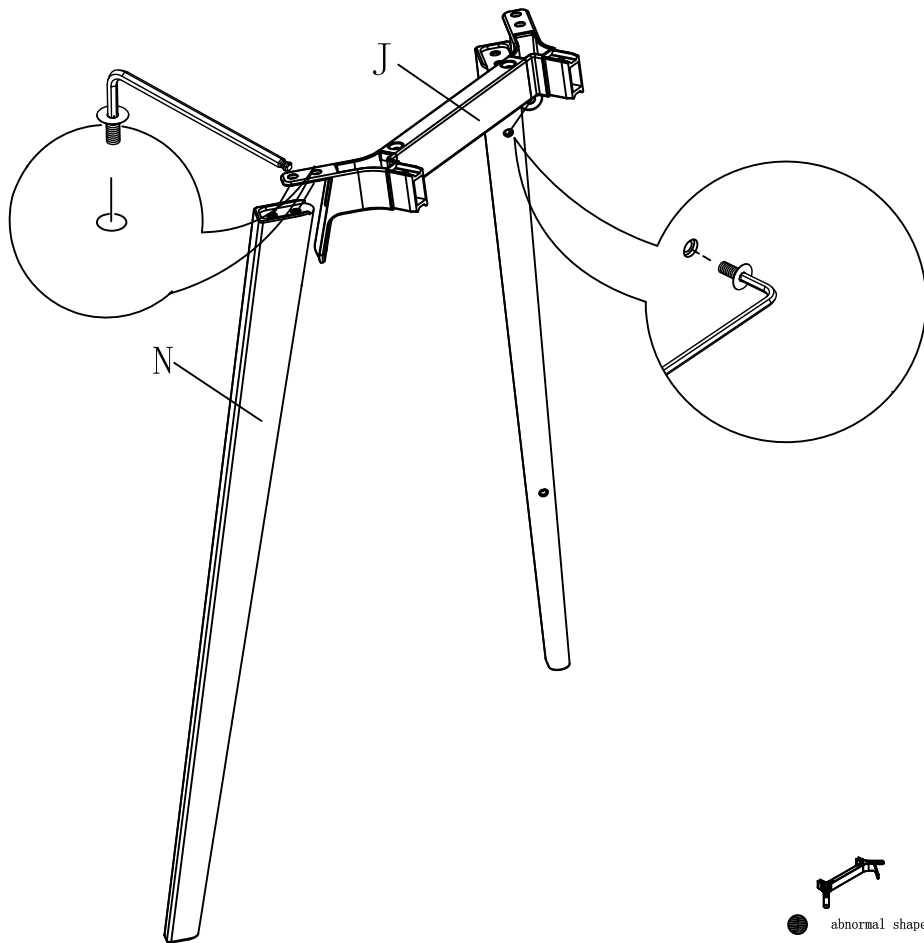


1. Remove the pre-installed 8 M8*16 screws inside the leg connectors.

3

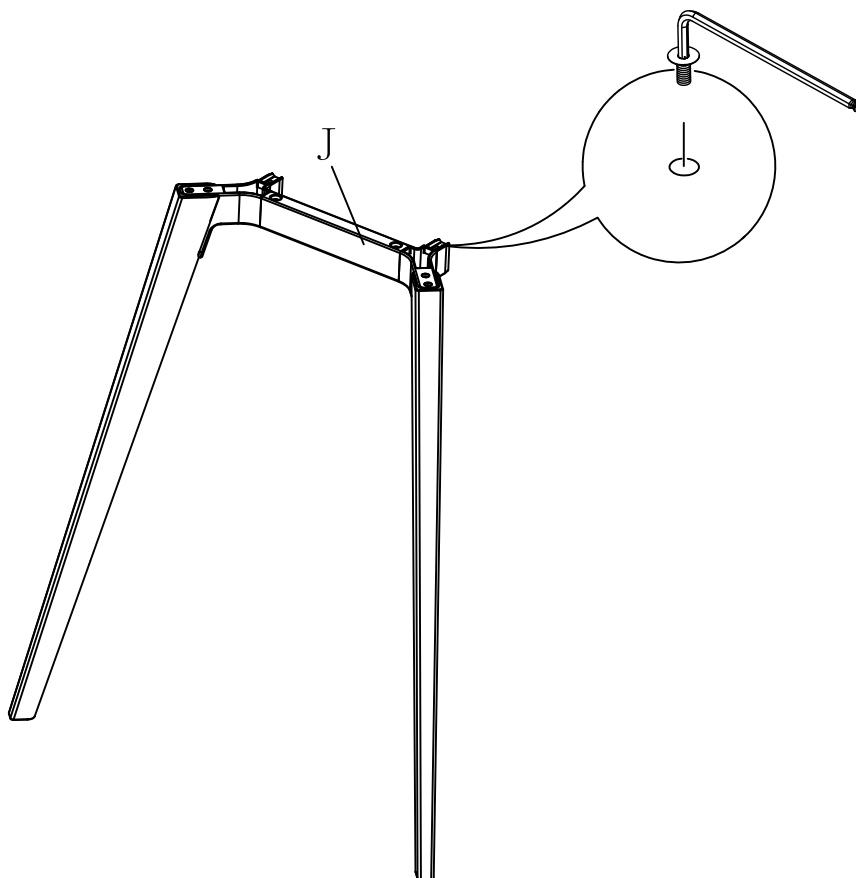


1. Use the pre-installed M8*16 screws to install steel beams.

4

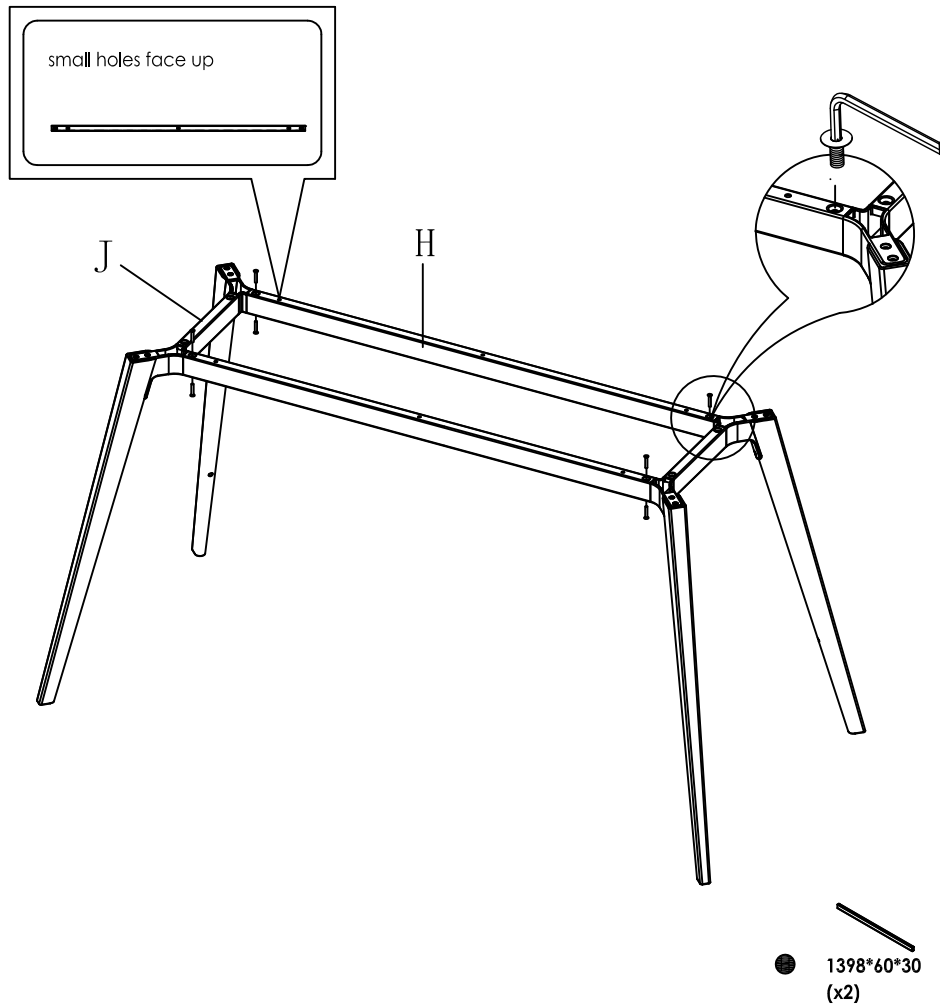


1. Install the pulling rod.

5

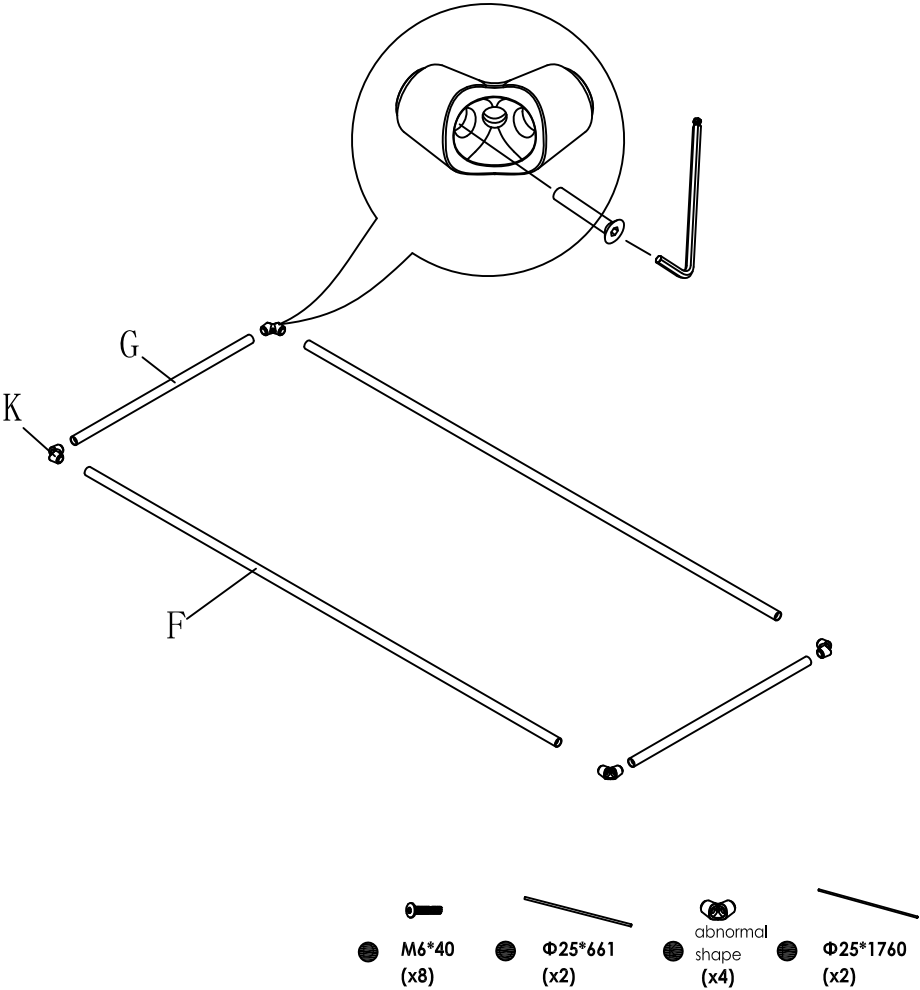


1.Install the tabletop. (Put the conference table upside down and place it on the cardboard)


6

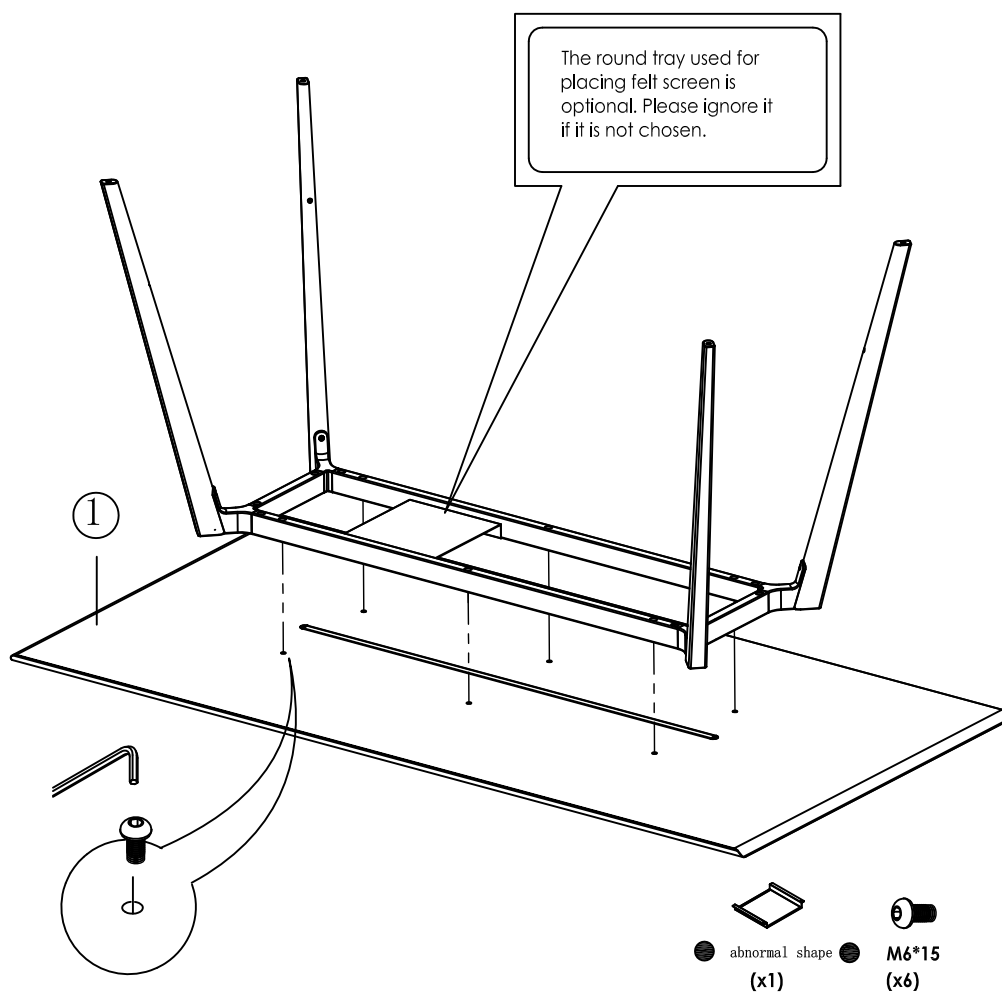

1. Connect the pulling rod with the leg.


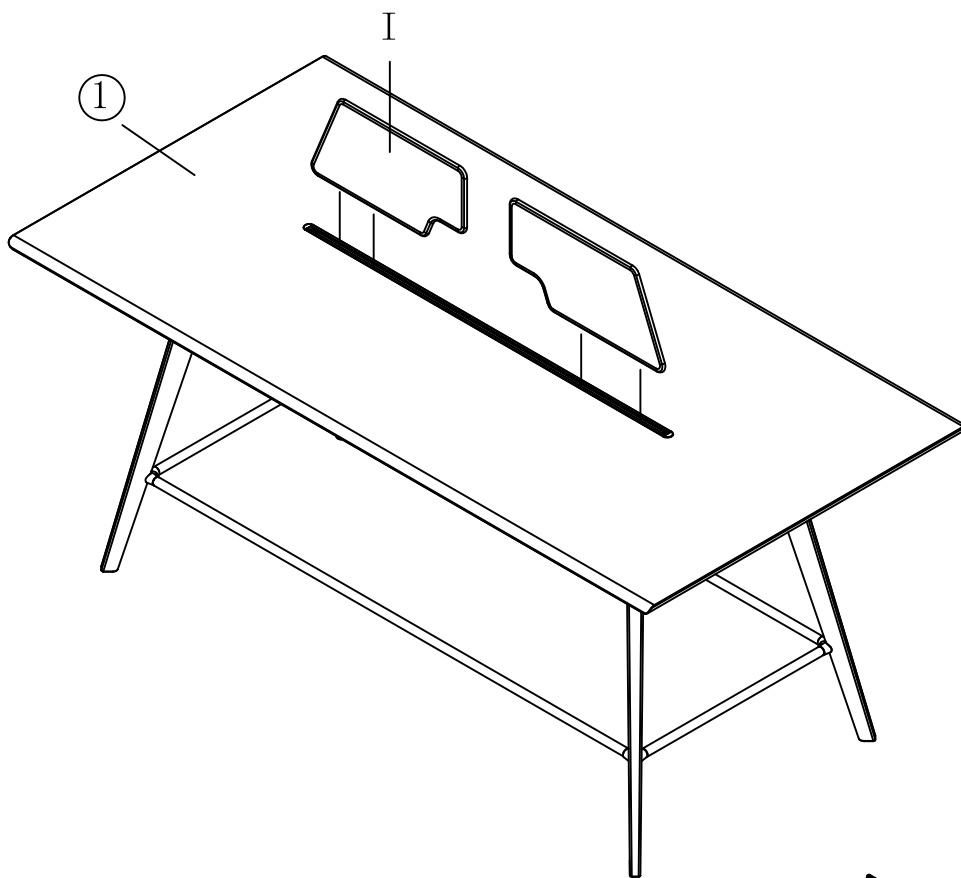
7

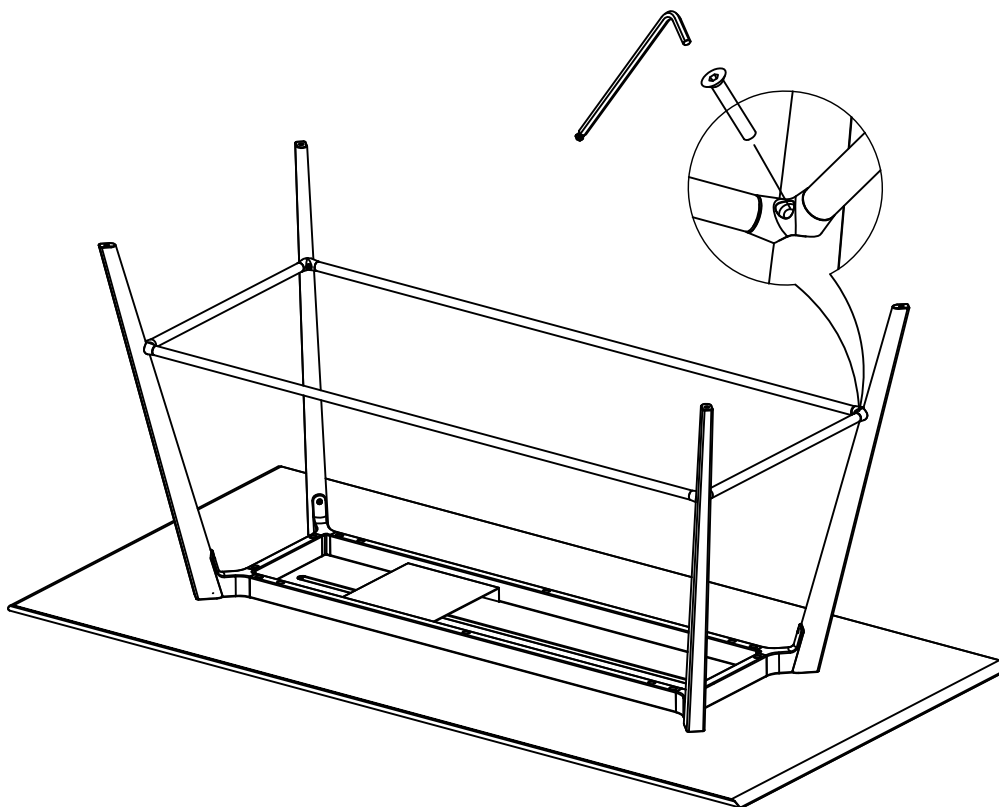


● M6*25
(x4)

1. Insert the felt screen into the slot of tabletop.


8




● 585*300*12
(x2)

1. Match the round tray's slot with the bulging part of the tabletop.


9

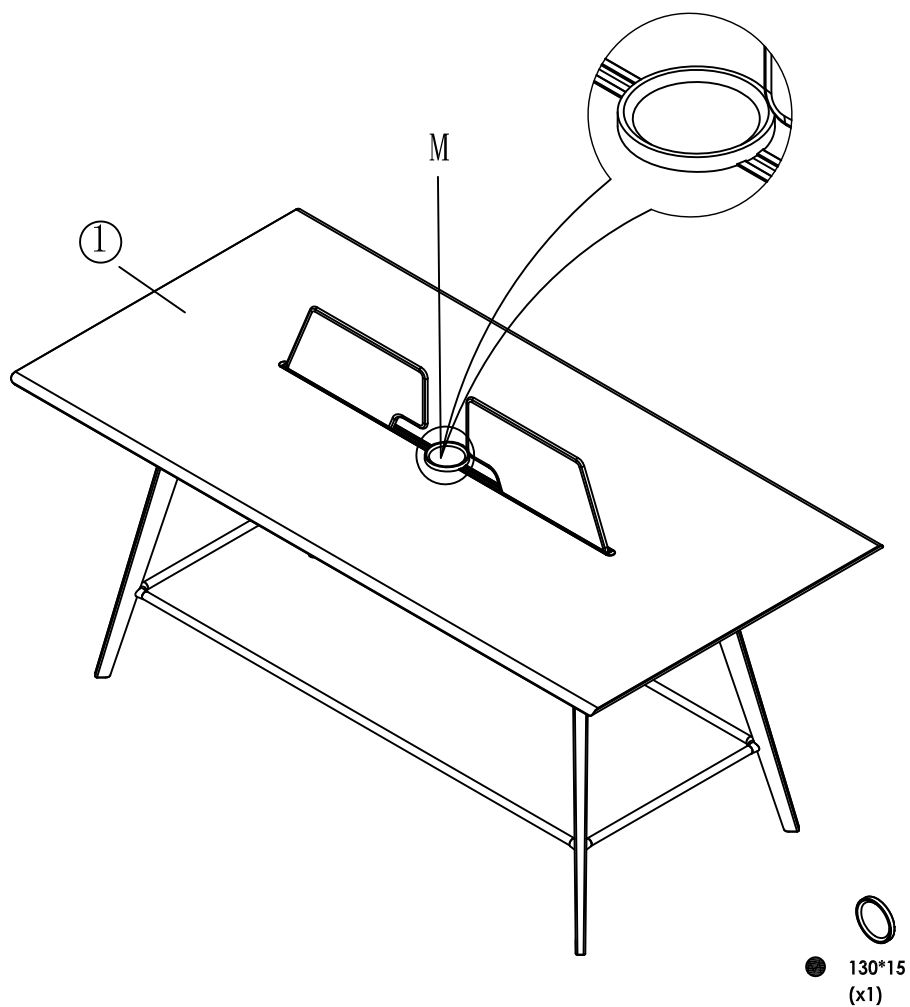

Done !

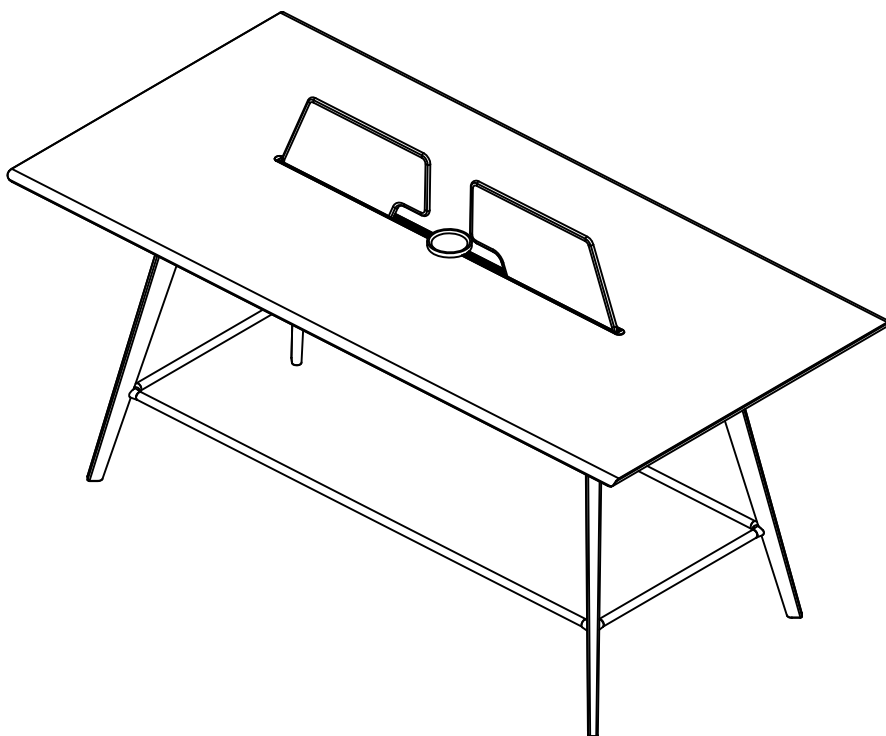

Acceptance note:

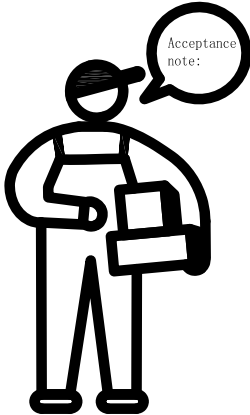


● Clean the surface.



● Tidy up the scene.



● Check and accept.

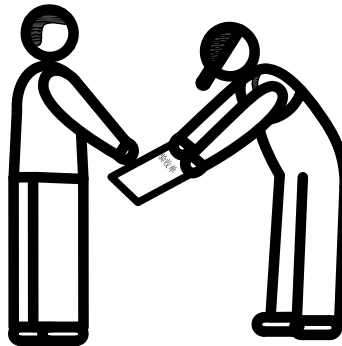




Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com






Jason Series EW80 Executive Table Installation Manual

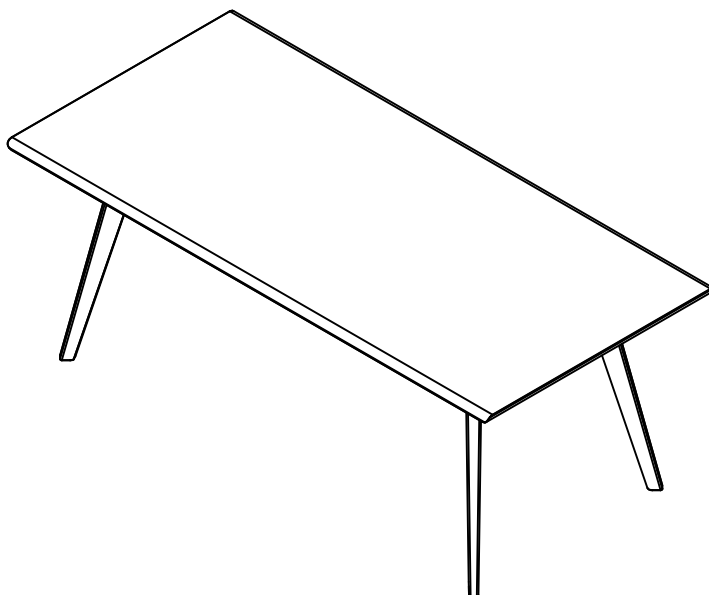


This manual is used for the installation of EW80.200095.
Please read this manual carefully before use and keep it properly.


Assembly note:

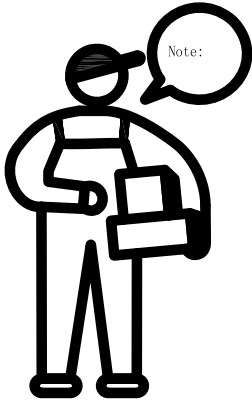


● Use a protective layer and handle the product with care.

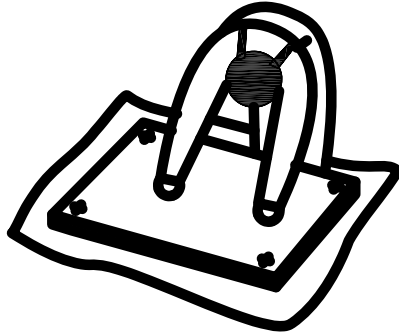

● At least two people are required.

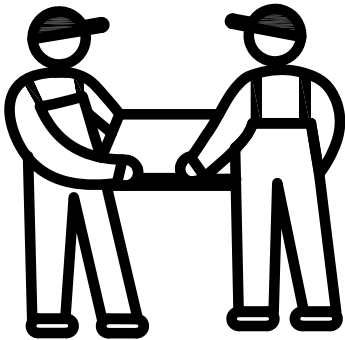


● Contact Sunon if you have any confusions.

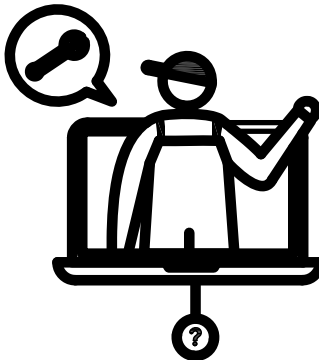

This picture shows all the accessories required, among them some are key accessories.
If you have missed any, please contact Sunon. Tel:+86-400-8600-666

Explosion diagram:

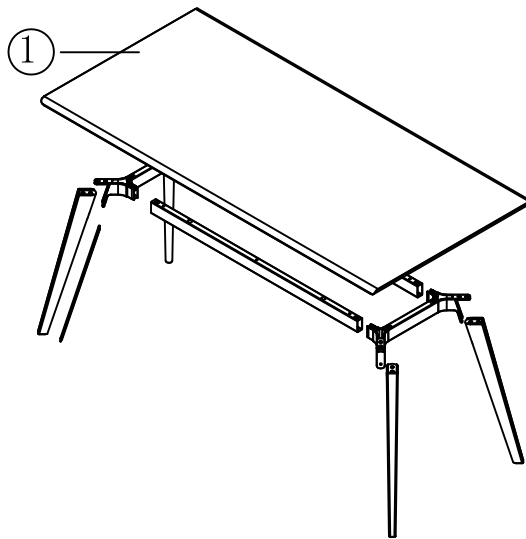


No	Name	Pcs
1	tabletop	1

Accessory list:

Allen key	4#	1	Allen key	5#	1	round-head hex screw	M6x15	6
adjuster	M6x18	4	table leg	768*76*48	3	leg (cabling)	768*76*48	1
leg connector	abnormal shape	2	steel beam	1235*60*30	2			

1. Install adjusters.


1

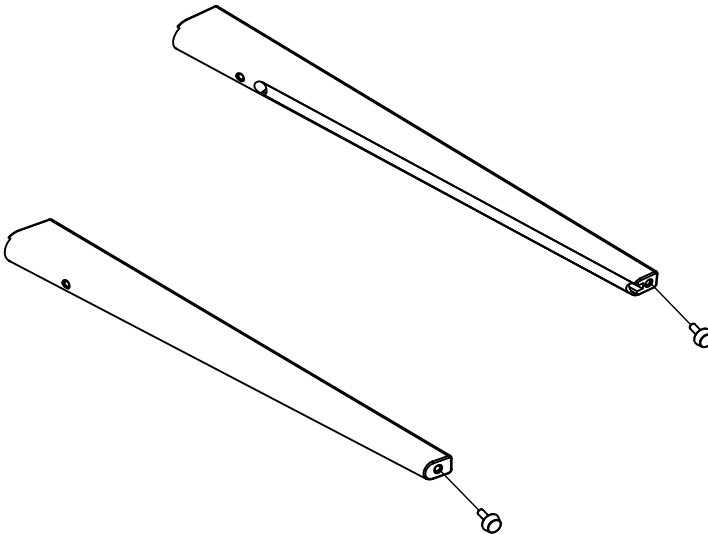

● M6*18
(x4)




● 768*76*48
(x3)



● 768*76*48
(x1)


-
1. Install leg connectors (the accessory comes with 12 M6*25 screws)
 2. Don't tighten the screws until finishing the installation of all screws.
-

2

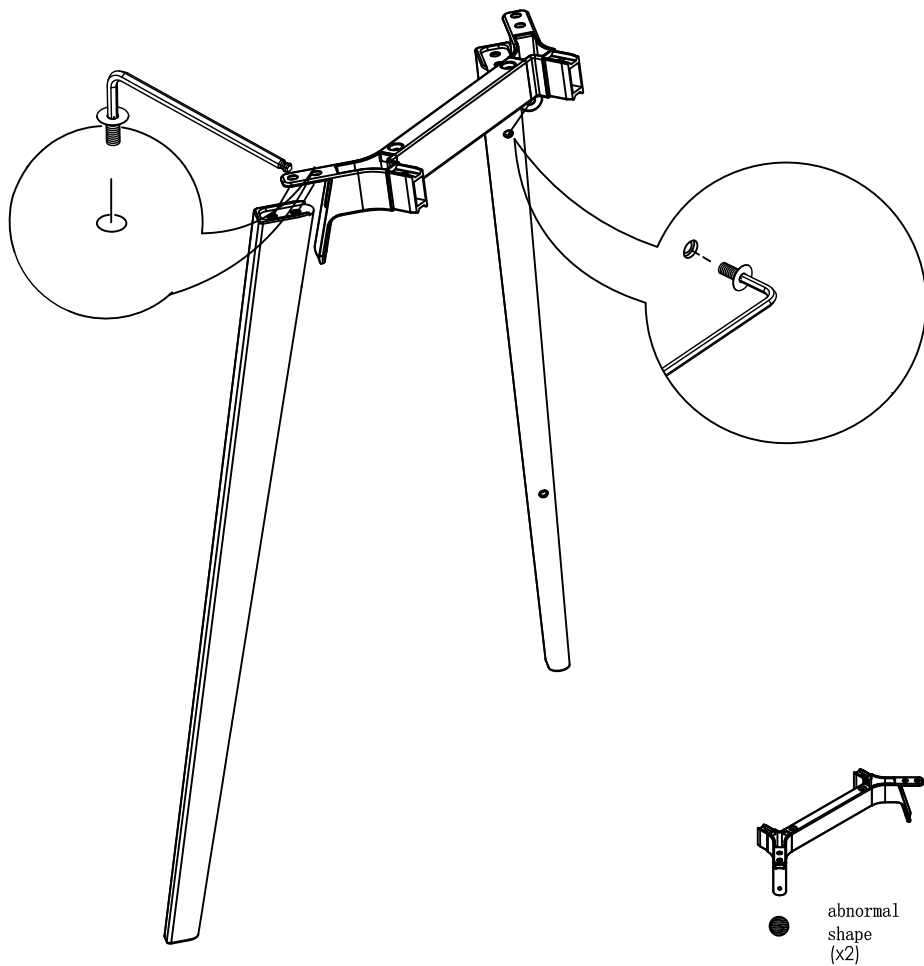


1. Remove the pre-installed 8 M8*16 screws inside the leg connectors.

3

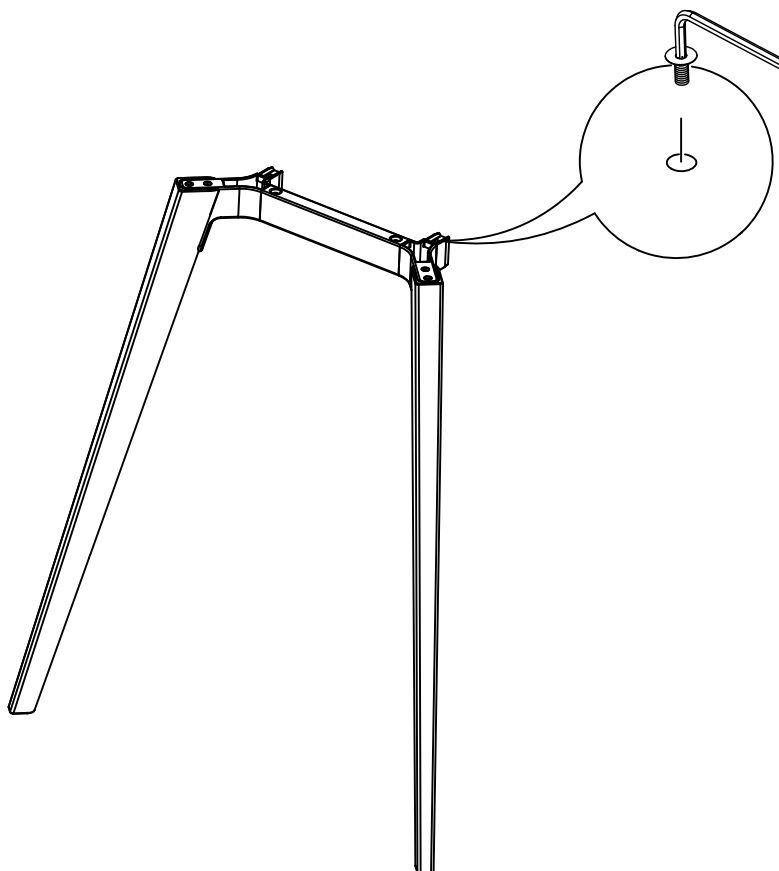


-
1. Use the pre-installed M8*16 screws of leg connectors to install steel beams.
 2. If there is modesty panel, install the outside hangers.
-

4

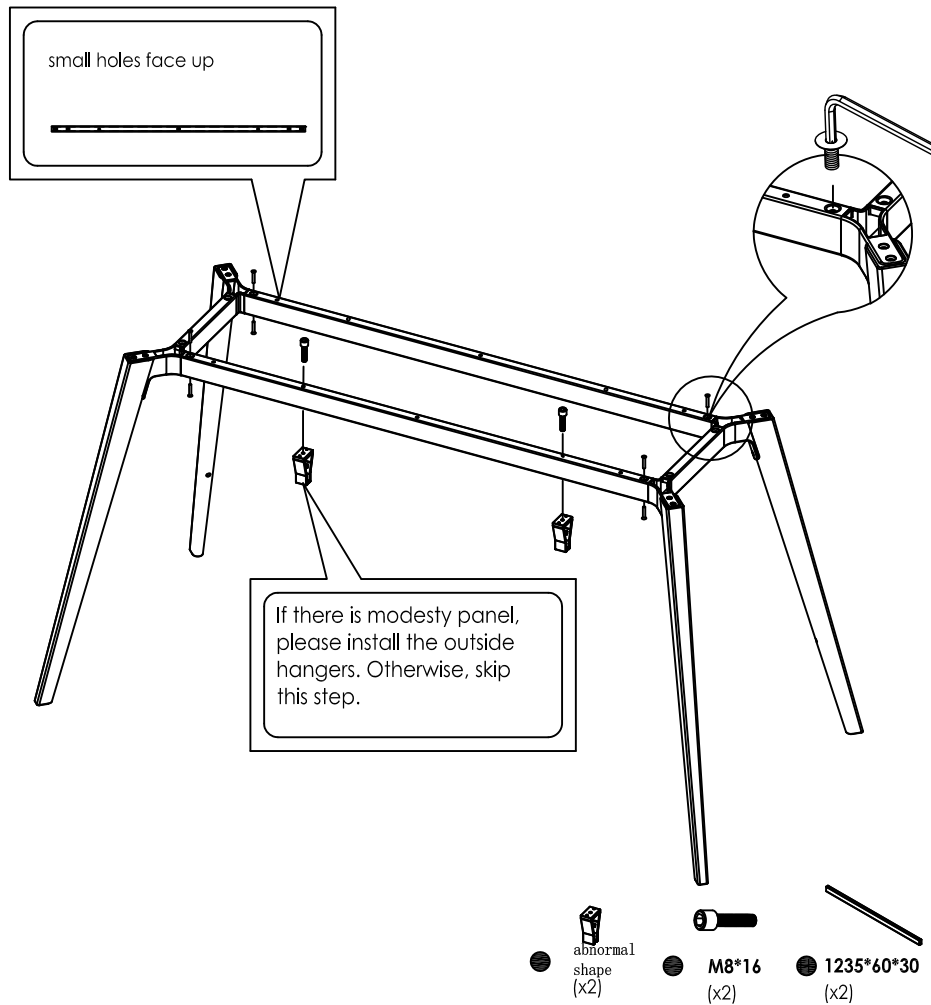

1. Install the tabletop. (Turn the table upside down and put it on a piece of cardboard.)



5

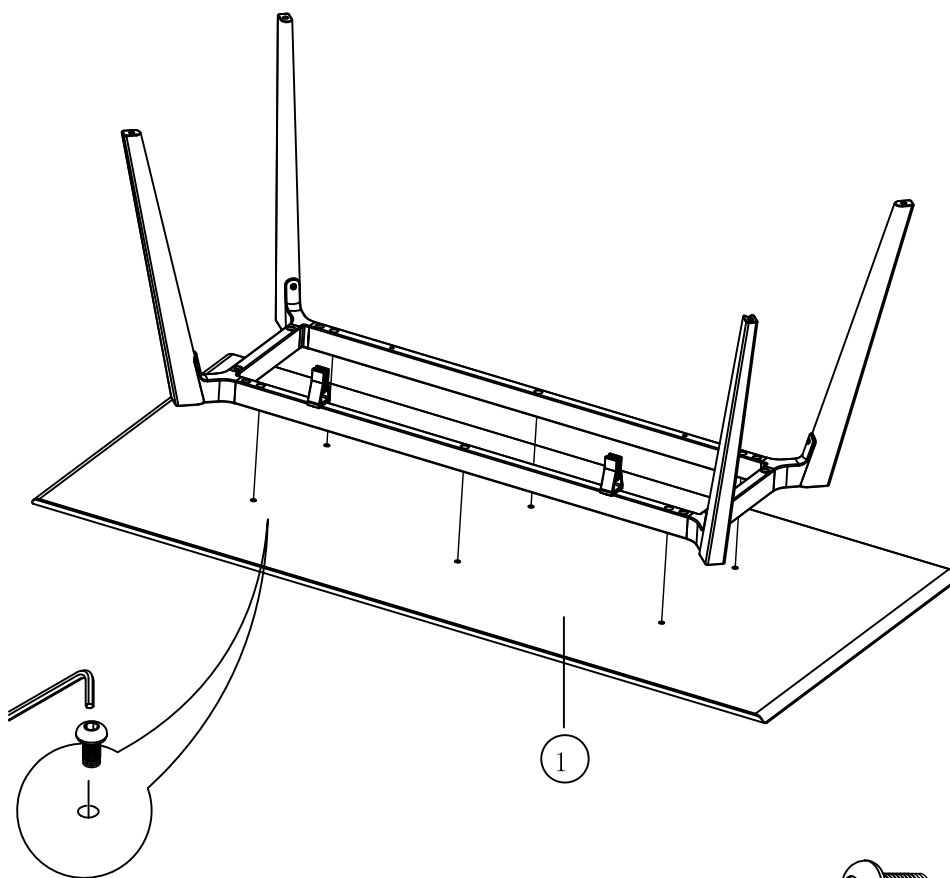

● **M6*15**
(x6)


1. Install the inside hangers on the modesty panels.

6

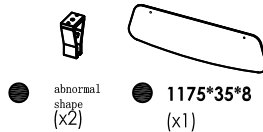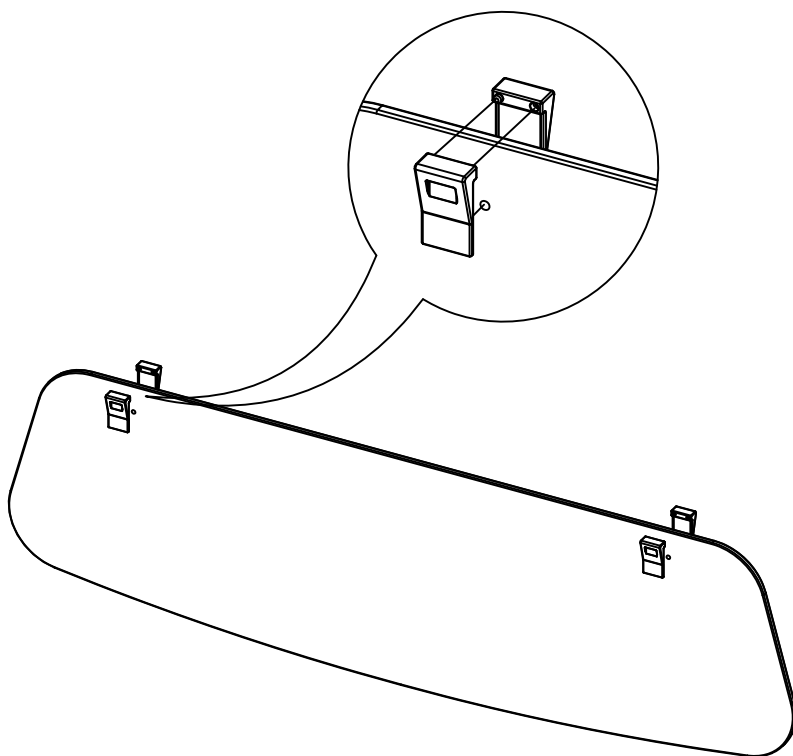


1. Push the modesty panel inwards to make the inside hangers hang on the outside hangers.

7

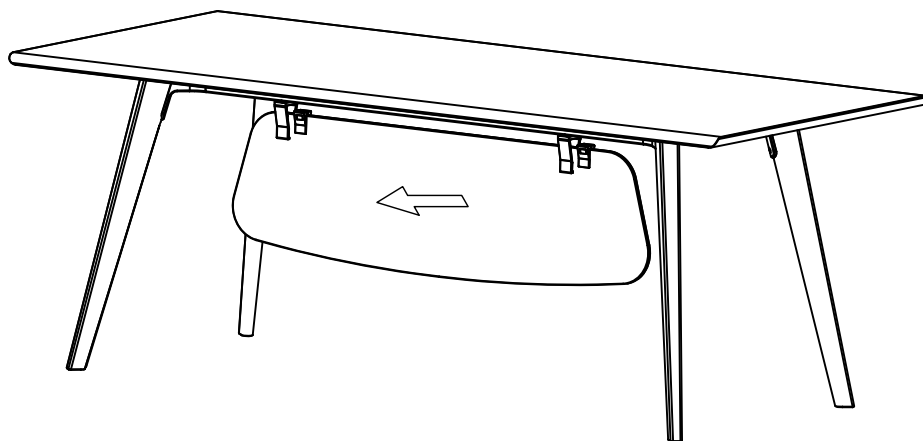

1.Cabling.


8

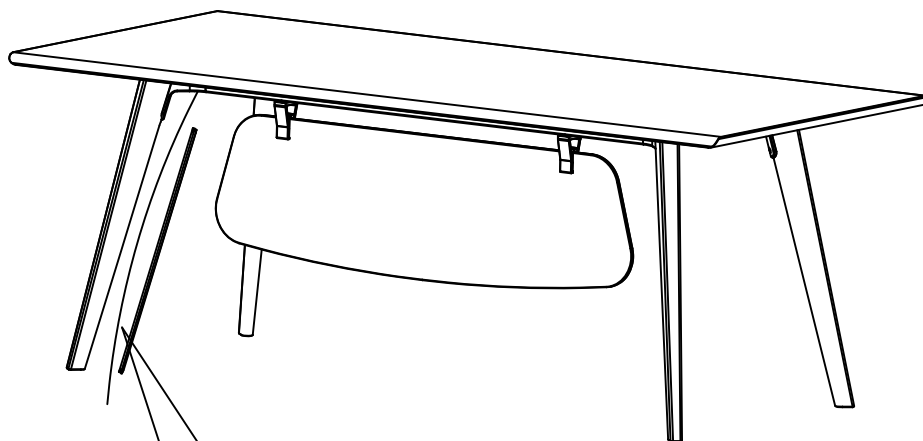


Cabling

Remove the covering plate
and manage the wiring.
Then restore the plate.

Done !

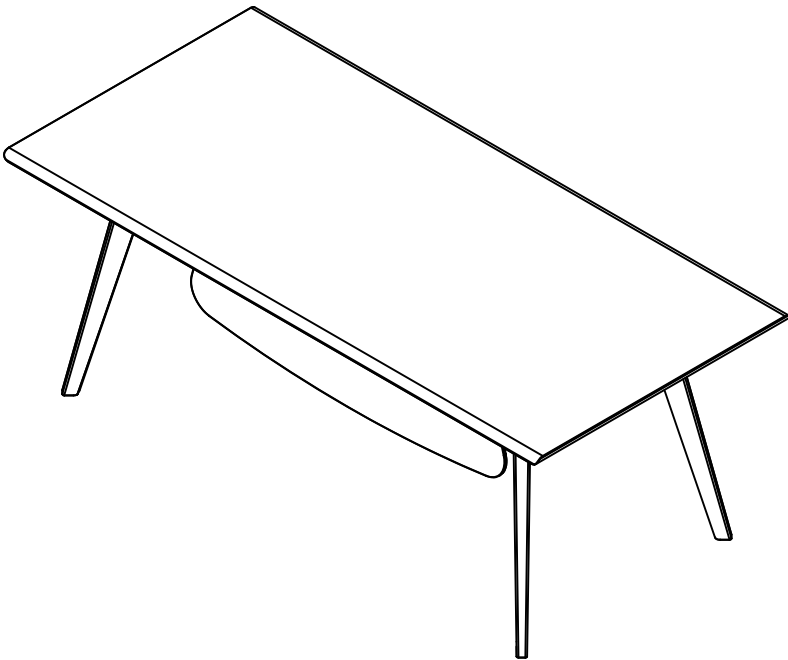

Acceptance note:

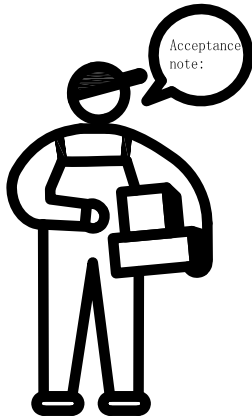


● Clean the surface.



● Tidy up the scene.



● Check and accept.

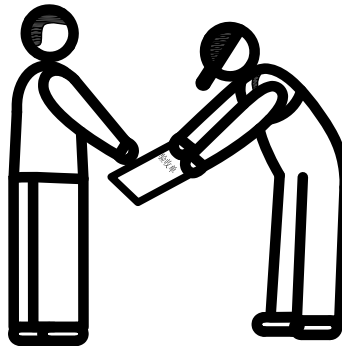




Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com






Jason Series EW90 File Cabinet Installation Manual

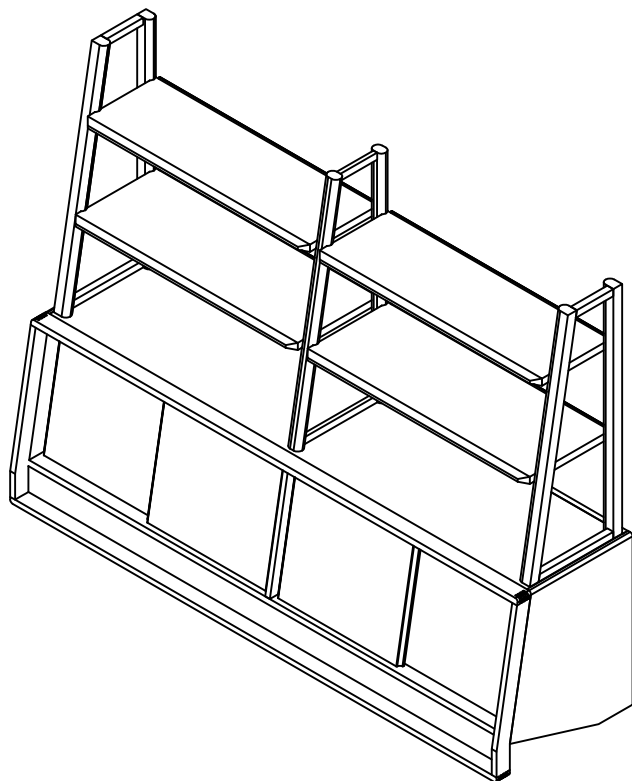


This manual is used for the installation of EW90.200056.
Please read this manual carefully before use and keep it properly.


Assembly note:

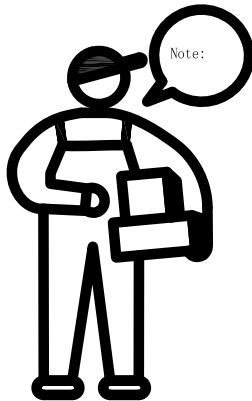


● Use a protective layer and handle the product with care.

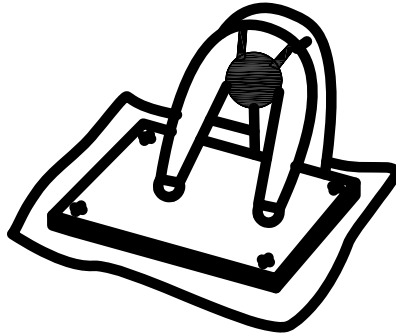

● At least two people are required.

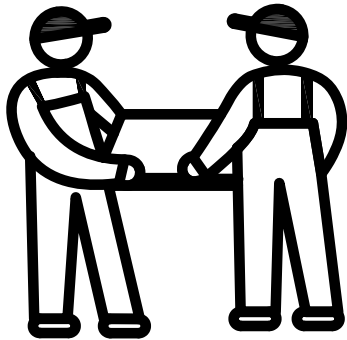


● Contact Sunon if you have any confusions.

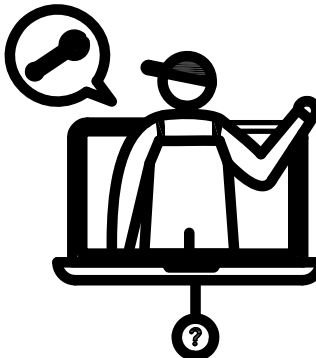






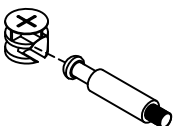

This picture shows all the accessories required, among them some are key accessories.
If you have missed any, please contact Sunon. Tel:+86-400-8600-666

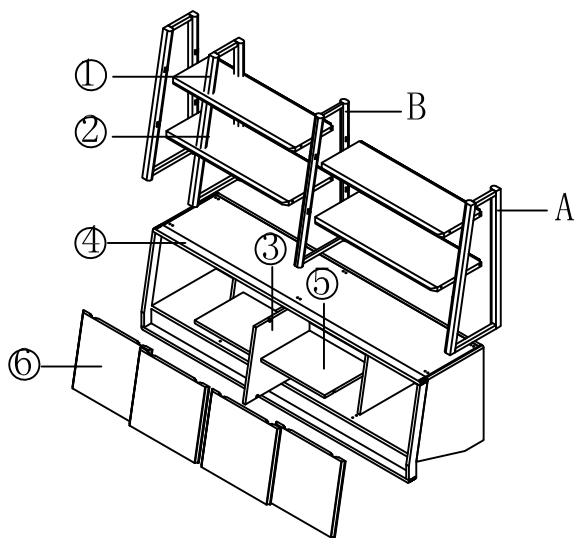Explosion diagram:




No.	Name	Pcs
1	upper shelf panel	2
2	lower shelf panel	2
3	movable standing panel	1
4	cabinet	1
5	movable shelf panel	2
6	door panel	4

Accessory list:
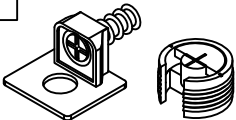
<div data-bbox="152 342 200 372">A</div> 	<div data-bbox="477 342 525 372">B</div> 	<div data-bbox="802 342 850 372">C</div> 
<div data-bbox="148 508 271 560">white oak frame</div> <div data-bbox="289 521 399 542">890*380*50</div> <div data-bbox="408 521 454 542">1 pair</div>	<div data-bbox="467 508 614 560">white oak middle frame</div> <div data-bbox="618 521 728 542">890*380*50</div> <div data-bbox="751 521 769 542">1</div>	<div data-bbox="797 508 934 560">cross flat-head screw</div> <div data-bbox="957 521 1026 542">M6x30</div> <div data-bbox="1067 521 1094 542">12</div>
<div data-bbox="152 566 200 596">D</div> 	<div data-bbox="477 566 525 596">E</div> 	<div data-bbox="802 566 850 596">F</div> 
<div data-bbox="148 732 271 784">shelf panel supporter</div> <div data-bbox="312 745 367 772">φ18</div> <div data-bbox="422 745 440 772">8</div>	<div data-bbox="481 745 573 772">gasket</div> <div data-bbox="642 745 696 772">φ7*1</div> <div data-bbox="751 745 779 772">16</div>	<div data-bbox="797 745 934 772">three-in-one</div> <div data-bbox="957 745 1039 772">φ15*32</div> <div data-bbox="1067 745 1094 772">16</div>
<div data-bbox="152 790 200 820">G</div> 		
<div data-bbox="148 974 285 1008">ring sticker</div> <div data-bbox="316 974 358 1008">0.5</div> <div data-bbox="422 974 450 1008">30</div>		


1. Use three-in-one to connect the frame with shelf panels.

1

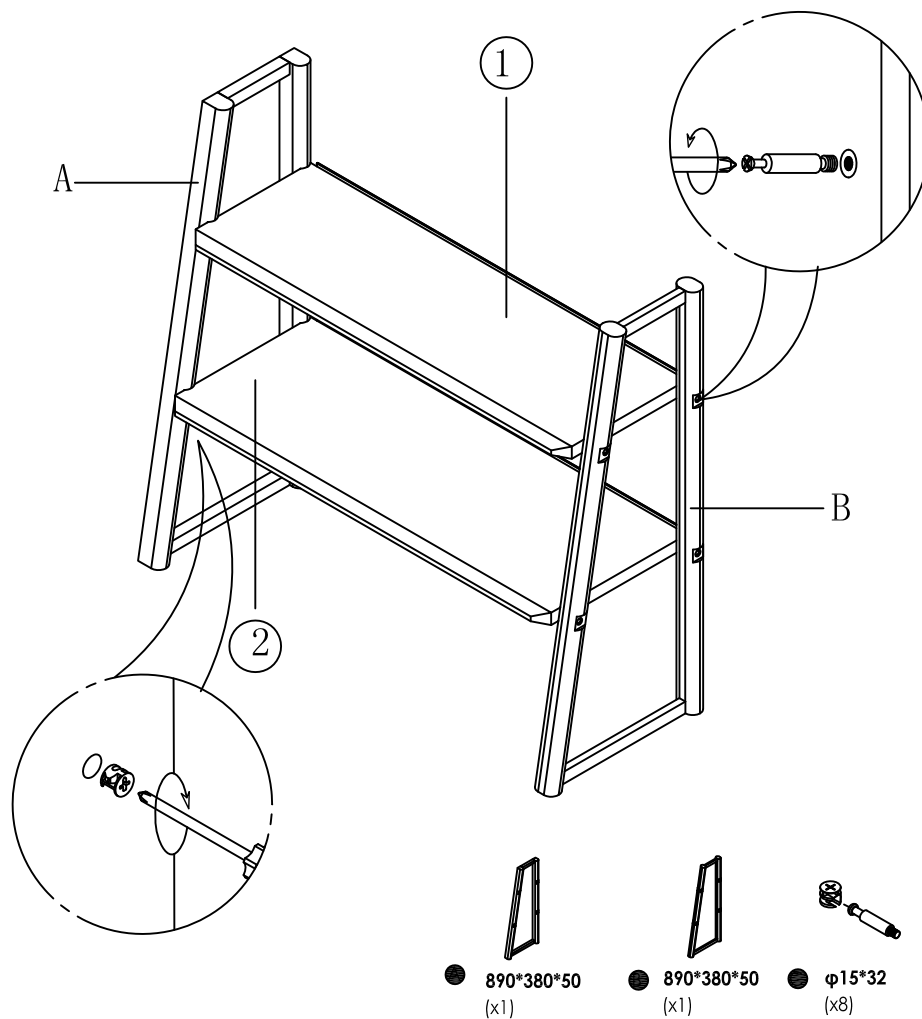


1. Loosen shelf panel supporter's screws, gently push the movable standing panel and take it out.

2

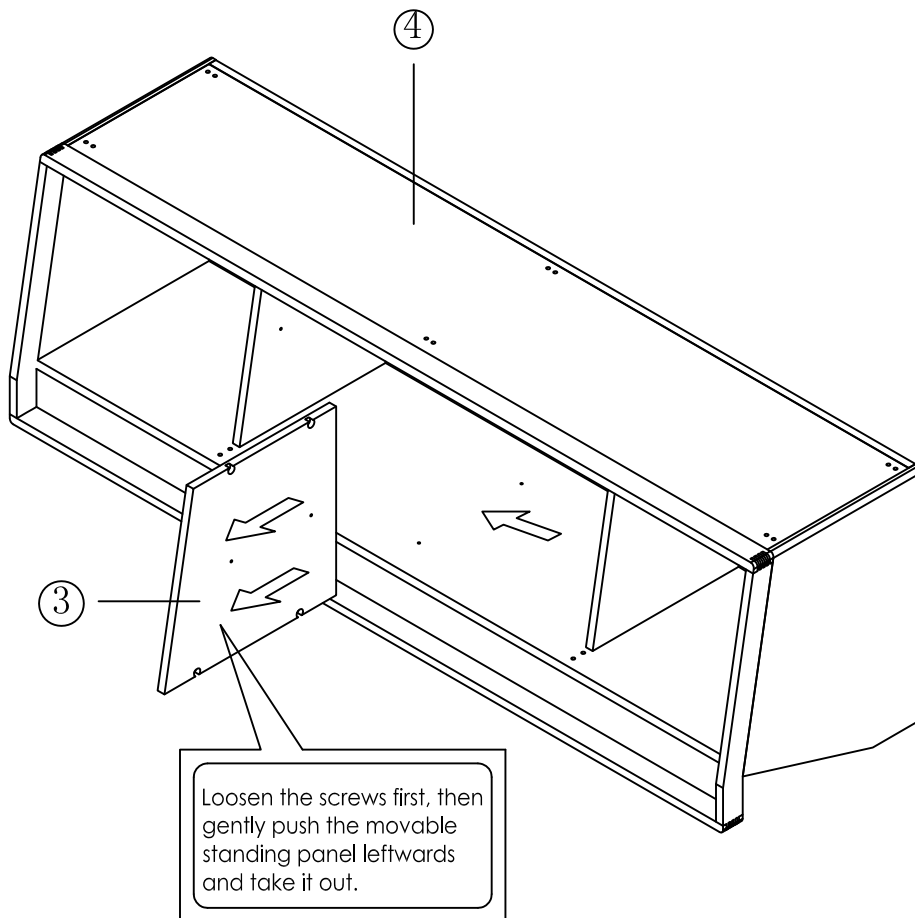

1. Connect the left shelf with the lower cabinet.


3

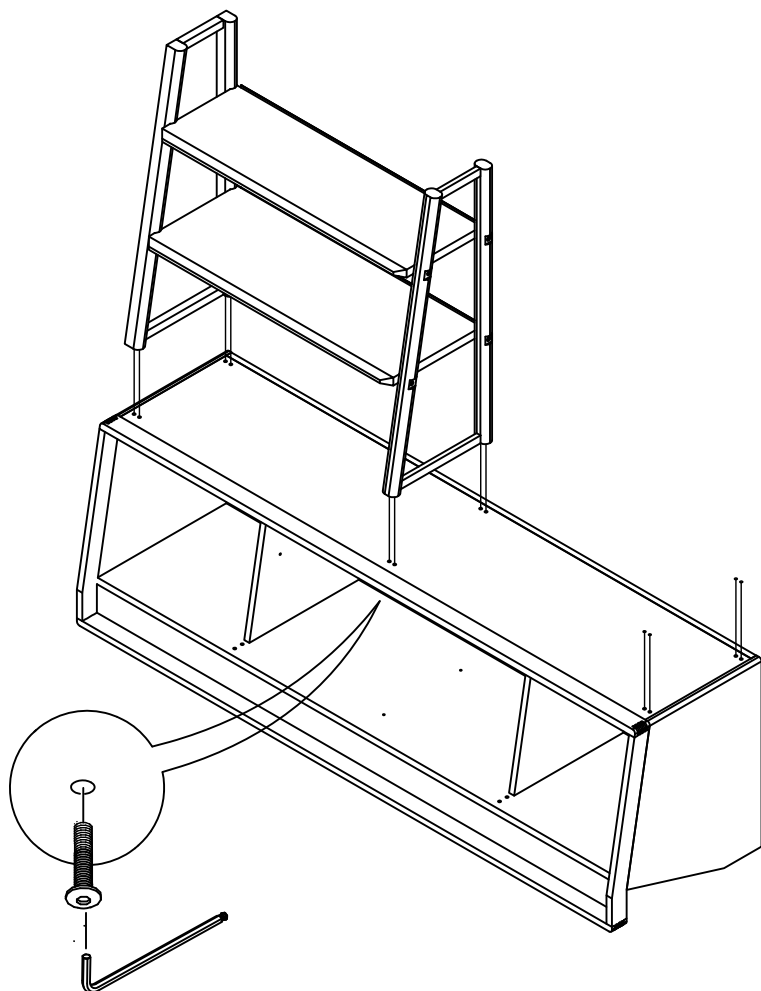

● M6*30
(x8)


1. Connect the right shelf with the left one.

4

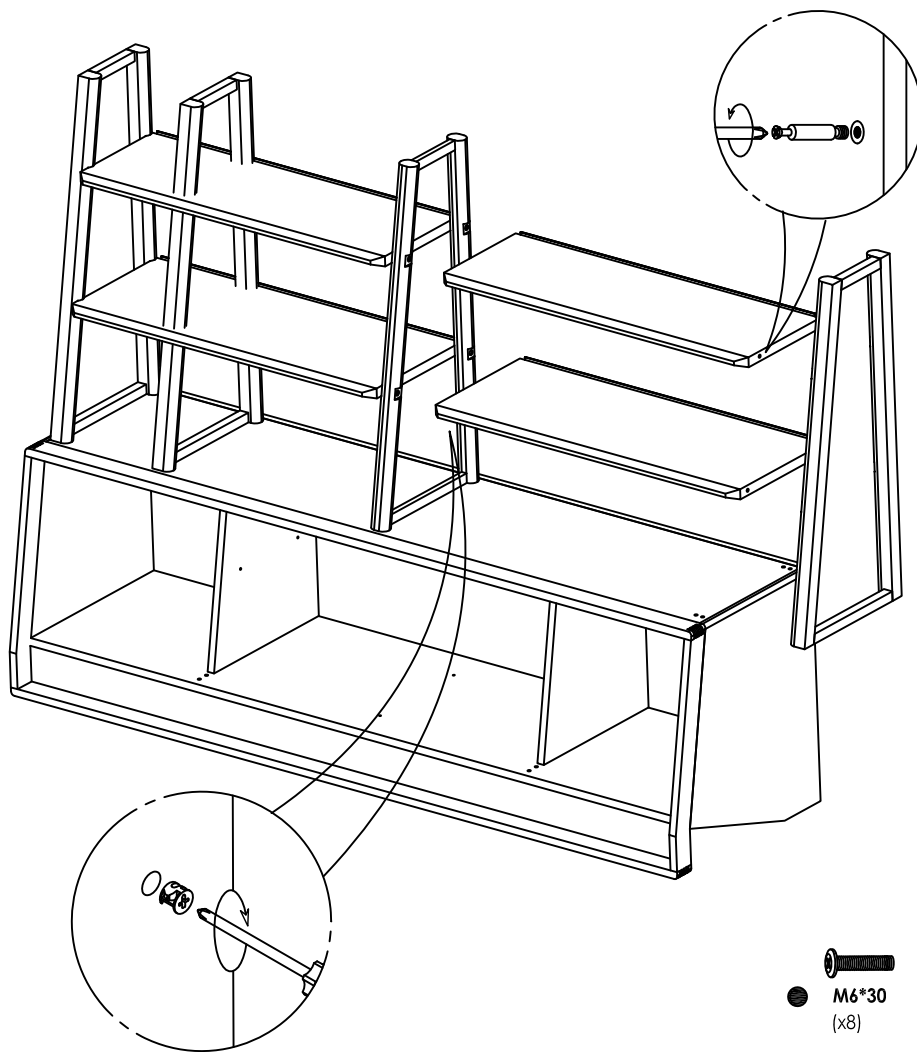

1. Connect the shelf with the lower cabinet.


5

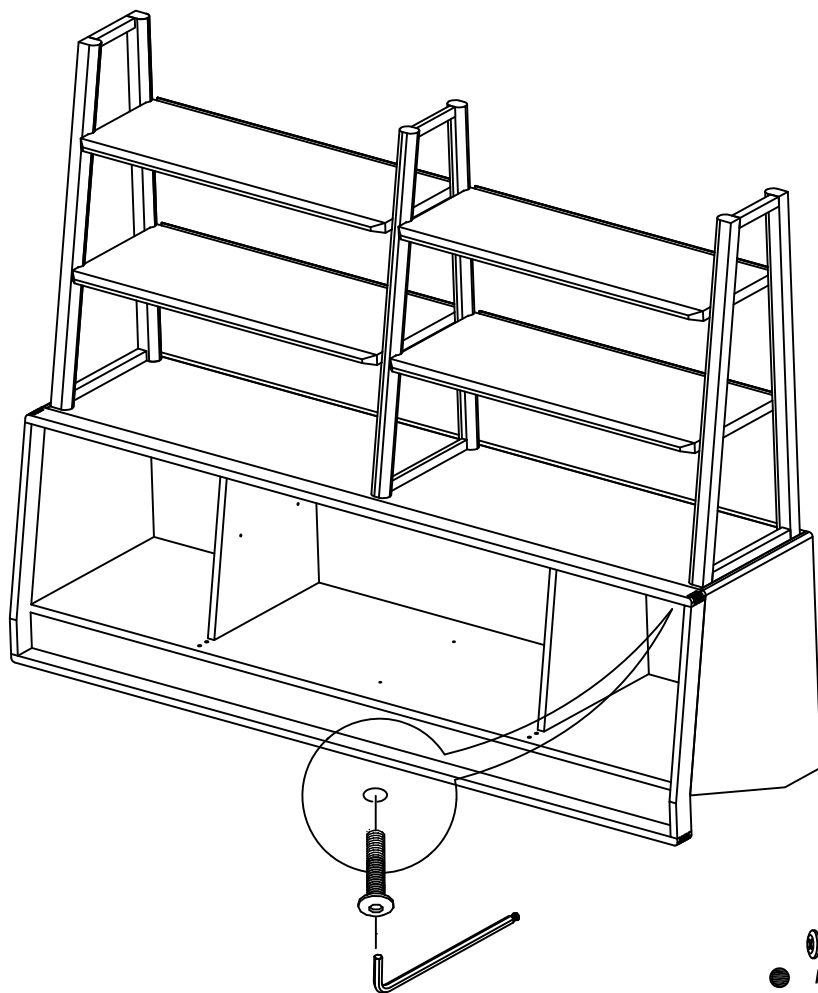

● M6*30
(x4)


1. Install the movable standing panel.

6

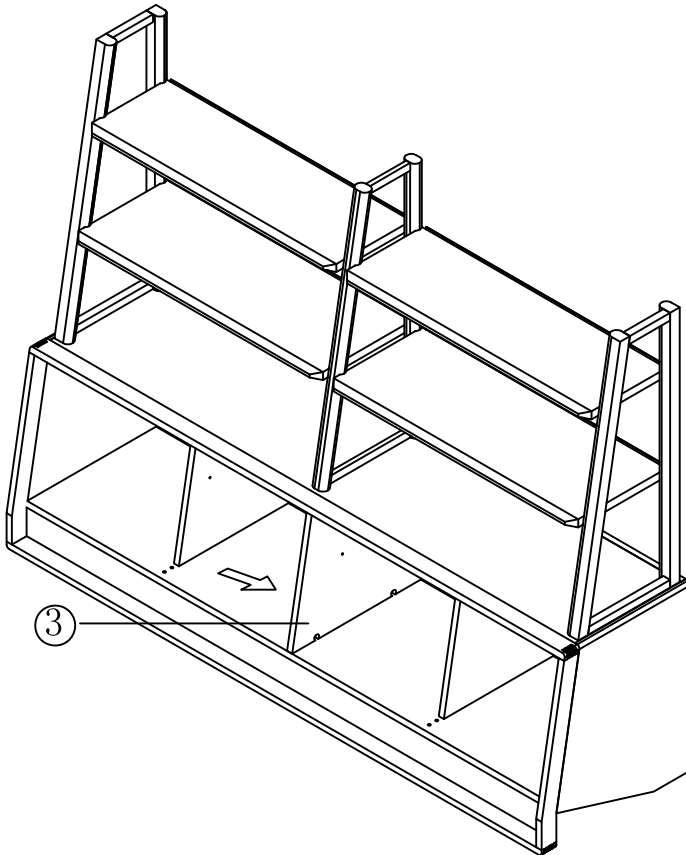


-
1. First, install the movable panel buckle on the standing panel, then pre-install the shelf panel supporter on the movable shelf panel.
 2. Snap the movable shelf panel into place.
-

7

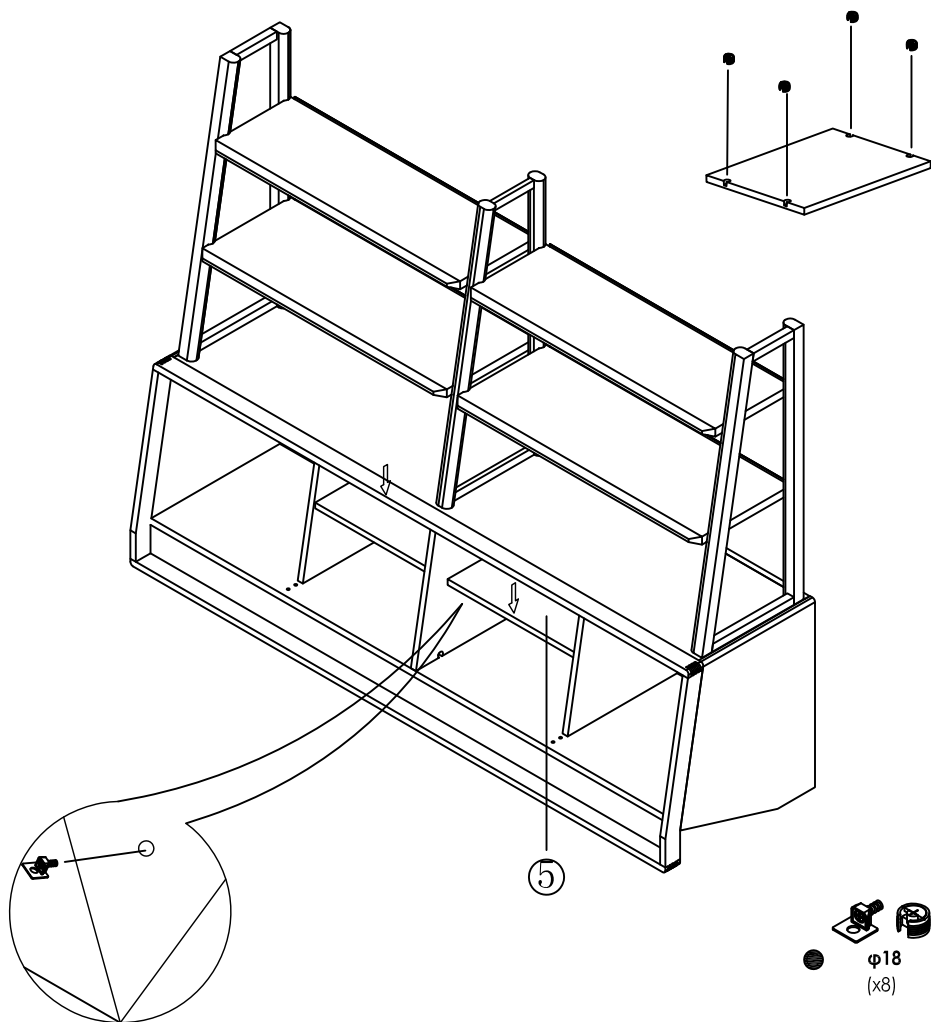


-
1. Equip the door panel with gaskets.
 2. Stick gaskets at the positions 5mm away from the edges of the 4 door panels.
-

8

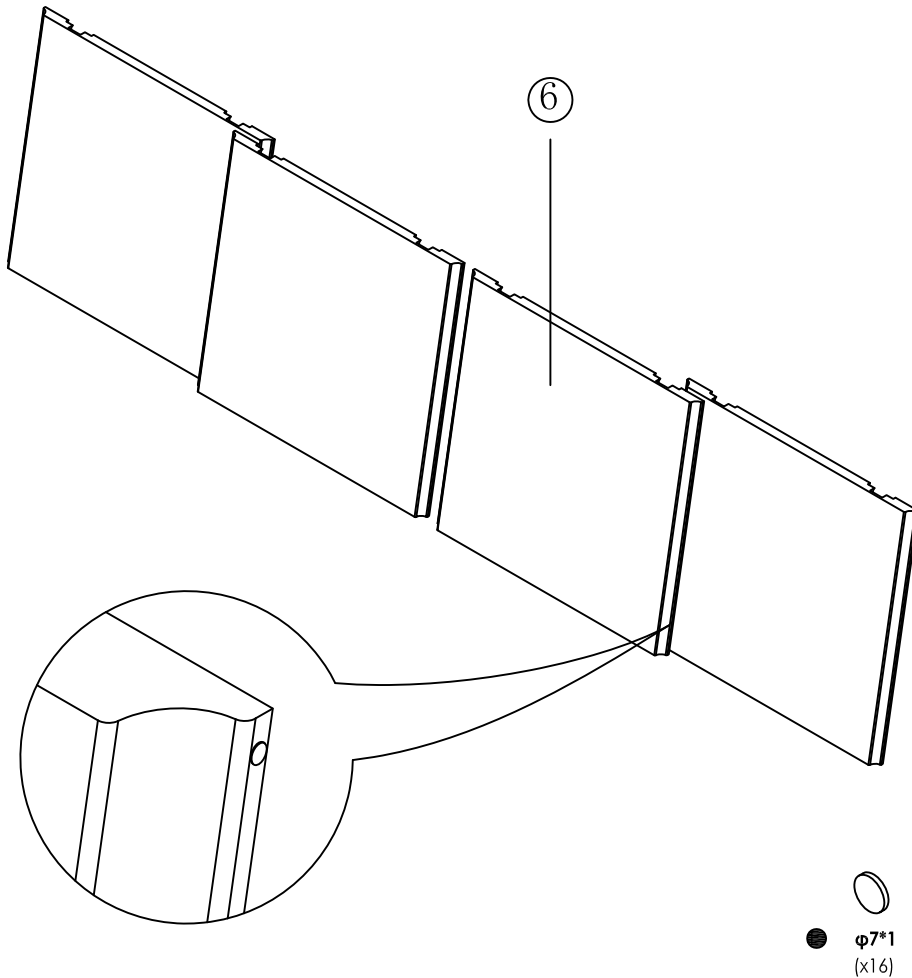


1.Snap the door stop into the slot of the door panel first, then snap the door panel into the sliding device

9

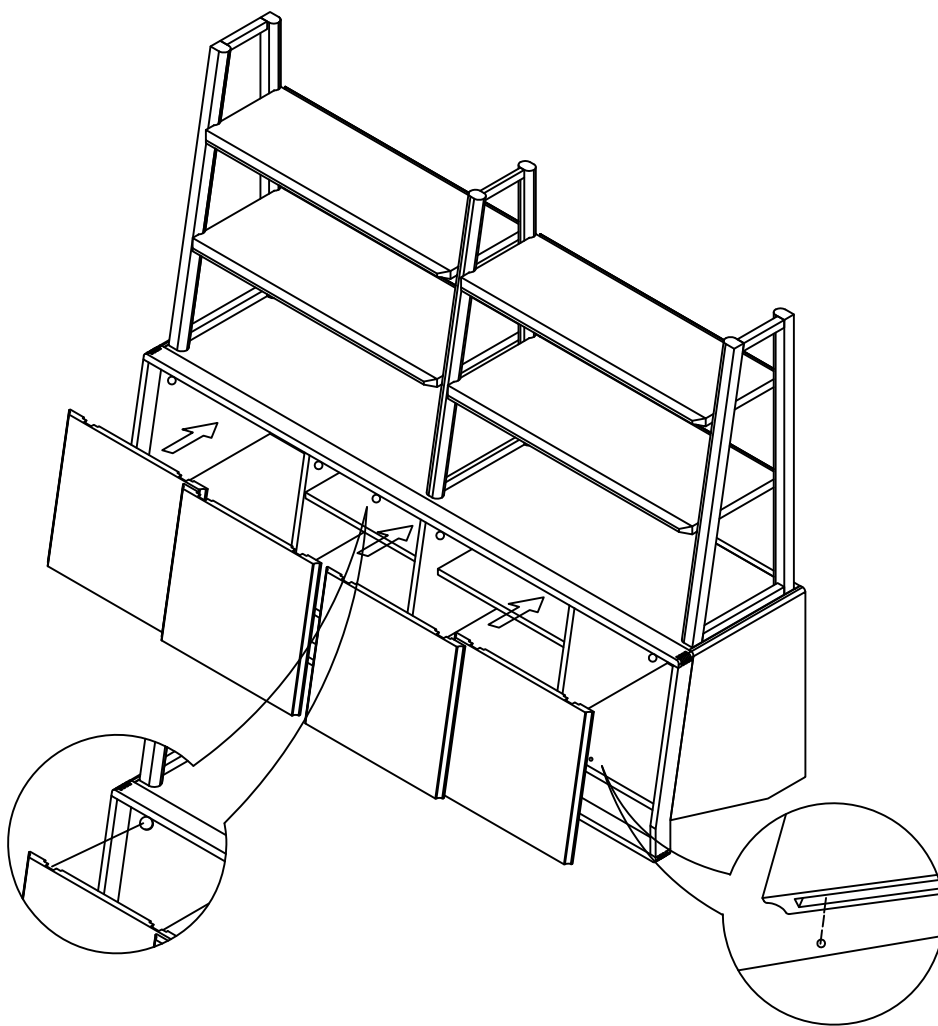


1. Paste ring stickers where necessary.

10

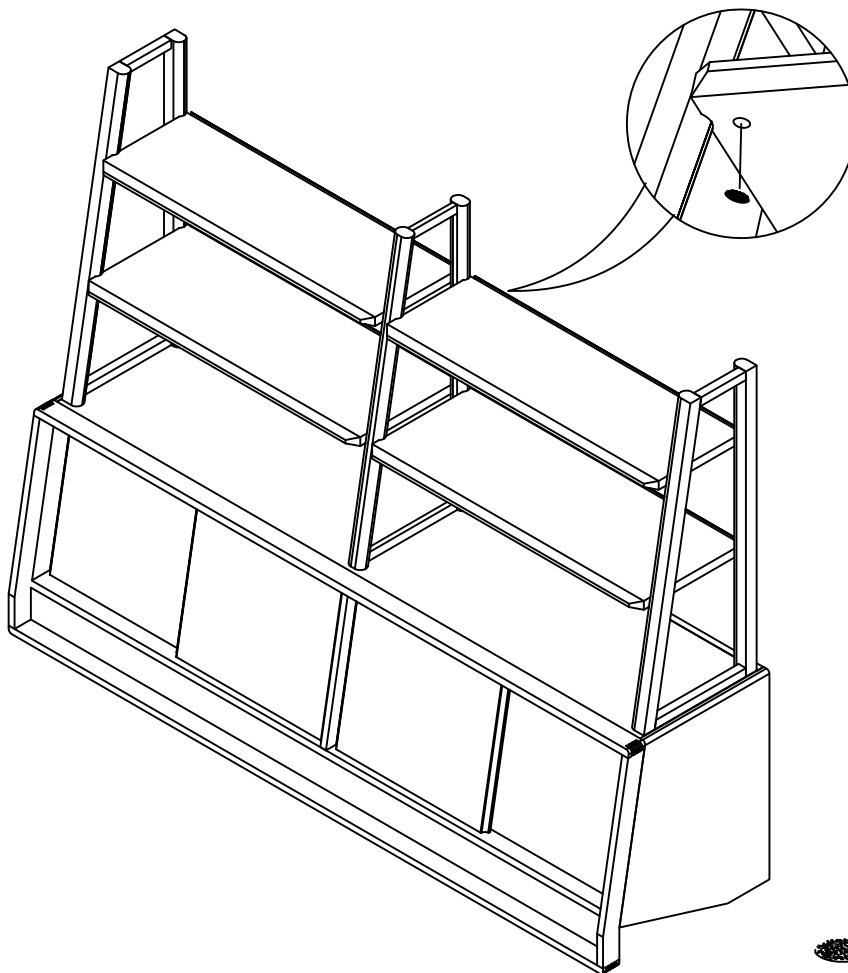

 **0.5**
(x30)

Done !

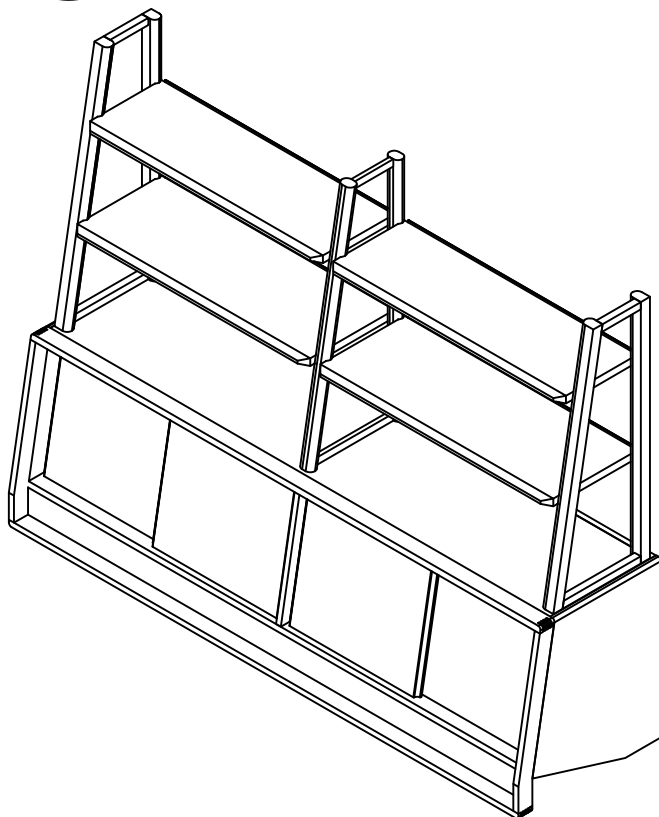

Acceptance note:





Suite 150, Building 525 Technology Drive, Irvine, CA.92618
sunonglobal.com 949-337-8838 info.us@isunon.com

