





Phone Booth MG.DNA20-2.100100G

Assembly Instructions

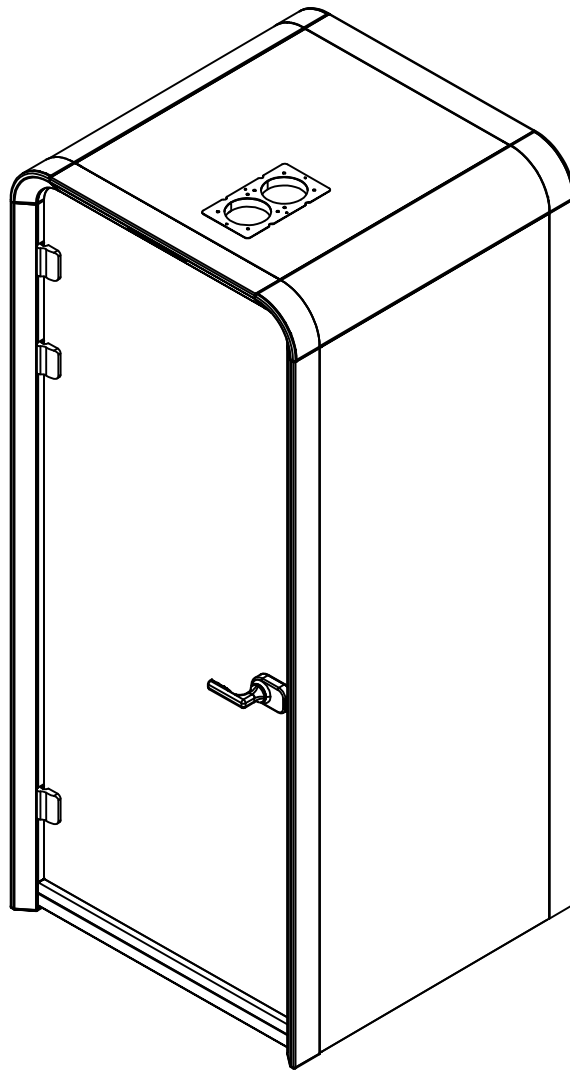


This instruction is apply to the assembly of MG.DNA20-2.100100G.
Please read all this instruction before assembly and save it carefully.


Installation Notes

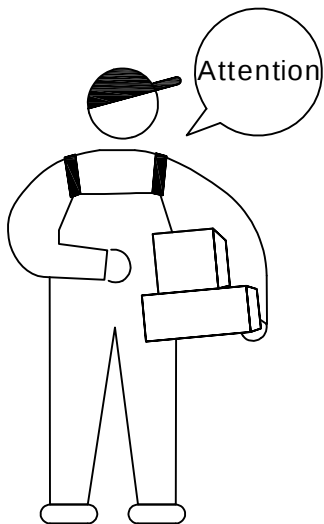


- ① Handle with care and use protective padding when necessary.

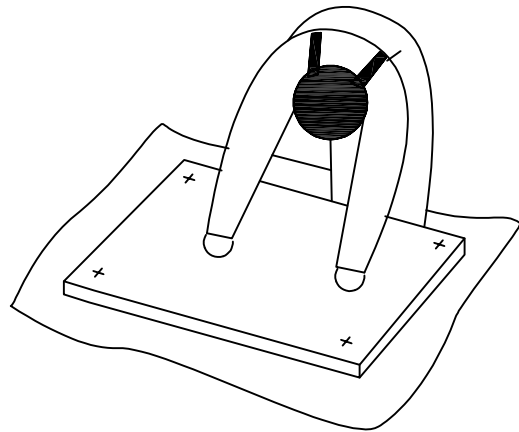

- ② Secure transportation requires assistance from two persons.

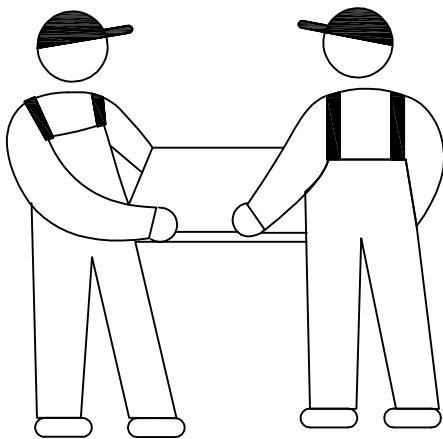


- ③ For any inquiries, please contact Sunon.

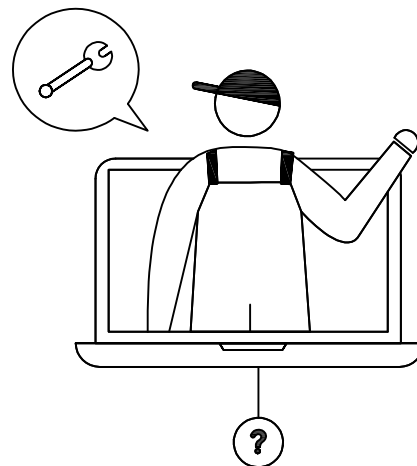










The instructions indicates the components included in this product, some of which are considered key components. If the components shown here do not match your order, please contact Sunon: +86-400-8600-666

Exploded diagram

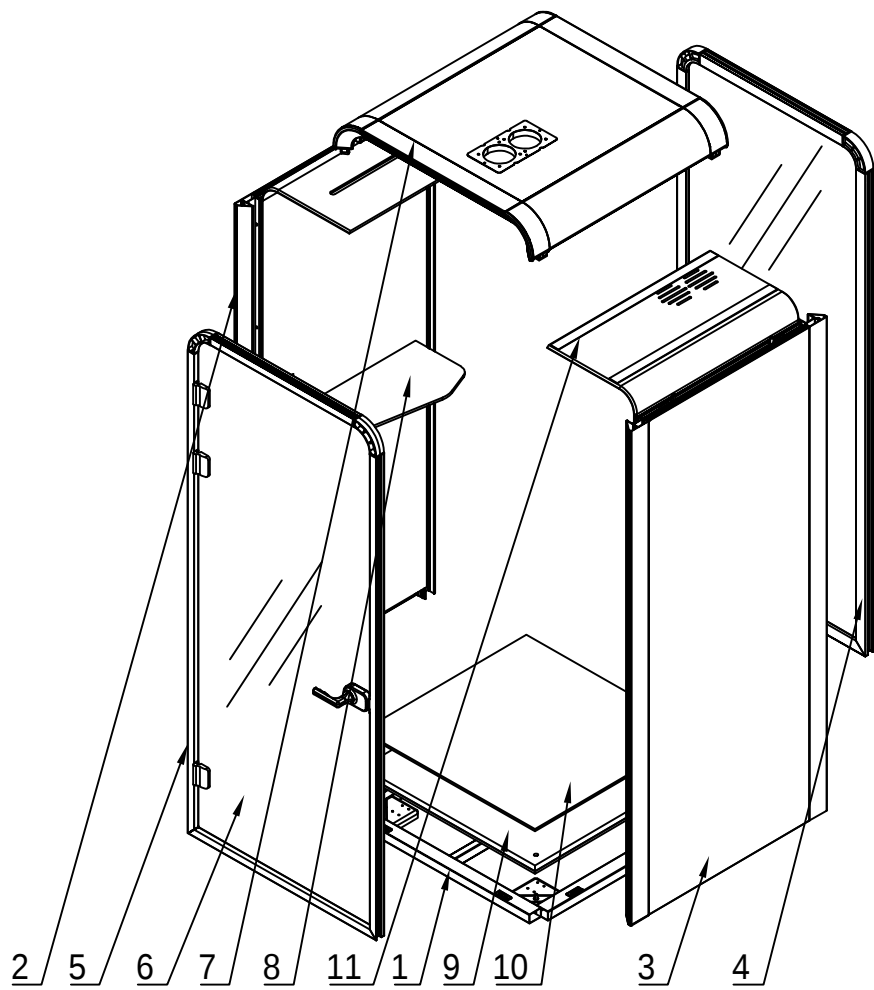


No.	PART NAME	QTY	No.	PART NAME	QTY
1	Bottom steel frame	1	7	Top frame	1
2	Left side panel	1	8	Tabletop	1
3	Right side panel	1	9	Bottom plate	1
4	Fixed glass frame	1	10	Carpet	1
5	Door frame	1	11	Decorative felt	2
6	Glass door	1			

Parts listing

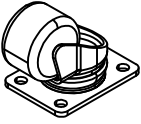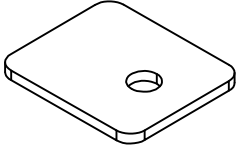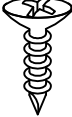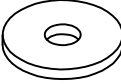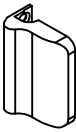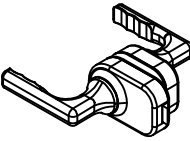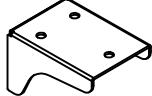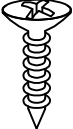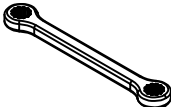A  universal caster 66*47*58 4	B  flat-round head hexagon socket head bolt M6*12 16	C  adjustable feet Ø43*70*M10 5
D  side board fix iron sheet 47*40*3 8	E  hexagon head bolt M8*50 8	F  cross countersunk head drill tail screw ST4.2*16 28
G  hexagon cylindrical head bolt M8*25 4	H  gasket Ø8*1.5 4	I  flat-round head hexagon socket head anti-drop bolt M6*16 14
J  glass door hinge abnormal shape 3	K  glass door lock abnormal shape 1	L  small cantilever 99*70*60 2
M  arc joint outer cover 144*144*83.5 4	N  cross countersunk self-tapping screw ST4*25 4	O  double-ended ratchet wrench 12#*13# 1

Install the universal casters and adjustable feet onto the steel frame.


1

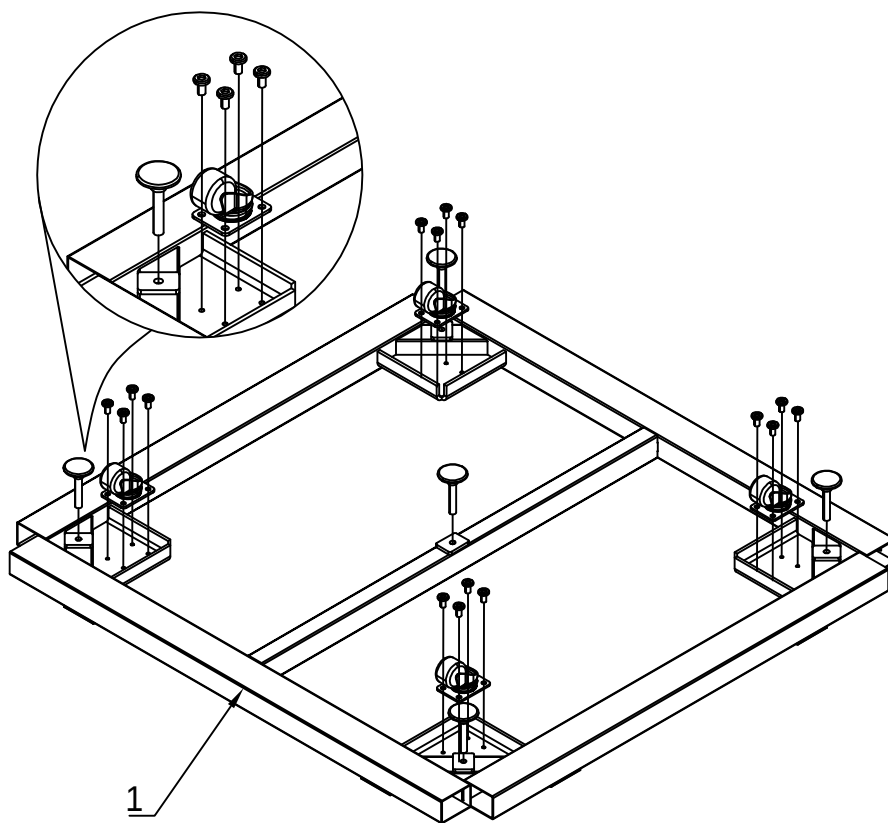

- | | | |
|---|---|---|
|  |  |  |
| A 66*47*58
(x4) | B M6*12
(x16) | C $\Phi 43*70*M10$
(x5) |

Insert the left side panel into the steel frame.


2

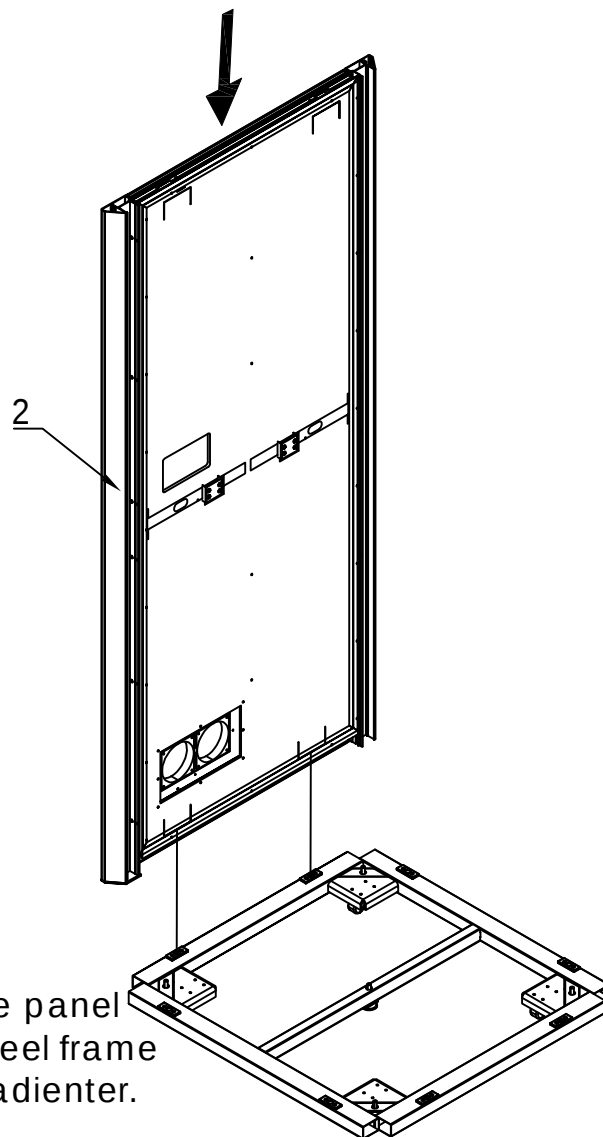

Note: Install the side panel after leveling the steel frame with an infrared gradienter.

Connect the left side panel to the steel frame.

3

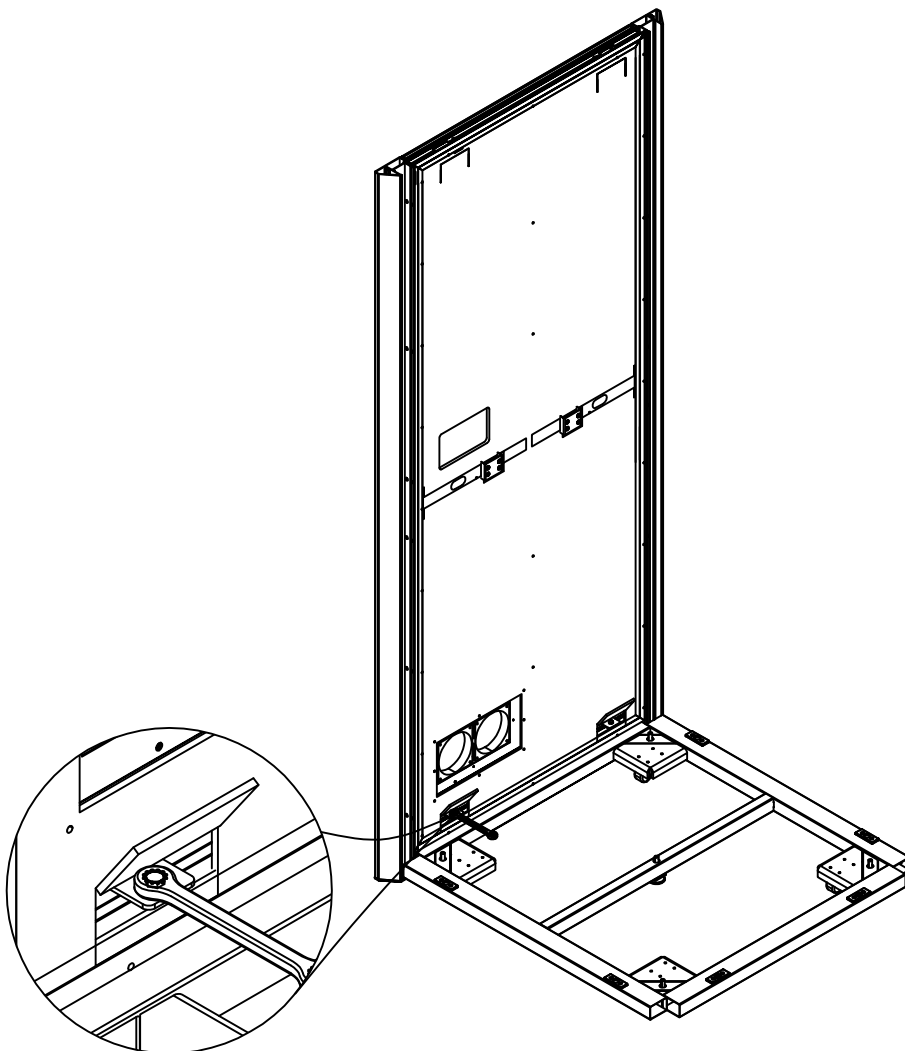


D 47*40*3
(x2)

E M8*50
(x2)


O 12#*13#
(x1)

Install the fixed glass frame.

4

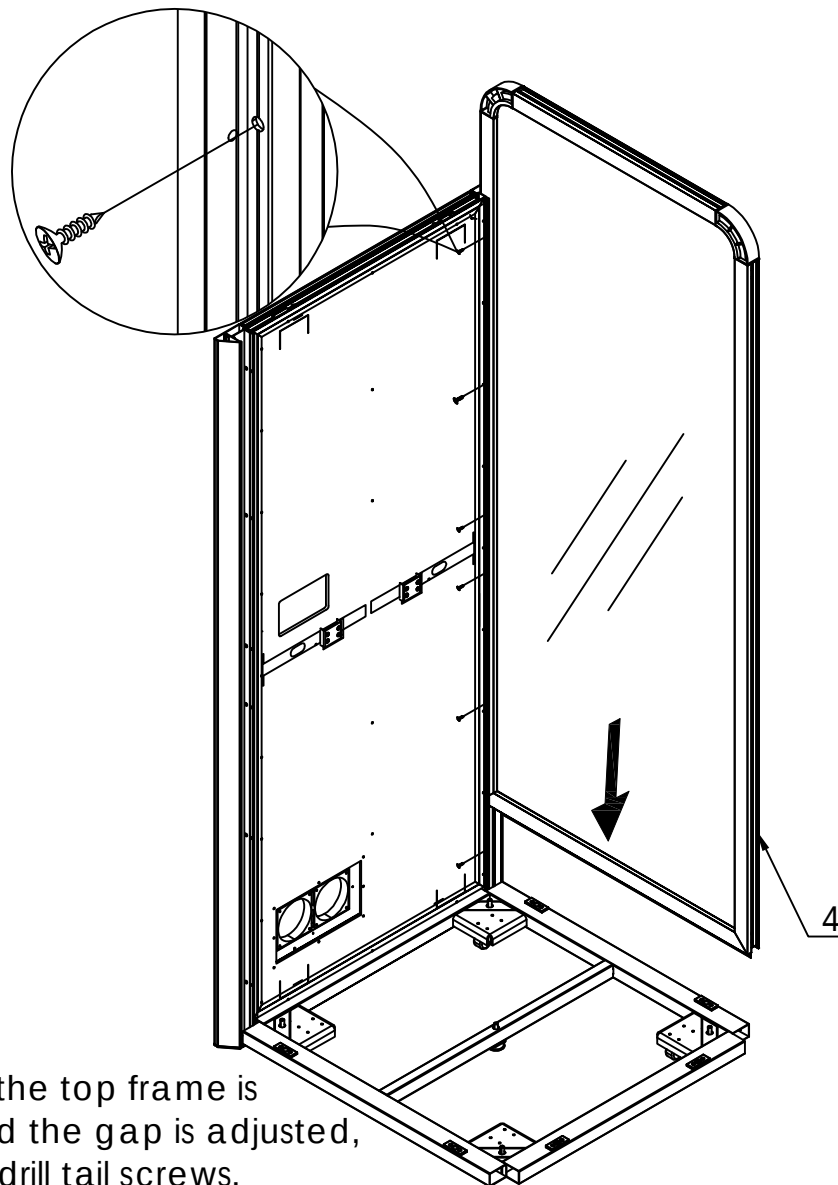


Note: After the top frame is installed and the gap is adjusted, tighten the drill tail screws.

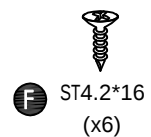


Install the door frame.

5

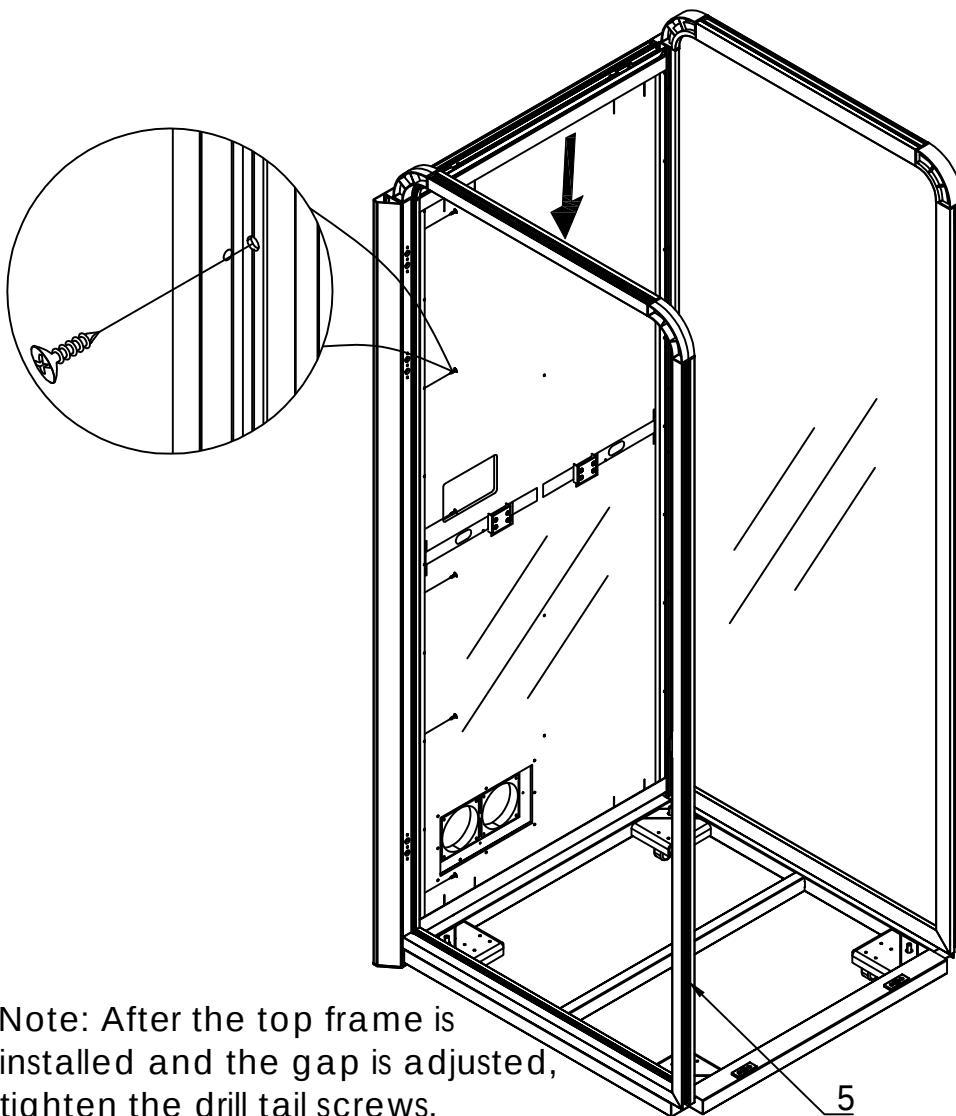


Note: After the top frame is installed and the gap is adjusted, tighten the drill tail screws.

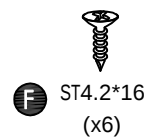

Install the right side panel.



6

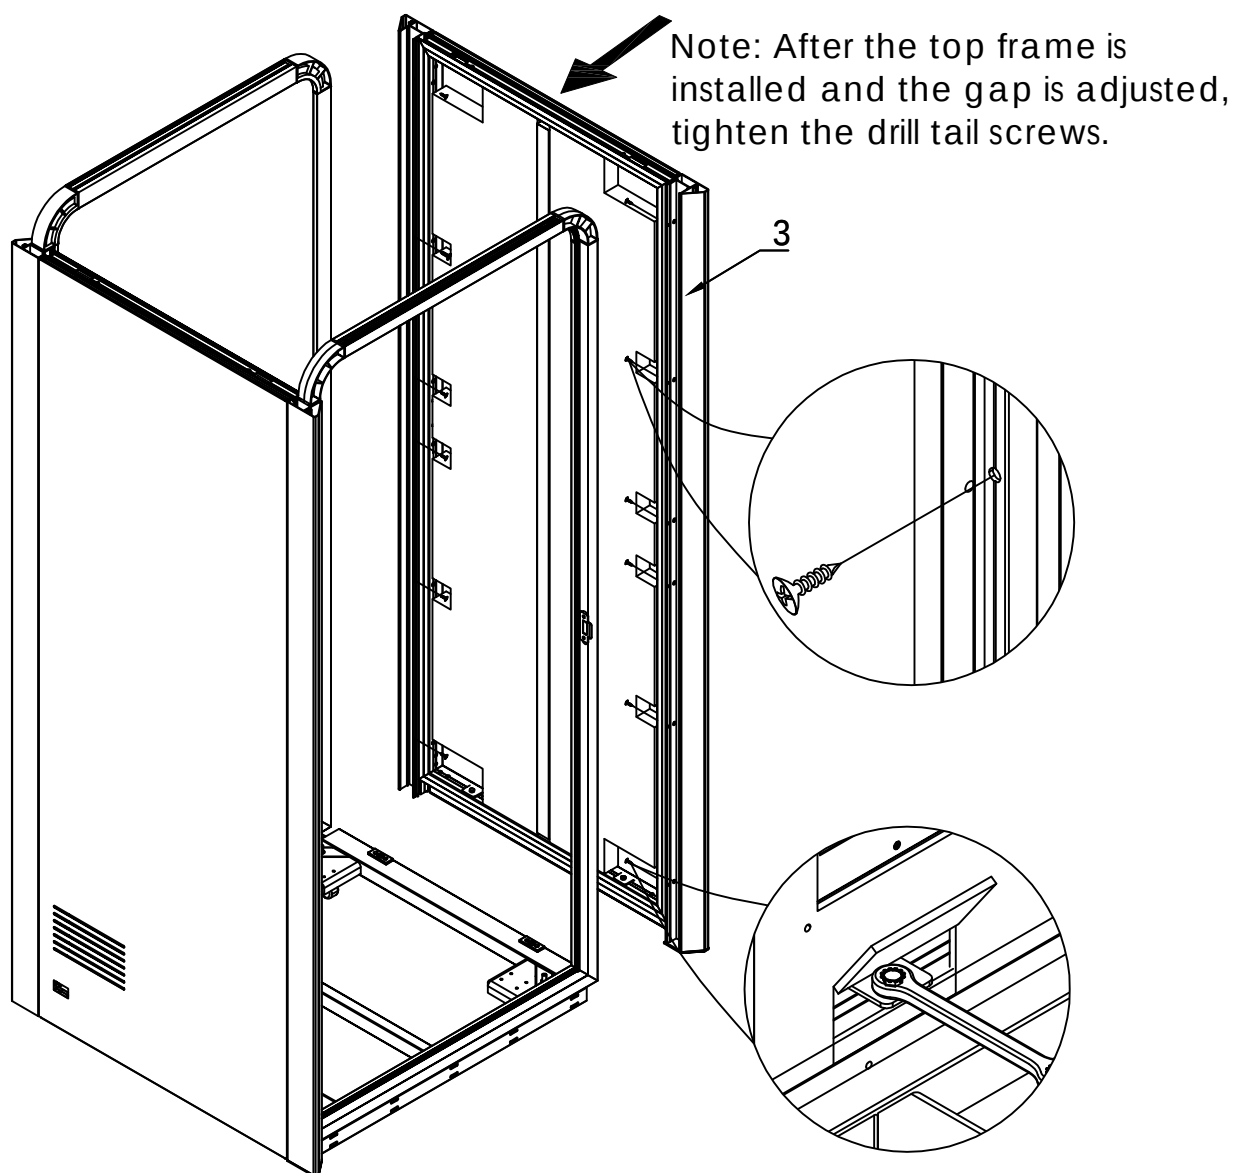

- | | | | |
|---|---|---|---|
|  |  |  |  |
| D 47*40*3
(x2) | E M8*50
(x2) | O 12#*13#
(x1) | F ST4.2*16
(x12) |


Connect all the plugs together according to the wire harness labels and names, then install the top frame.

7

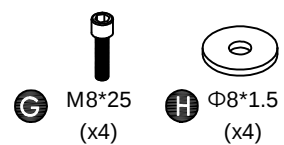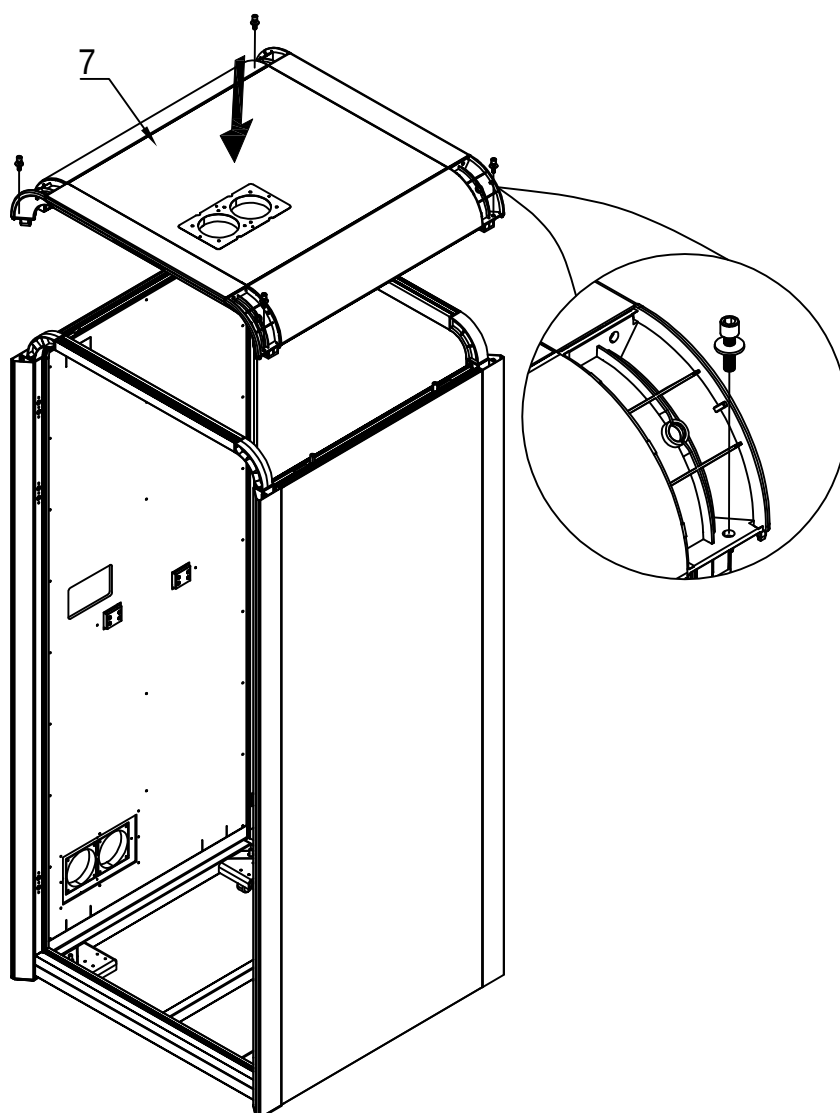

Install the arc joint outer cover.

8

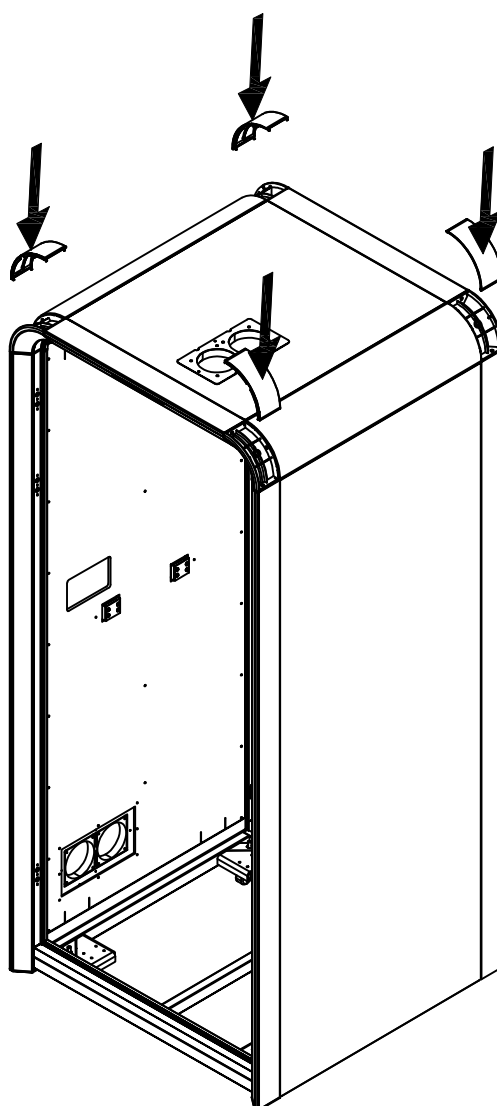



M 144*144*83.5
(x4)

Use side board fix iron sheets and screws to tighten the the top plate.

9


Note: After the top frame is installed and the gap is adjusted, tighten the drill tail screws.

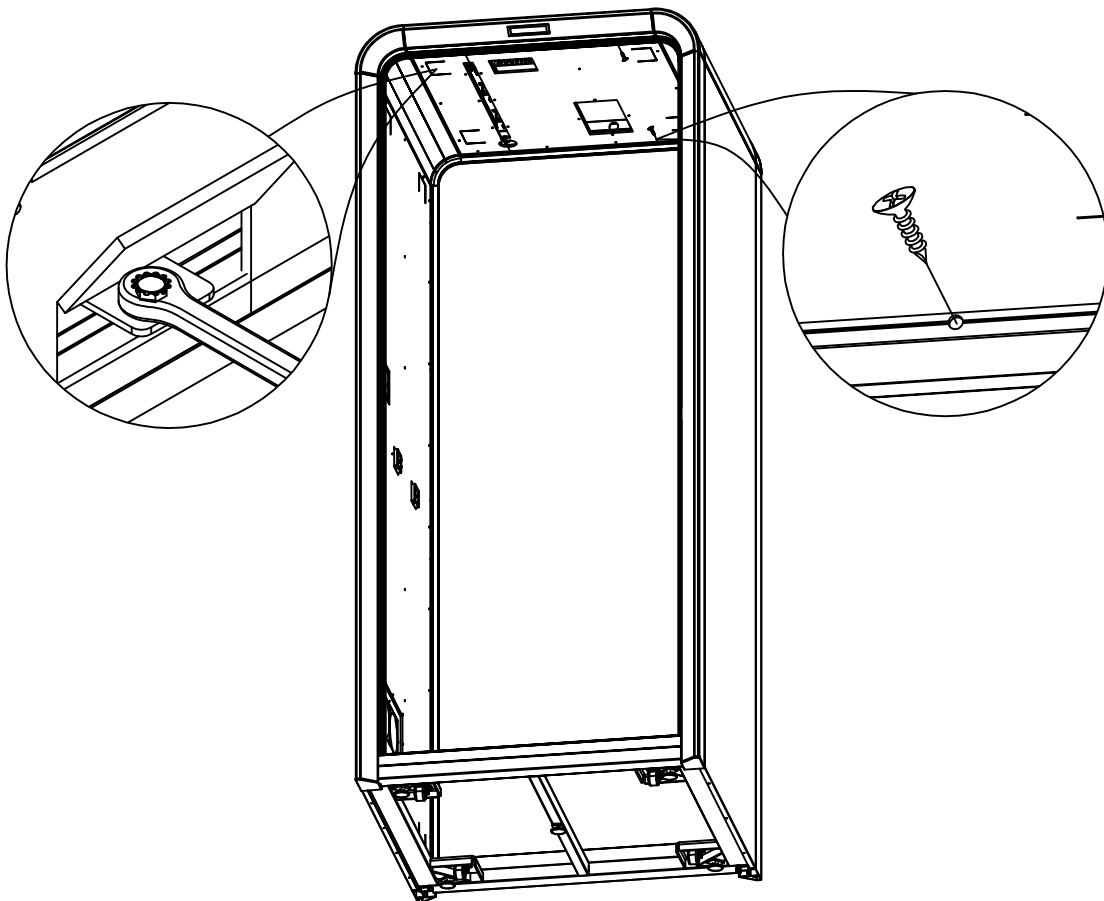

- | | | | |
|---|--|---|---|
|  |  |  |  |
| D 47*40*3
(x4) | E M8*50
(x4) | O 12#*13#
(x1) | F ST4.2*16
(x4) |

Firstly, connect the appliances and conduct an electrical test to confirm that the electrical appliances are functioning properly. After that, install the left decorative felt first, then the right decorative felt. Next, install the radar and the light strips.

10

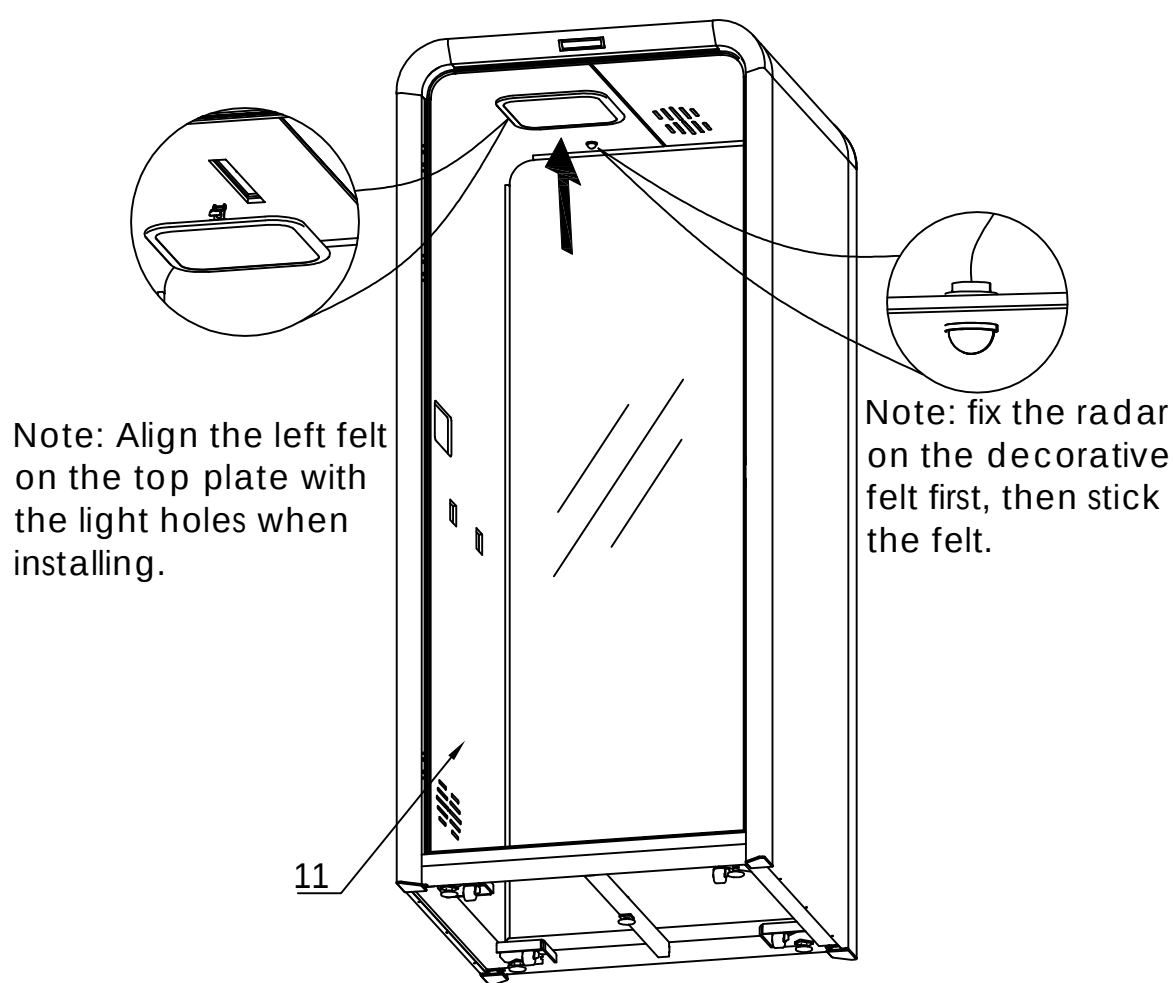



Electrical test method:

Turn on the main power supply. When the radar detects a human body, the electrical appliances work normally. Clicking the touch switch can properly turn on and off the ventilation fan and the lighting.

Note: Do not plug or unplug the appliances or connectors when the main power is on.



Install switches.

11

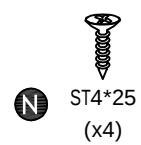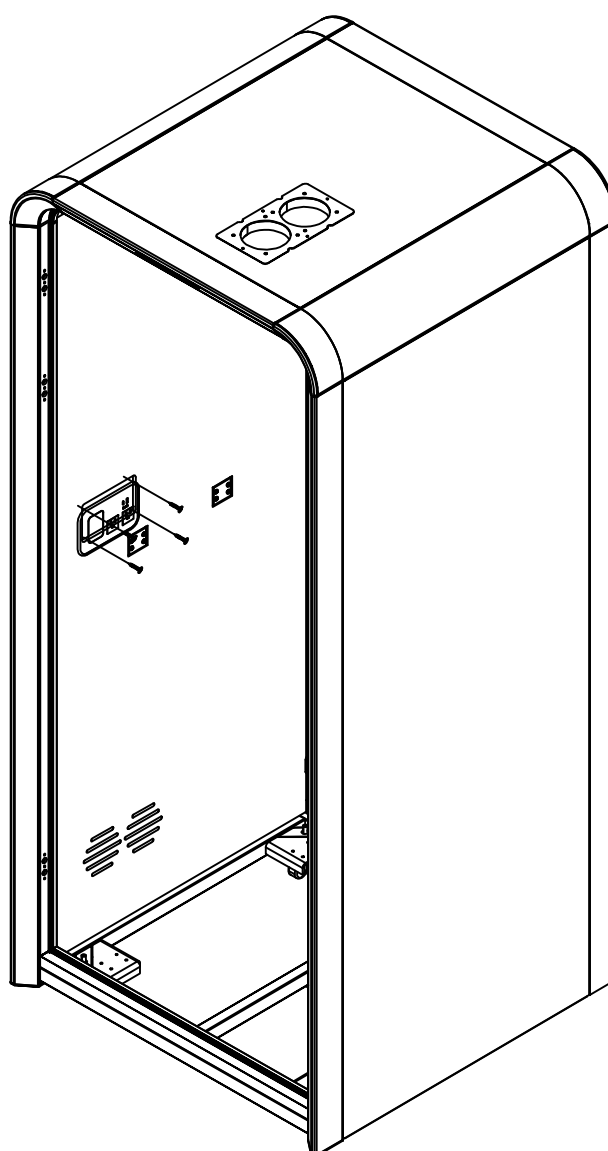


Install the cantilever.

12

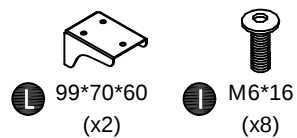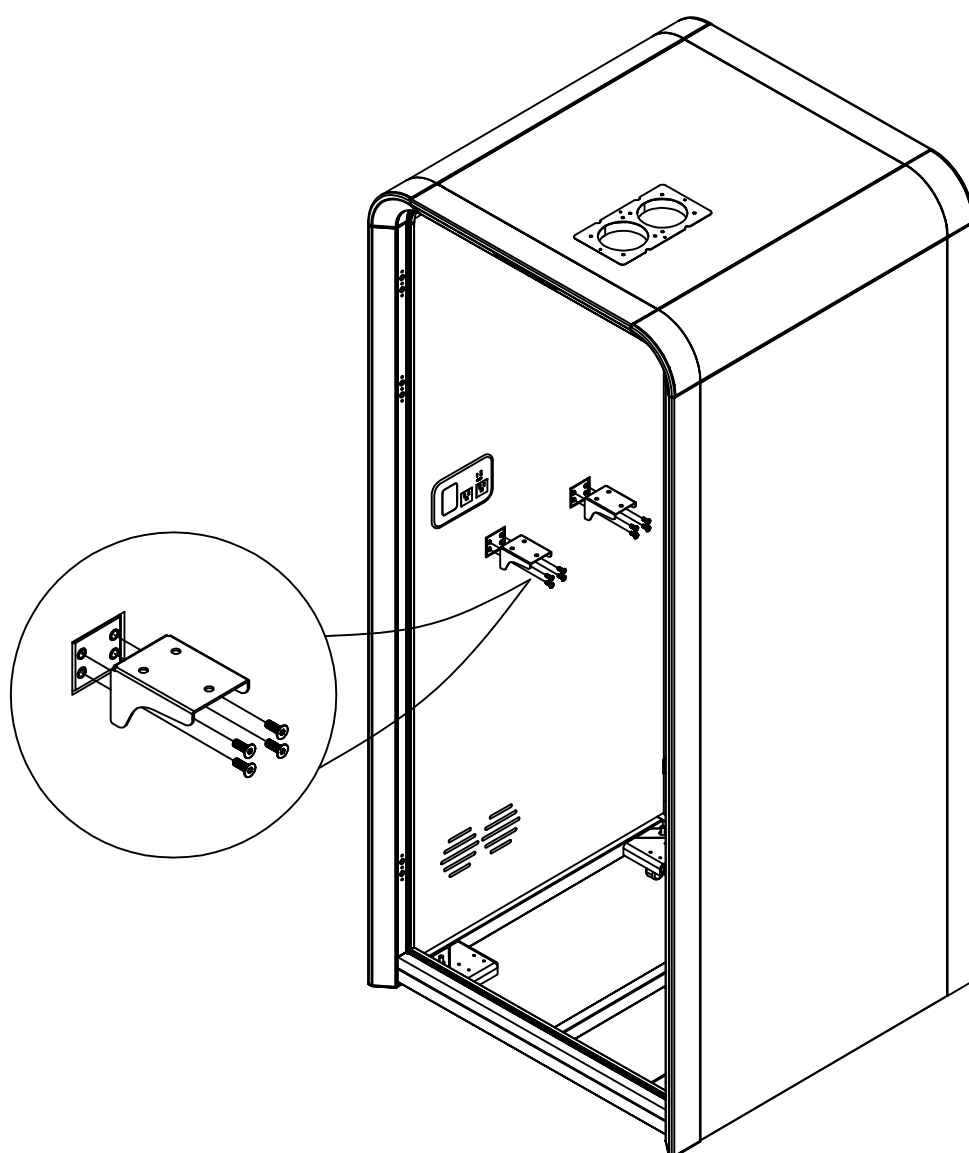

Connect the countertop to the cantilever.


13

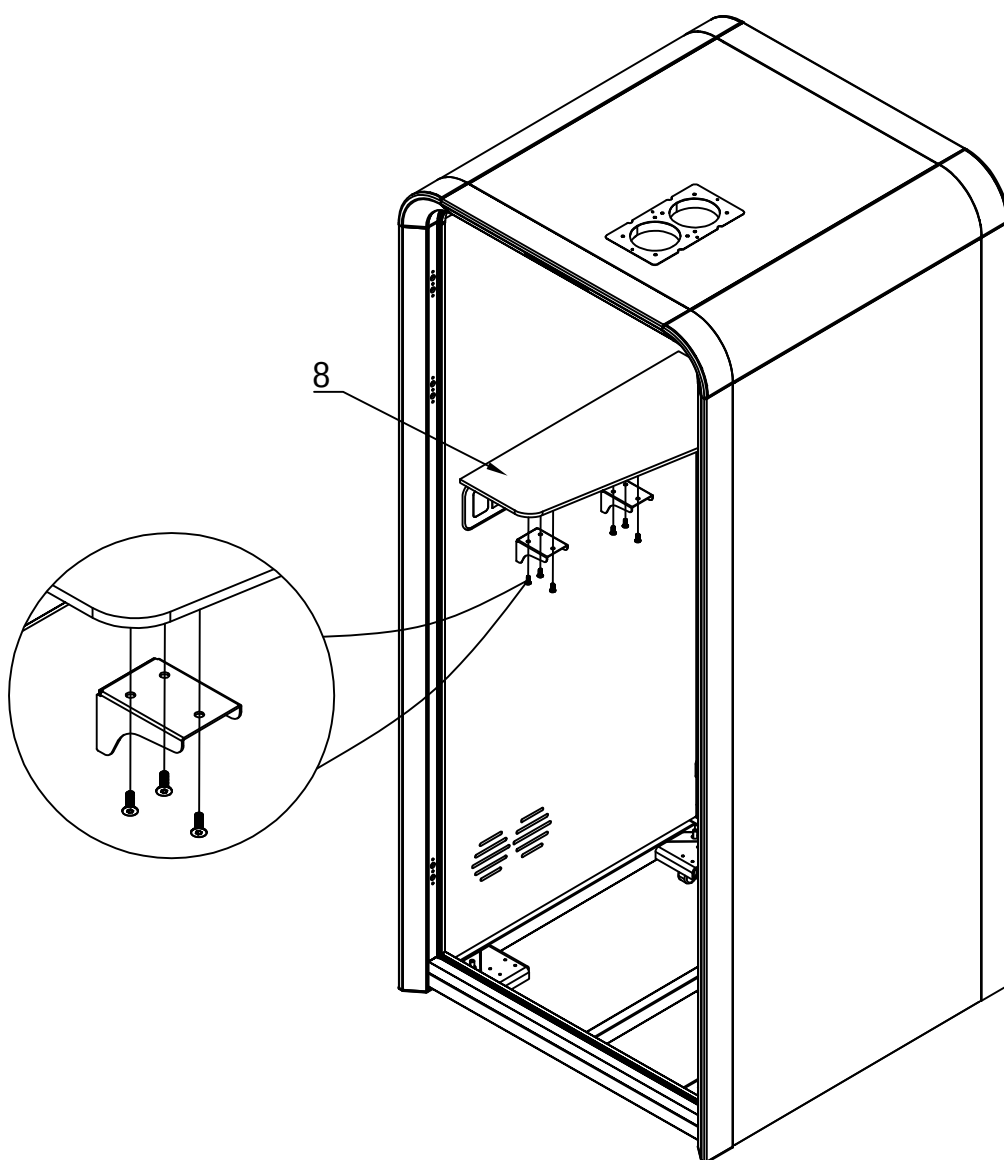


M6x16
(x6)


Place the bottom plate on the steel frame.

14

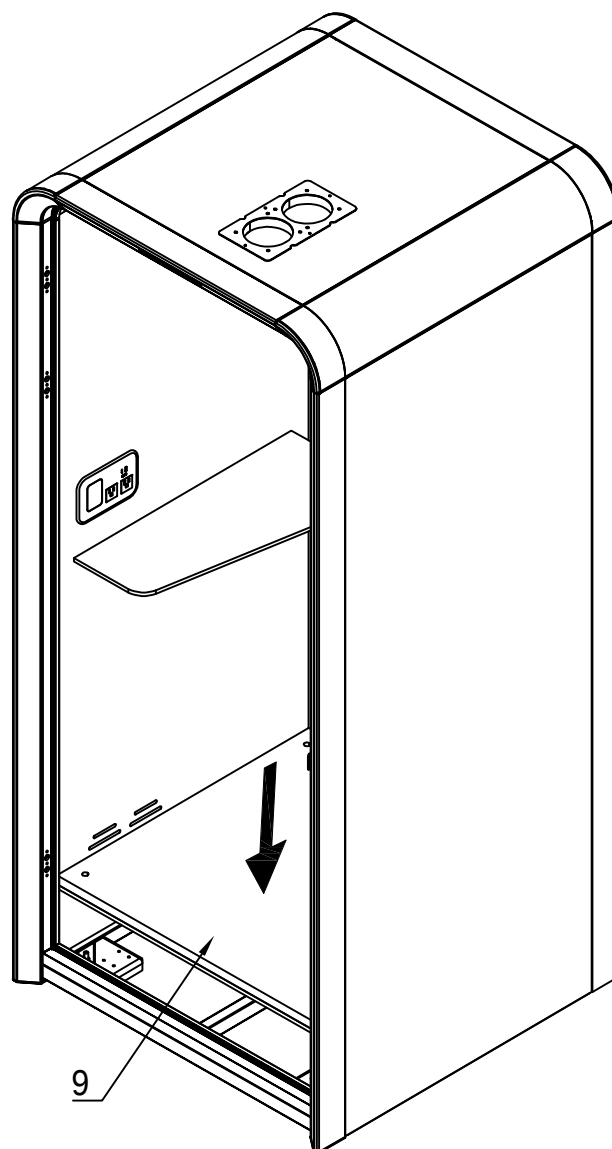


Place the carpet on the bottom plate.

15

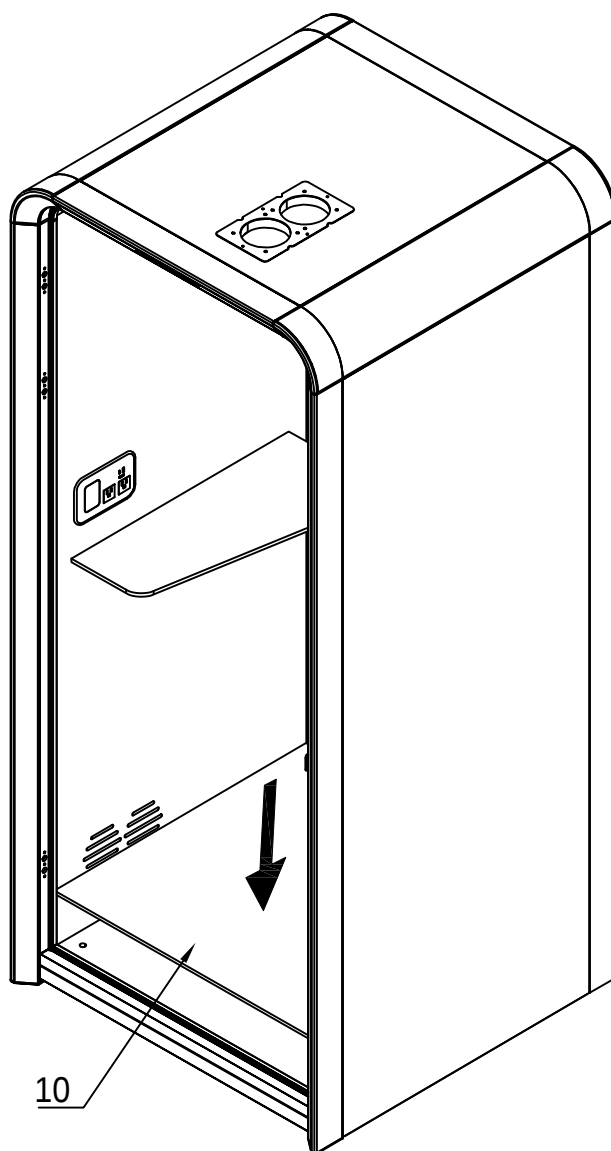

Install hinge and handle for glass door.


16

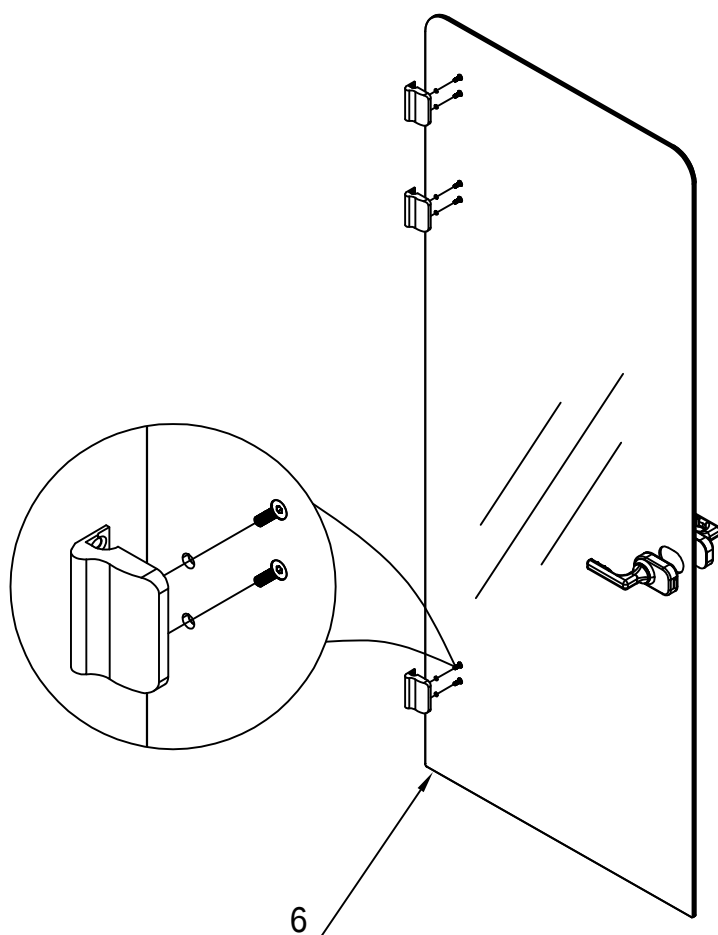

 abnormal shape (x3)  abnormal shape (x1)


Install the glass door onto the glass door frame.

17

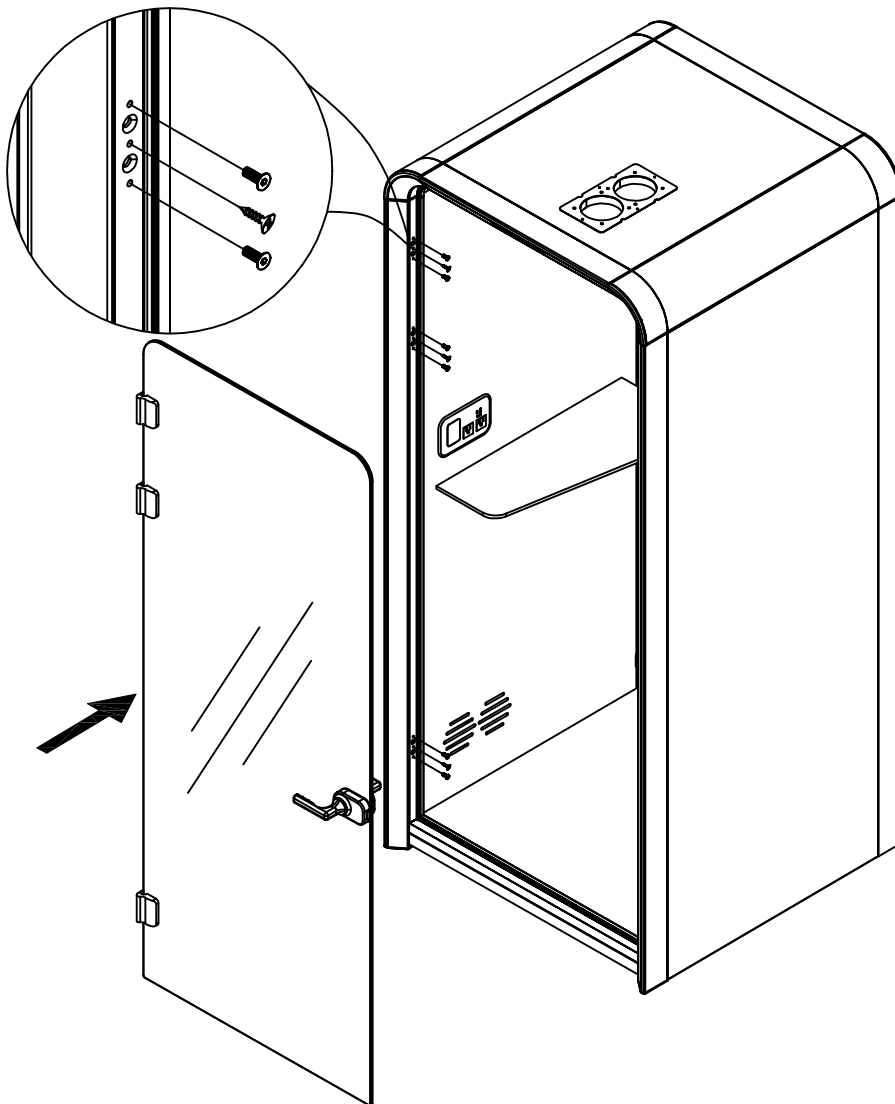


Note: Adjust the glass door to ensure it fits snugly against the door frame. If the upper right corner of the glass door does not align with the rubber strip, pull the bottom hinge of the glass door outward.


Done !

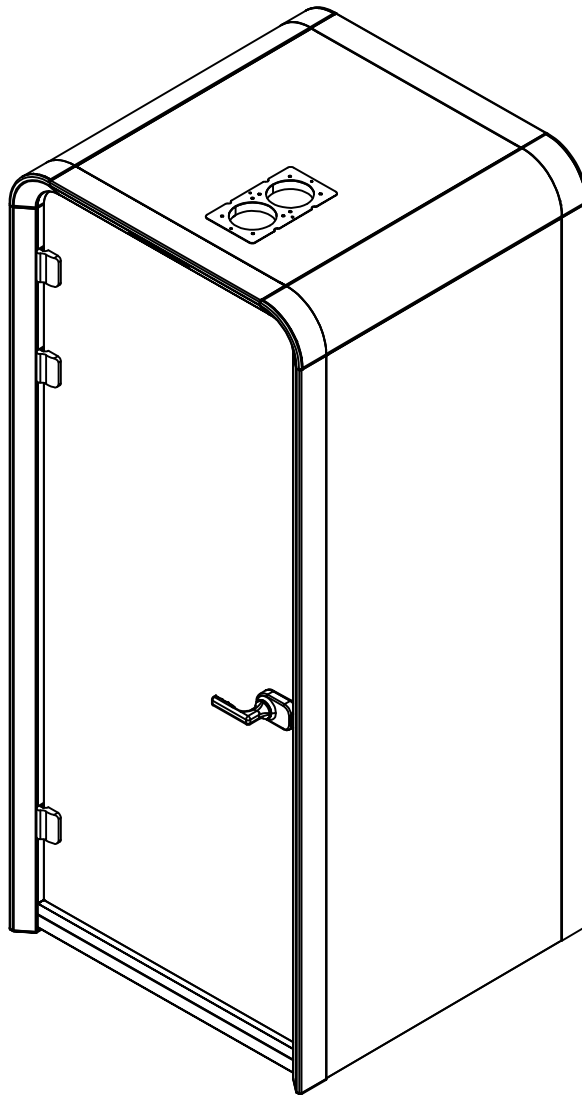

Acceptance Notes

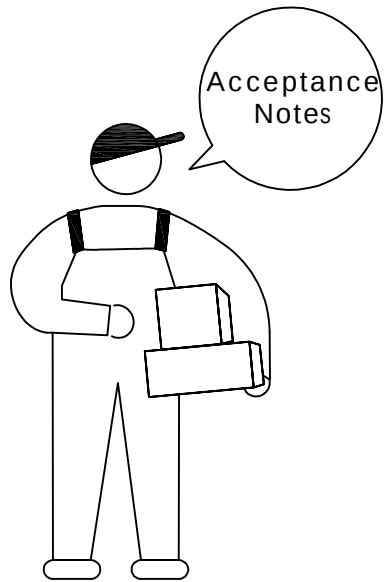


① Keep the product surface clean.

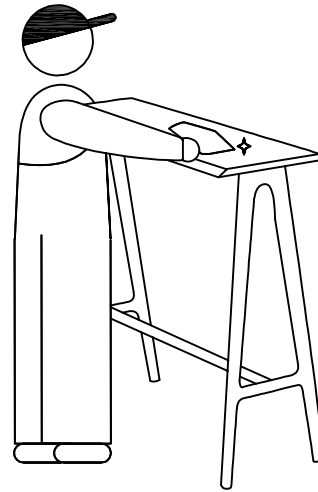

② Keep the site clean after the installation.



③ Let the customer confirm the receipt.

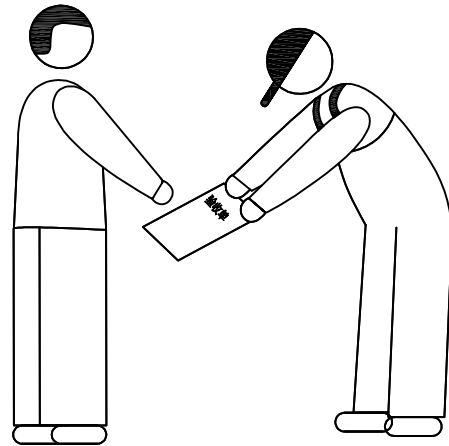



No.1666 Zhixing Road,Xiaoshan District,
Hangzhou,Zhejiang,China
sunonglobal.com



Firm's Website